VRV IV+ heat pump, without continuous heating Air Conditioning Technical Data

RXYQ-U



RXYQ8U7Y1B
RXYQ10U7Y1B
RXYQ12U7Y1B
RXYQ14U7Y1B
RXYQ16U7Y1B
RXYQ18U7Y1B
RXYQ20U7Y1B
RXYQ22U7Y1B
RXYQ24U7Y1B
RXYQ26U7Y1B
RXYQ28U7Y1B
RXYQ30U7Y1B
RXYQ32U7Y1B
RXYQ34U7Y1B
RXYQ36U7Y1B
RXYQ38U7Y1B
RXYQ40U7Y1B
RXYQ42U7Y1B
RXYQ44U7Y1B
RXYQ46U7Y1B
RXYQ48U7Y1B
RXYQ50U7Y1B
RXYQ52U7Y1B
RXYQ54U7Y1B

EEDEN22B

TABLE OF CONTENTS

RXYQ-U

1	Features	4
	RXYQ-U	4
2	Specifications	5
3	Options	15
4	Combination table	16
5	Capacity tables	19
	Capacity Table Legend	19
	Capacity Correction Factor	20
6	Dimensional drawings	33
7	Centre of gravity	34
8	Piping diagrams	36
9	Wiring diagrams	37
	Wiring Diagrams - Three Phase	37
10	External connection diagrams	40
11	Sound data	42
	Sound Power Spectrum	42
	Sound Pressure Spectrum	46
	Sound Pressure Spectrum Quiet Mode Level 1	50
	Sound Pressure Spectrum Quiet Mode Level 2	52
	Sound Pressure Spectrum Quiet Mode Level 3	54
12	Installation	56
	Installation Method	56
	Fixation and Foundation of Units	57
	Refrigerant Pipe Selection	58
13	Operation range	61
14	Appropriate Indoors	62

1 Features

1 - 1 RXYQ-U

- By choosing this product with LOOP by Daikin you support the reuse of refrigerant
- Covers all thermal needs of a building via a single point of contact: accurate temperature control, ventilation, hot water, air handling units and Biddle air curtains
- Wide range of indoor units: possibility to combine VRV with stylish indoor units (Daikin Emura, Perfera)
- Incorporates VRV IV standards & technologies: Variable Refrigerant Temperature, VRV configurator, 7 segment display and full inverter compressors, 4-side heat exchanger, refrigerant cooled PCB, new DC fan motor, ...
- Customize your VRV for best seasonal efficiency & comfort with the weather dependant Variable Refrigerant Temperature function. Increased seasonal efficiency with up to 28%. No more cold draft by supply of high outblow temperatures
- Free combination of outdoor units to meet installation space or efficiency requirements
- Fits any building as also indoor installation is possible as a result of high external static pressure of up to 78.4 Pa. Indoor installation leads to less piping length, lower installation costs, increased efficiency and better visual aesthetics
- Simplified installation & guaranteed optimal efficiency with automatic charging & testing
- Easy compliance with F-gas regulation thanks to automated refrigerant containment check
- Wide piping flexibility: 30m indoor height difference, maximum piping length: 190m, total piping length: 1,000m
- The ability to control each conditioned zone individually keeps VRV system running costs to an absolute minimum
- Spread your installation cost by phased installation
- Keep your system in top condition via the Daikin Cloud Service: 24/7 monitoring for maximum efficiency, extented lifetime and immediate service support thanks to failure prediction
- Available as heating only by irreversible field setting



Inverter

2 Specifications

2 - 1 Specifications

Technical Specifications					RXYQ8U	RXYQ10U	RXYQ12U	RXYQ14U	RXYQ16U	RXYQ18U	RXYQ20U
Recommended combination					4 x FXFQ50AVEB	4 x FXFQ63AVEB	6 x FXFQ50AVEB	1 x FXFQ50AVEB + 5 x FXFQ63AVEB	4 x FXFQ63AVEB + 2 x FXFQ80AVEB	3 x FXFQ50AVEB + 5 x FXFQ63AVEB	2 x FXFQ50AVEB + 6 x FXFQ63AVEB
Recommended combination 2					4 x FXSQ50A2VEB	4 x FXSQ63A2VEB	6 x FXSQ50A2VEB	1 x FXSQ50A2VEB + 5 x FXSQ63A2VEB	4 x FXSQ63A2VEB + 2 x FXSQ80A2VEB	3 x FXSQ50A2VEB + 5 x FXSQ63A2VEB	2 x FXSQ50A2VEB + 6 x FXSQ63A2VEB
Recommended combination 3					4 x FXMQ50P7VEB	4 x FXMQ63P7VEB	6 x FXMQ50P7VEB	1 x FXMQ50P7VEB + 5 x FXMQ63P7VEB	4 x FXMQ63P7VEB + 2 x FXMQ80P7VEB	3 x FXMQ50P7VEB + 5 x FXMQ63P7VEB	2 x FXMQ50P7VEB + 6 x FXMQ63P7VEB
Cooling capacity	Prated,c			kW	22.4 (1)	28.0 (1)	33.5 (1)	40.0 (1)	45.0 (1)	50.4 (1)	52.0 (1)
Heating capacity	Nom.	6°CWB		kW	22.4 (2)	28.0 (2)	33.5 (2)	40.0 (2)	45.0 (2)	50.4 (2)	56.0 (2)
	Prated,h			kW	22.4 (2)	28.0 (2)	33.5 (2)	40.0 (2)	45.0 (2)	50.4 (2)	56.0 (2)
	Max.	6°CWB		kW	25.0 (2)	31.5 (2)	37.5 (2)	45.0 (2)	50.0 (2)	56.5 (2)	63.0 (2)
Power input - 50Hz	Heating	Nom.	6°CWB	kW	5.40 (2)	7.58 (2)	9.65 (2)	10.69 (2)	12.54 (2)	14.22 (2)	17.47 (2)
COP at nom. capacity	6°CWB			kW/kW	4.15 (2)	3.69 (2)	3.47 (2)	3.74 (2)	3.59 (2)	3.54 (2)	3.20 (2)
ESEER - Automatic					7.53	7.20	6.96	6.83	6.50	6.38	5.67
ESEER - Standard					6.37	5.67	5.50	5.31	5.05	4.97	4.42
SCOP					4.3		4.1	4.0		4.2	4.0
SCOP recommended combination 2					4.2	4.3	4.1	4.0	4.1	4.2	4.0
SCOP recommended combination 3					4.2	4.1		4.0		4.1	3.9
SEER					7.6	6.8	6.3		6.0		5.9
SEER recommended combination 2					6.9	6.8	5.9	6.3	5.9	6.0	5.9
SEER recommended combination 3					7.5	6.8	6.2		5.8	6.0	5.9
ηs,c				%	302.4	267.6	247.8	250.7	236.5	238.3	233.7
ηs,c recommended combination 2					273.6	270.5	233.5	250.0	234.2	236.8	233.9
ηs,c recommended combination 3					295.2	267.1	246.3	246.7	230.4	238.2	233.1
ηs,h				%	167.9	168.2	161.4	155.4	157.8	163.1	156.6
ηs,h recommended combination 2					165.4	170.6	161.3	157.2	159.5	164.8	158.2
ηs,h recommended combination 3					165.6	162.0	160.6	155.7	156.8	159.6	153.4
Space cooling	A Condition (35°C - 27/19)	EERd			3.0	2.3	2.4	2.6	2.1	1.9	
		Pdc		kW	22.4	28.0	33.5	40.0	45.0	50.4	52.0
	B Condition (30°C - 27/19)	EERd			5.2	4.7	4.3	4.1	3.9	3.8	3.7
		Pdc		kW	16.5	20.6	24.7	29.5	33.2	37.1	38.3
	C Condition (25°C - 27/19)	EERd			9.5	8.3	7.7	7.8	7.7	7.5	7.3
		Pdc		kW	10.6	13.3	15.9	18.9	21.3	23.9	24.6
	D Condition (20°C - 27/19)	EERd			18.8	17.0	13.9	14.3	14.2	18.3	
		Pdc		kW	8.0	9.3	9.4	8.4	9.5	11.5	
Space cooling recommended combination 2	A Condition (35°C - 27/19)	EERd			2.6	2.4		2.6	2.1	1.9	
		Pdc		kW	22.4	28.0	33.5	40.0	45.0	50.4	52.0
	B Condition (30°C - 27/19)	EERd			4.9	4.7	4.0	4.1	3.8	3.7	3.6
		Pdc		kW	16.5	20.6	24.7	29.5	33.2	37.1	38.3
	C Condition (25°C - 27/19)	EERd			8.8	8.5	7.1	7.9	7.6	7.5	7.3
Space cooling recommended combination 2	C Condition (25°C - 27/19)	Pdc		kW	10.6	13.3	15.9	18.9	21.3	23.9	24.6
	D Condition (20°C - 27/19)	EERd			15.1	17.2	13.1	14.0		18.1	18.9
		Pdc		kW	8.8	9.3	9.1	8.4	9.5	11.4	10.9
Space cooling recommended combination 3	A Condition (35°C - 27/19)	EERd			3.0	2.3	2.4	2.6	2.1	1.9	
		Pdc		kW	22.4	28.0	33.5	40.0	45.0	50.4	52.0
	B Condition (30°C - 27/19)	EERd			5.1	4.7	4.2	4.0	3.7		3.6
		Pdc		kW	16.5	20.6	24.7	29.5	33.2	37.1	38.3
	C Condition (25°C - 27/19)	EERd			9.6	8.4	7.7		7.4	7.6	7.3
		Pdc		kW	10.6	13.3	15.9	19.0	21.3	23.9	24.6
	D Condition (20°C - 27/19)	EERd			16.0	16.9	13.7	14.0	14.1	18.3	
		Pdc		kW	9.1	9.3	9.4	8.4	9.5	11.6	

2 Specifications

2 - 1 Specifications

Technical Specifications				RXYQ8U	RXYQ10U	RXYQ12U	RXYQ14U	RXYQ16U	RXYQ18U	RXYQ20U
Space heating (Average climate)	TBivalent	COPd (declared COP)		2.5	2.4	2.0	2.3	2.2	1.9	1.8
		Pdh (declared heating cap)	kW	13.7	16.0	18.4	20.6	23.2	27.9	31.0
		Tbiv (bivalent temperature)	°C	-10						
	TOL	COPd (declared COP)		2.5	2.4	2.0	2.3	2.2	1.9	1.8
		Pdh (declared heating cap)	kW	13.7	16.0	18.4	20.6	23.2	27.9	31.0
		Tol (temperature operating limit)	°C	-10						
	A Condition (-7°C)	COPd (declared COP)		2.7	2.6	2.4	2.6		2.4	2.1
		Pdh (declared heating cap)	kW	12.1	14.2	16.3	18.2	20.5	24.7	27.4
	B Condition (2°C)	COPd (declared COP)		3.9			3.5		3.7	3.6
		Pdh (declared heating cap)	kW	7.4	8.6	9.9	11.1	12.5	15.0	16.7
	C Condition (7°C)	COPd (declared COP)		6.3	6.4	6.1		6.3	6.7	6.5
		Pdh (declared heating cap)	kW	5.0	5.5	6.4	7.1	8.0	9.7	10.7
	D Condition (12°C)	COPd (declared COP)		7.9	8.2	7.9	8.5	8.6	9.0	9.1
		Pdh (declared heating cap)	kW	5.9		6.3	4.9		7.1	
Space heating (Average climate) recommended combination 2	A Condition (-7°C)	COPd (declared COP)		2.7		2.4	2.6		2.4	2.2
		Pdh (declared heating cap)	kW	12.1	14.2	16.3	18.2	20.5	24.7	27.4
	B Condition (2°C)	COPd (declared COP)		3.9	4.0	3.9	3.5		3.8	3.7
		Pdh (declared heating cap)	kW	7.4	8.6	9.9	11.1	12.2	15.0	16.7
	C Condition (7°C)	COPd (declared COP)		6.3	6.5	6.1		6.3	6.8	6.5
		Pdh (declared heating cap)	kW	5.0	5.5	6.4	7.1	8.0	9.7	10.7
	D Condition (12°C)	COPd (declared COP)		7.8	8.3	7.9	8.6	8.7	9.1	9.2
		Pdh (declared heating cap)	kW	5.9	6.0	6.4	4.9	5.0	7.2	
	TBivalent	COPd (declared COP)		2.4		1.9	2.3	2.2	1.9	1.8
		Pdh (declared heating cap)	kW	13.7	16.0	18.4	20.6	23.2	27.9	31.0
		Tbiv (bivalent temperature)	°C	-10						
	TOL	COPd (declared COP)		2.4		1.9	2.3	2.2	1.9	1.8
Space heating (Average climate) recommended combination 2	TOL	Pdh (declared heating cap)	kW	13.7	16.0	18.4	20.6	23.2	27.9	31.0
		Tol (temperature operating limit)	°C	-10						
Space heating (Average climate) recommended combination 3	A Condition (-7°C)	COPd (declared COP)		2.7	2.6	2.4	2.6		2.4	2.1
		Pdh (declared heating cap)	kW	12.1	14.2	16.3	18.2	20.5	24.7	27.4
	B Condition (2°C)	COPd (declared COP)		3.9	3.7	3.9	3.5		3.7	3.6
		Pdh (declared heating cap)	kW	7.4	8.6	9.9	11.1	12.5	15.0	16.7
	C Condition (7°C)	COPd (declared COP)		6.2	6.4	6.0	6.1	6.2	6.5	6.3
		Pdh (declared heating cap)	kW	4.9	5.5	6.4	7.1	8.0	9.7	10.7
	D Condition (12°C)	COPd (declared COP)		7.8	8.1	7.8	8.5	8.6	8.7	
		Pdh (declared heating cap)	kW	5.8	5.9	6.2	4.9		6.9	
	TBivalent	COPd (declared COP)		2.5	2.4	2.0	2.3	2.2	1.9	1.8
		Pdh (declared heating cap)	kW	13.7	16.0	18.4	20.6	23.2	27.9	31.0
		Tbiv (bivalent temperature)	°C	-10						
	TOL	COPd (declared COP)		2.5	2.4	2.0	2.3	2.2	1.9	1.8
		Pdh (declared heating cap)	kW	13.7	16.0	18.4	20.6	23.2	27.9	31.0
		Tol (temperature operating limit)	°C	-10						
Capacity range			HP	8	10	12	14	16	18	20
PED	Category			Category II						
	Most critical part	Name		Accumulator						
		Ps*V	Bar*l	325			415		493	
Maximum number of connectable indoor units				64 (3)						
Indoor index connection	Min.			100.0	125.0	150.0	175.0	200.0	225.0	250.0
	Max.			260.0	325.0	390.0	455.0	520.0	585.0	650.0
Dimensions	Unit	Height	mm	1,685						
		Width	mm	930			1,240			
		Depth	mm	765						
	Packed unit	Height	mm	1,820						
		Width	mm	995			1,305			
		Depth	mm	860						
Weight	Unit		kg	198			275		308	
	Packed unit		kg	211			291		324	
Packing	Material			Carton						
	Weight		kg	1.8			2.2			
Packing 2	Material			Wood						
	Weight		kg	11.0			14.0			

2 Specifications

2 - 1 Specifications

Technical Specifications					RXYQ8U	RXYQ10U	RXYQ12U	RXYQ14U	RXYQ16U	RXYQ18U	RXYQ20U
Packing 3	Material				Plastic						
	Weight			kg	0.5			0.6			
Casing	Colour				Daikin White						
	Material				Painted galvanized steel plate						
Heat exchanger	Type				Cross fin coil						
	Indoor side				Air						
	Outdoor side				Air						
	Air flow rate	Cooling	Rated	m^3/h	9,720	10,500	11,100	13,380	15,600	15,060	15,660
		Heating	Rated	m^3/h	9,720	10,500	11,100	13,380	15,600	15,060	15,660
Fan	Quantity				1			2			
	External static pressure	Max.		Pa	78						
Fan motor	Quantity				1			2			
	Type				DC motor						
	Output			W	550			750			
Compressor	Quantity				1			2			
	Type				Hermetically sealed scroll compressor						
	Crankcase heater			W	33						
Operation range	Cooling	Min.		°CDB	-5.0						
		Max.		°CDB	43.0						
	Heating	Min.		°CWB	-20.0						
		Max.		°CWB	15.5						
Sound power level	Cooling	Nom.		dBA	78.0 (4)	79.1 (4)	83.4 (4)	80.9 (4)	85.6 (4)	83.8 (4)	87.9 (4)
	Heating	Prated,h		dBA	79.6 (4)	80.9 (4)	83.5 (4)	83.1 (4)	86.5 (4)	85.3 (4)	89.8 (4)
Sound pressure level	Cooling	Nom.		dBA	57.0 (5)		61.0 (5)	60.0 (5)	63.0 (5)	62.0 (5)	65.0 (5)
Refrigerant	Type				R-410A						
	GWP				2,087.5						
	Charge			TCO2Eq	12.3	12.5	13.2	21.5	23.6	24.4	24.6
	Charge			kg	5.9	6.0	6.3	10.3	11.3	11.7	11.8
Refrigerant oil	Type				Synthetic (ether) oil FVC68D						
Piping connections	Liquid	Type			Braze connection						
		OD		mm	9.52		12.7			15.9	
	Gas	Type			Braze connection						
		OD		mm	19.1	22.2	28.6				
	Total piping length	System	Actual	m	1,000 (6)						
Defrost method					Reversed cycle						
Capacity control	Method				Inverter controlled						
Indication if the heater is equipped with a supplementary heater					no						
Supplementary heater	Back-up capacity	Heating	elbu	kW	0.0						
Power consumption in other than active mode	Crankcase heater mode	Cooling	PCK	kW	0.000						
Power consumption in other than active mode	Crankcase heater mode	Heating	PCK	kW	0.052			0.077		0.089	
	Off mode	Cooling	POFF	kW	0.041			0.074		0.075	
		Heating	POFF	kW	0.052			0.077		0.089	
	Standby mode	Cooling	PSB	kW	0.041			0.074		0.075	
		Heating	PSB	kW	0.052			0.077		0.089	
	Thermostat-off mode	Cooling	PTO	kW	0.005			0.010			
		Heating	PTO	kW	0.056			0.097		0.098	
Cooling	Cdc (Degradation cooling)				0.25						
Heating	Cdh (Degradation heating)				0.25						
Safety devices	Item	01			High pressure switch						
		02			Fan driver overload protector						
		03			Inverter overload protector						
		04			PC board fuse						
		05			Leakage current detector						

Standard accessories: Installation manual;Quantity: 1;

Standard accessories: Operation manual;Quantity: 1;

Standard accessories: Connection pipes;Quantity: 1;

2 Specifications

2 - 1 Specifications

Electrical Specifications				RXYQ8U	RXYQ10U	RXYQ12U	RXYQ14U	RXYQ16U	RXYQ18U	RXYQ20U
Power supply	Name			Y1						
	Phase			3N~						
	Frequency		Hz	50						
	Voltage		V	380-415						
Power supply intake				Both indoor and outdoor unit						
Voltage range	Min.		%	-10						
	Max.		%	10						
Current	Nominal running current (RLA)	Cooling	A	7.2 (7)	10.2 (7)	12.7 (7)	15.4 (7)	18.0 (7)	20.8 (7)	26.9 (7)
Current - 50Hz	Nominal running current (RLA)	Combination A Cooling		-						
		Combination B Cooling		-						
	Starting current (MSC) - remark			See note 8						
	Zmax	List		No requirements						
	Minimum Ssc value		kVa	4,050 (8)	5,535 (8)	6,038 (8)	6,793 (8)	7,547 (8)	8,805 (8)	9,812 (8)
	Minimum circuit amps (MCA)		A	16.1 (9)	22.0 (9)	24.0 (9)	27.0 (9)	31.0 (9)	35.0 (9)	39.0 (9)
	Maximum fuse amps (MFA)		A	20 (10)	25 (10)	32 (10)		40 (10)		50 (10)
	Full load amps (FLA)	Total	A	1.2 (11)	1.3 (11)	1.5 (11)	1.8 (11)	2.6 (11)		
Power Performance	Power factor	Combination B 35°C ISO - Full load		-						
		46°C ISO - Full load		-						
Wiring connections - 50Hz	For power supply	Quantity		5G						
	For connection with indoor	Quantity		2						
		Remark		F1,F2						

(1)Cooling: indoor temp. 27°CDB, 19°CWB; outdoor temp. 35°CDB; equivalent piping length: 7.5m; level difference: 0m |
(2)Heating: indoor temp. 20°CDB; outdoor temp. 7°CDB, 6°CWB; equivalent refrigerant piping: 7.5m; level difference: 0m |
(3)Actual number of connectable indoor units depends on the indoor unit type (VRV indoor, Hydrobox, RA indoor, etc.) and the connection ratio restriction for the system (50% <= CR <= 130%) |
(4)Sound power level is an absolute value that a sound source generates. |
(5)Sound pressure level is a relative value, depending on the distance and acoustic environment. For more details, please refer to the sound level drawings. |
(6)Refer to refrigerant pipe selection or installation manual |
(7)RLA is based on following conditions: indoor temp. 27°CDB, 19°CWB; outdoor temp. 35°CDB |
(8)In accordance with EN/IEC 61000-3-12, it may be necessary to consult the distribution network operator to ensure that the equipment is connected only to a supply wih Ssc ≥ minimum Ssc value |
(9)MCA must be used to select the correct field wiring size. The MCA can be regarded as the maximum running current. |
(10)MFA is used to select the circuit breaker and the ground fault circuit interrupter (earth leakage circuit breaker). |
(11)FLA means the nominal running current of the fan |
MSC means the maximum current during start up of the compressor. This unit uses only inverter compressors. Starting current is always ≤ max. running current. |
Maximum allowable voltage range variation between phases is 2%. |
Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits. |
The AUTOMATIC ESEER value corresponds with normal VRV4 Heat Pump operation, taking into account advanced energy saving operation funcitonality (variable refrigerant temperature) |
The STANDARD ESEER value corresponds with normal VRV4 Heat Pump operation, not taking into account advanced energy saving operation functionality |
Sound values are measured in a semi-anechoic room. |
Soundpressure system [dBA] = 10*log[10^(A/10)+10^(B/10)+10^(C/10)] , with Unit A = A dBA, Unit B = B dBA, Unit C = C dBA |
EN/IEC 61000-3-12: European/international technical standard setting the limits for harmonic currents produced by equipment connected to public low-voltage system with input current > 16A and ≤ 75A per phase |
Ssc: Short-circuit power |
For detailed contents of standard accessories, see installation/operation manual |
Multi combination (22~54HP) data is corresponding with the standard multi combination

Technical specifications System			RXYQ22U	RXYQ24U	RXYQ26U	RXYQ28U	RXYQ30U	RXYQ32U	RXYQ34U	RXYQ36U	RXYQ38U	RXYQ40U
System	Outdoor unit module 1		RXYQ10U	RXYQ8U		RXYQ12U			RXYQ16U		RXYQ8U	RXYQ10U
	Outdoor unit module 2		RXYQ12U	RXYQ16U	RXYQ14U	RXYQ16U	RXYQ18U	RXYQ16U	RXYQ18U	RXYQ20U	RXYQ10U	RXYQ12U
	Outdoor unit module 3		-								RXYQ20U	RXYQ18U
Recommended combination			6 x FXFQ50AVEB + 4 x FXFQ63AVEB	4 x FXFQ50AVEB + 4 x FXFQ63AVEB + 2 x FXFQ80AVEB	7 x FXFQ50AVEB + 5 x FXFQ63AVEB	6 x FXFQ50AVEB + 4 x FXFQ63AVEB + 2 x FXFQ80AVEB	9 x FXFQ50AVEB + 5 x FXFQ63AVEB	8 x FXFQ63AVEB + 4 x FXFQ80AVEB	3 x FXFQ50AVEB + 9 x FXFQ63AVEB + 2 x FXFQ80AVEB	2 x FXFQ50AVEB + 10 x FXFQ63AVEB + 2 x FXFQ80AVEB	6 x FXFQ50AVEB + 10 x FXFQ63AVEB	9 x FXFQ50AVEB + 9 x FXFQ63AVEB
Recommended combination 2			6 x FXSQ50A2VEB + 4 x FXSQ63A2VEB	4 x FXSQ50A2VEB + 4 x FXSQ63A2VEB + 2 x FXSQ80A2VEB	7 x FXSQ50A2VEB + 5 x FXSQ63A2VEB	6 x FXSQ50A2VEB + 4 x FXSQ63A2VEB + 2 x FXSQ80A2VEB	9 x FXSQ50A2VEB + 5 x FXSQ63A2VEB	8 x FXSQ63A2VEB + 4 x FXSQ80A2VEB	3 x FXSQ50A2VEB + 9 x FXSQ63A2VEB + 2 x FXSQ80A2VEB	2 x FXSQ50A2VEB + 10 x FXSQ63A2VEB + 2 x FXSQ80A2VEB	6 x FXSQ50A2VEB + 10 x FXSQ63A2VEB	9 x FXSQ50A2VEB + 9 x FXSQ63A2VEB
Recommended combination 3			6 x FXMQ50P7VEB + 4 x FXMQ63P7VEB	4 x FXMQ50P7VEB + 4 x FXMQ63P7VEB + 2 x FXMQ80P7VEB	7 x FXMQ50P7VEB + 5 x FXMQ63P7VEB	6 x FXMQ50P7VEB + 4 x FXMQ63P7VEB + 2 x FXMQ80P7VEB	9 x FXMQ50P7VEB + 5 x FXMQ63P7VEB	8 x FXMQ63P7VEB + 4 x FXMQ80P7VEB	3 x FXMQ50P7VEB + 9 x FXMQ63P7VEB + 2 x FXMQ80P7VEB	2 x FXMQ50P7VEB + 10 x FXMQ63P7VEB + 2 x FXMQ80P7VEB	6 x FXMQ50P7VEB + 10 x FXMQ63P7VEB	9 x FXMQ50P7VEB + 9 x FXMQ63P7VEB
Cooling capacity	Prated,c	kW	61.5 (1)	67.4 (1)	73.5 (1)	78.5 (1)	83.9 (1)	90.0 (1)	95.4 (1)	97.0 (1)	102.4 (1)	111.9 (1)

2 Specifications

2 - 1 Specifications

Technical specifications System					RXYQ22U	RXYQ24U	RXYQ26U	RXYQ28U	RXYQ30U	RXYQ32U	RXYQ34U	RXYQ36U	RXYQ38U	RXYQ40U
Heating capacity	Nom.	6°CWB		kW	61.5 (2)	67.4 (2)	73.5 (2)	78.5 (2)	83.9 (2)	90.0 (2)	95.4 (2)	101.0 (2)	106.4 (2)	111.9 (2)
	Prated,h			kW	61.5 (2)	67.4 (2)	73.5 (2)	78.5 (2)	83.9 (2)	90.0 (2)	95.4 (2)	101.0 (2)	106.4 (2)	111.9 (2)
	Max.	6°CWB		kW	69.0 (2)	75.0 (2)	82.5 (2)	87.5 (2)	94.0 (2)	100.0 (2)	106.5 (2)	113.0 (2)	119.5 (2)	125.5 (2)
Power input - 50Hz	Heating	Nom.	6°CWB	kW	17.23 (2)	17.94 (2)	20.33 (2)	22.19 (2)	23.87 (2)	25.08 (2)	26.76 (2)	30.02 (2)	30.45 (2)	31.45 (2)
COP at nom. capacity	6°CWB			kW/kW	3.57 (2)	3.76 (2)	3.61 (2)	3.54 (2)	3.51 (2)	3.59 (2)	3.56 (2)	3.36 (2)	3.49 (2)	3.56 (2)
ESEER - Automatic					7.07	6.81	6.89	6.69	6.60	6.50	6.44	6.02	6.36	6.74
ESEER - Standard					5.58	5.42	5.39	5.23	5.17	5.05	5.01	4.68	5.03	5.29
SCOP					4.4	4.3	4.2		4.3	4.2		4.1	4.3	
SCOP recommended combination 2					4.4	4.3	4.2		4.3	4.2	4.3	4.2	4.3	4.4
SCOP recommended combination 3					4.3	4.2			4.3	4.1	4.2	4.1	4.2	4.3
SEER					6.9	6.8	6.7	6.5		6.4		6.3	6.9	6.7
SEER recommended combination 2					6.7	6.6	6.5	6.3					6.8	6.6
SEER recommended combination 3					6.9	6.7	6.6	6.4	6.5	6.2	6.3		6.9	6.7
ηs,c				%	274.5	269.9	264.2	257.8	256.8	251.7	253.3	250.8	272.4	263.5
ηs,c recommended combination 2					266.5	262.6	256.1	249.3	249.8	248.3	250.9	248.7	269.2	259.2
ηs,c recommended combination 3					273.3	265.3	261.1	253.1	256.1	244.2	249.8	247.2	272.2	263.2
ηs,h				%	171.2	167.0	164.6	166.0	169.8	163.1	166.2	162.4	167.5	170.0
ηs,h recommended combination 2					172.3	167.1	165.4	166.8	170.6	164.6	167.7	164.1	168.4	171.3
ηs,h recommended combination 3					170.2	165.5	164.5	165.0	167.0	161.9	164.2	159.9	164.8	167.8
Space cooling	A Condition (35°C - 27/19)	EERd			2.6	2.5	2.6	2.3	2.1	2.3	2.1		2.4	2.2
		Pdc		kW	61.5	67.4	73.5	78.5	83.9	90.0	95.4	97.0	102.4	111.9
	B Condition (30°C - 27/19)	EERd			4.8	4.6		4.4	4.3		4.2	4.1	4.5	
		Pdc		kW	45.3	49.7	54.2	57.8	61.8	66.3	70.3	71.5	75.5	82.5
	C Condition (25°C - 27/19)	EERd			8.5	8.6	8.2	8.1	8.2	8.1		7.9	8.5	8.3
		Pdc		kW	29.1	31.9	34.8	37.2	39.7	42.6	45.2	45.9	48.5	53.0
	D Condition (20°C - 27/19)	EERd			16.0	15.2	14.2	14.3	16.8	14.3	16.8	16.7	17.9	16.0
		Pdc		kW	18.8	15.8	16.2	16.5	21.0	19.0	20.1	20.4	21.6	23.6
Space cooling recommended combination 2	A Condition (35°C - 27/19)	EERd			2.6	2.4	2.6	2.3	2.1	2.2	2.1		2.3	2.2
		Pdc		kW	61.5	67.4	73.5	78.5	83.9	90.0	95.4	97.0	102.4	111.9
Space cooling recommended combination 2	B Condition (30°C - 27/19)	EERd			4.6	4.5	4.4	4.3		4.2		4.1	4.5	4.4
		Pdc		kW	45.3	49.7	54.1	57.8	61.8	66.3	70.3	71.5	75.4	82.4
	C Condition (25°C - 27/19)	EERd			8.2	8.4	7.9	7.8	7.9	8.0	8.1	7.9	8.4	8.1
		Pdc		kW	29.1	31.9	34.8	37.2	39.7	42.6	45.2	45.9	48.5	53.0
	D Condition (20°C - 27/19)	EERd			15.6	14.7	13.6	13.8	16.1	14.0	16.5		17.8	15.9
		Pdc		kW	18.4	15.4	15.7	16.5	20.5	18.9	20.1	20.4	21.6	23.6
Space cooling recommended combination 3	A Condition (35°C - 27/19)	EERd				2.5		2.3	2.1	2.2	2.1		2.4	2.2
		Pdc		kW	61.5	67.4	73.5	78.5	83.9	90.0	95.4	97.0	102.4	111.9
	B Condition (30°C - 27/19)	EERd			4.8	4.5		4.3		4.1		4.0	4.5	4.4
		Pdc		kW	45.3	49.7	54.2	57.8	61.8	66.3	70.3	71.5	75.5	82.5
	C Condition (25°C - 27/19)	EERd			8.5	8.4	8.1	8.0	8.2	7.8	8.0	7.8	8.5	8.4
		Pdc		kW	29.1	31.9	34.8	37.2	39.7	42.6	45.2	45.9	48.5	53.0
	D Condition (20°C - 27/19)	EERd			15.8	15.2	14.0	14.1	16.6	13.8	16.6	16.5	17.9	16.1
		Pdc		kW	18.8	15.7	16.0	16.6	21.0	19.0	20.1	20.4	21.6	23.6
Space heating (Average climate)	TBivalent	COPd (declared COP)			2.3	2.5	2.3	2.2	2.1	2.4	2.2	2.1	2.2	
		Pdh (declared heating cap)		kW	34.4	36.9	39.0	41.6	46.3	46.4	51.1	54.2	60.7	62.3
		Tbiv (bivalent temperature)		°C	-10									
	TOL	COPd (declared COP)			2.3	2.5	2.3	2.2	2.1	2.4	2.2	2.1	2.2	
		Pdh (declared heating cap)		kW	34.4	36.9	39.0	41.6	46.3	46.4	51.1	54.2	60.7	62.3
		Tol (temperature operating limit)		°C	-10									
	A Condition (-7°C)	COPd (declared COP)			2.6	2.8		2.6		2.7	2.6	2.5		2.6
		Pdh (declared heating cap)		kW	30.4	32.6	34.5	36.8	41.0		45.2	47.9	53.7	55.1
	B Condition (2°C)	COPd (declared COP)			4.0	3.7	3.8		3.9	3.6	3.7		3.9	4.0
		Pdh (declared heating cap)		kW	18.5	19.9	21.0	22.4	24.9	25.0	27.5	29.2	32.7	33.5
	C Condition (7°C)	COPd (declared COP)			6.3		6.1	6.2	6.5	6.3	6.5	6.4	6.5	
		Pdh (declared heating cap)		kW	11.9	13.0	13.5	14.4	16.0	16.1	17.7	18.8	21.3	21.6
	D Condition (12°C)	COPd (declared COP)			8.2	8.9	8.8	9.0			8.8	8.6	8.7	
		Pdh (declared heating cap)		kW	6.0	5.7	6.0	6.4	7.1		7.9	8.3	13.1	

2 Specifications

2 - 1 Specifications

Technical specifications System					RXYQ22U	RXYQ24U	RXYQ26U	RXYQ28U	RXYQ30U	RXYQ32U	RXYQ34U	RXYQ36U	RXYQ38U	RXYQ40U
Space heating (Average climate) recommended combination 2	A Condition (-7°C)	COPd (declared COP)			2.6	2.7	2.6			2.7	2.6	2.5		2.6
		Pdh (declared heating cap)		kW	30.4	32.6	34.5	36.8	41.0		45.2	47.9	53.7	55.1
	B Condition (2°C)	COPd (declared COP)			4.1	3.7	3.8		3.9	3.6	3.8	3.7	3.9	4.0
		Pdh (declared heating cap)		kW	18.5	19.9	21.0	22.4	24.9	25.0	27.5	29.2	32.7	33.5
	C Condition (7°C)	COPd (declared COP)			6.3		6.1	6.3	6.6	6.3	6.6	6.5		
		Pdh (declared heating cap)		kW	11.9	13.1		14.4	16.0	16.1	17.7	18.8	21.3	21.6
	D Condition (12°C)	COPd (declared COP)			8.4	9.0	8.9	9.1			8.9	8.8		
		Pdh (declared heating cap)		kW	6.0	5.7	6.0	6.4	7.2	7.1	7.9	8.3	13.2	
	TBivalent	COPd (declared COP)			2.2	2.4	2.2		2.1	2.4	2.2		2.3	2.2
Space heating (Average climate) recommended combination 2	TBivalent	Pdh (declared heating cap)		kW	34.4	36.9	39.0	41.6	46.3	46.4	51.1	54.2	60.7	62.3
		Tbiv (bivalent temperature)		°C	-10									
	TOL	COPd (declared COP)			2.2	2.4	2.2		2.1	2.4	2.2		2.3	2.2
		Pdh (declared heating cap)		kW	34.4	36.9	39.0	41.6	46.3	46.4	51.1	54.2	60.7	62.3
		Tol (temperature operating limit)		°C	-10									
Space heating (Average climate) recommended combination 3	A Condition (-7°C)	COPd (declared COP)			2.6	2.7	2.6		2.5	2.7	2.6	2.4	2.5	2.6
		Pdh (declared heating cap)		kW	30.4	32.6	34.5	36.8	41.0		45.2	47.9	53.7	55.1
	B Condition (2°C)	COPd (declared COP)			4.0	3.7	3.8		3.9	3.6	3.7	3.6	3.8	3.9
		Pdh (declared heating cap)		kW	18.5	19.9	21.0	22.4	24.9	25.0	27.5	29.2	32.7	33.5
	C Condition (7°C)	COPd (declared COP)			6.2	6.3	6.1	6.2	6.3		6.4	6.3		6.4
		Pdh (declared heating cap)		kW	11.9	12.9	13.5	14.4	16.0	16.1	17.7	18.8	21.2	21.6
	D Condition (12°C)	COPd (declared COP)			8.2	8.9	8.8	9.0	8.6	9.0	8.9	8.3	8.5	8.4
		Pdh (declared heating cap)		kW	6.0	5.7	6.0	6.4	7.1		7.9	8.3	12.9	12.8
	TBivalent	COPd (declared COP)			2.3	2.4	2.2		2.1	2.4	2.2	2.1	2.2	
		Pdh (declared heating cap)		kW	34.4	36.9	39.0	41.6	46.3	46.4	51.1	54.2	60.7	62.3
		Tbiv (bivalent temperature)		°C	-10									
	TOL	COPd (declared COP)			2.3	2.4	2.2		2.1	2.4	2.2	2.1	2.2	
		Pdh (declared heating cap)		kW	34.4	36.9	39.0	41.6	46.3	46.4	51.1	54.2	60.7	62.3
		Tol (temperature operating limit)		°C	-10									
Capacity range				HP	22	24	26	28	30	32	34	36	38	40
PED	Category				Category II									
Maximum number of connectable indoor units					64 (3)									
Indoor index connection	Min.				275.0	300.0	325.0	350.0	375.0	400.0	425.0	450.0	475.0	500.0
	Max.				715.0	780.0	845.0	910.0	975.0	1,040.0	1,105.0	1,170.0	1,235.0	1,300.0
Heat exchanger	Indoor side				Air									
	Outdoor side				Air									
	Air flow rate	Cooling	Rated	m^3/h	21,600	25,320	24,480	26,700	26,160	31,200	30,660	31,260	35,880	36,660
		Heating	Rated	m^3/h	21,600	25,320	24,480	26,700	26,160	31,200	30,660	31,260	35,880	36,660
Sound power level	Cooling	Nom.		dBA	84.8 (4)	86.3 (4)	85.3 (4)	87.6 (4)	86.6 (4)	88.6 (4)	87.8 (4)	89.9 (4)	88.8 (4)	87.3 (4)
	Heating	Prated,h		dBA	85.4 (4)	87.3 (4)	86.3 (4)	88.3 (4)	87.5 (4)	89.5 (4)	88.9 (4)	91.5 (4)	90.7 (4)	88.4 (4)
Sound pressure level	Cooling	Nom.		dBA	62.5 (5)	64.0 (5)	63.5 (5)	65.1 (5)	64.5 (5)	66.0 (5)	65.5 (5)	67.1 (5)	66.2 (5)	65.2 (5)
Refrigerant	Type				R-410A									
	GWP				2,087.5									
Refrigerant oil	Type				Synthetic (ether) oil FVC68D									
Piping connections	Liquid	Type			Braze connection									
		OD		mm	15.9		19.1							
	Gas	Type			Braze connection									
Piping connections	Gas	OD		mm	28.6	34.9						41.3		
	Total piping length	System	Actual	m	1,000 (6)									
Indication if the heater is equipped with a supplementary heater					no									
Supplementary heater	Back-up capacity	Heating	elbu	kW	0.0									
Power consumption in other than active mode	Crankcase heater mode	Cooling	PCK	kW	0.000									
		Heating	PCK	kW	0.103	0.129			0.141	0.154	0.166		0.192	
	Off mode	Cooling	POFF	kW	0.081	0.115			0.116	0.149	0.150		0.157	
		Heating	POFF	kW	0.103	0.129			0.141	0.154	0.166		0.192	
	Standby mode	Cooling	PSB	kW	0.081	0.115			0.116	0.149	0.150		0.157	
		Heating	PSB	kW	0.103	0.129			0.141	0.154	0.166		0.192	
	Thermostat-off mode	Cooling	PTO	kW	0.009	0.014					0.019			
		Heating	PTO	kW	0.113	0.154			0.155	0.195	0.196		0.211	
Cooling	Cdc (Degradation cooling)				0.25									
Heating	Cdh (Degradation heating)				0.25									

2 Specifications

2 - 1 Specifications

Technical specifications System					RXYQ42U	RXYQ44U	RXYQ46U	RXYQ48U	RXYQ50U	RXYQ52U	RXYQ54U
System	Outdoor unit module 1				RXYQ10U	RXYQ12U	RXYQ14U	RXYQ16U			RXYQ18U
	Outdoor unit module 2				RXYQ16U					RXYQ18U	
	Outdoor unit module 3				RXYQ16U				RXYQ18U		
Recommended combination					12 x FXFQ63AVEB + 4 x FXFQ80AVEB	6 x FXFQ50AVEB + 8 x FXFQ63AVEB + 4 x FXFQ80AVEB	1 x FXFQ50AVEB + 13 x FXFQ63AVEB + 4 x FXFQ80AVEB	12 x FXFQ63AVEB + 6 x FXFQ80AVEB	3 x FXFQ50AVEB + 13 x FXFQ63AVEB + 4 x FXFQ80AVEB	6 x FXFQ50AVEB + 14 x FXFQ63AVEB + 2 x FXFQ80AVEB	9 x FXFQ50AVEB + 15 x FXFQ63AVEB
Recommended combination 2					12 x FXSQ63A2VEB + 4 x FXSQ80A2VEB	6 x FXSQ50A2VEB + 8 x FXSQ63A2VEB + 4 x FXSQ80A2VEB	1 x FXSQ50A2VEB + 13 x FXSQ63A2VEB + 4 x FXSQ80A2VEB	12 x FXSQ63A2VEB + 6 x FXSQ80A2VEB	3 x FXSQ50A2VEB + 13 x FXSQ63A2VEB + 4 x FXSQ80A2VEB	6 x FXSQ50A2VEB + 14 x FXSQ63A2VEB + 2 x FXSQ80A2VEB	9 x FXSQ50A2VEB + 15 x FXSQ63A2VEB
Recommended combination 3					12 x FXMQ63P7VEB + 4 x FXMQ80P7VEB	6 x FXMQ50P7VEB + 8 x FXMQ63P7VEB + 4 x FXMQ80P7VEB	1 x FXMQ50P7VEB + 13 x FXMQ63P7VEB + 4 x FXMQ80P7VEB	12 x FXMQ63P7VEB + 6 x FXMQ80P7VEB	3 x FXMQ50P7VEB + 13 x FXMQ63P7VEB + 4 x FXMQ80P7VEB	6 x FXMQ50P7VEB + 14 x FXMQ63P7VEB + 2 x FXMQ80P7VEB	9 x FXMQ50P7VEB + 15 x FXMQ63P7VEB
Cooling capacity	Prated,c			kW	118.0 (1)	123.5 (1)	130.0 (1)	135.0 (1)	140.4 (1)	145.8 (1)	151.2 (1)
Heating capacity	Nom.	6°CWB		kW	118.0 (2)	123.5 (2)	130.0 (2)	135.0 (2)	140.4 (2)	145.8 (2)	151.2 (2)
	Prated,h			kW	118.0 (2)	123.5 (2)	130.0 (2)	135.0 (2)	140.4 (2)	145.8 (2)	151.2 (2)
	Max.	6°CWB		kW	131.5 (2)	137.5 (2)	145.0 (2)	150.0 (2)	156.5 (2)	163.0 (2)	169.5 (2)
Power input - 50Hz	Heating	Nom.	6°CWB	kW	32.66 (2)	34.73 (2)	35.77 (2)	37.62 (2)	39.30 (2)	40.98 (2)	42.66 (2)
COP at nom. capacity	6°CWB			kW/kW	3.61 (2)	3.56 (2)	3.63 (2)	3.59 (2)	3.57 (2)	3.56 (2)	3.54 (2)
ESEER - Automatic					6.65	6.62	6.60	6.50	6.46	6.42	6.38
ESEER - Standard					5.19	5.17	5.13	5.05	5.02	4.99	4.97
SCOP					4.2		4.1		4.2	4.3	
SCOP recommended combination 2					4.3	4.2				4.3	
SCOP recommended combination 3					4.2		4.1		4.2		
SEER					6.6	6.5	6.4				
SEER recommended combination 2					6.6	6.3	6.4	6.3		6.4	
SEER recommended combination 3					6.5	6.3		6.2	6.3	6.4	
ηs,c				%	261.2	255.9	254.9	251.7	252.8	253.7	254.1
ηs,c recommended combination 2					259.3	249.2	252.2	248.3	250.0	251.6	252.5
ηs,c recommended combination 3					255.4	250.1	248.3	244.2	248.0	251.5	253.9
ηs,h				%	165.5	164.5	162.0	162.8	165.2	167.2	169.4
ηs,h recommended combination 2					167.3	165.6	163.5	164.3	166.7	168.7	170.8
ηs,h recommended combination 3					164.4	163.5	161.3	161.7	163.2	164.4	166.0
Space cooling	A Condition (35°C - 27/19)	EERd			2.3		2.4	2.3	2.1	2.0	1.9
		Pdc		kW	118.0	123.5	130.0	135.0	140.4	145.8	151.2
	B Condition (30°C - 27/19)	EERd			4.4			4.3	4.2		4.1
		Pdc		kW	86.9	91.0	95.8	99.5	103.4	107.4	111.4
	C Condition (25°C - 27/19)	EERd			8.2	8.1					
		Pdc		kW	55.9	58.5	61.6	64.0	66.5	69.1	71.6
	D Condition (20°C - 27/19)	EERd			15.4	14.4	14.3		15.9	17.6	19.1
		Pdc		kW	24.8	26.0	27.4	28.4	29.6	30.7	34.4
Space cooling recommended combination 2	A Condition (35°C - 27/19)	EERd			2.3			2.2	2.1	2.0	1.9
		Pdc		kW	118.0	123.5	130.0	135.0	140.4	145.8	151.2
Space cooling recommended combination 2	B Condition (30°C - 27/19)	EERd			4.4	4.3		4.2		4.1	
		Pdc		kW	86.9	91.0	95.8	99.5	103.5	107.4	111.4
	C Condition (25°C - 27/19)	EERd			8.2	7.9	8.1	8.0		8.1	
		Pdc		kW	55.9	58.5	61.6	63.9	66.5	69.0	71.6
	D Condition (20°C - 27/19)	EERd			15.3	14.0			15.6	17.4	18.9
		Pdc		kW	24.8	26.0	27.4	28.4	29.6	30.7	34.1
Space cooling recommended combination 3	A Condition (35°C - 27/19)	EERd			2.3			2.2	2.1	2.0	1.9
		Pdc		kW	118.0	123.5	130.0	135.0	140.4	145.8	151.2
	B Condition (30°C - 27/19)	EERd			4.3		4.2		4.1		
		Pdc		kW	87.0	91.0	95.8	99.5	103.5	107.4	111.4
	C Condition (25°C - 27/19)	EERd			8.0	7.9		7.8	7.9	8.0	8.2
		Pdc		kW	55.9	58.5	61.6	63.9	66.5	69.1	71.6
	D Condition (20°C - 27/19)	EERd			15.2	14.2	13.9	13.8	15.6	17.5	19.1
		Pdc		kW	24.8	26.0	27.4	28.4	29.6	30.7	34.7

2 Specifications

2 - 1 Specifications

Technical specifications System				RXYQ42U	RXYQ44U	RXYQ46U	RXYQ48U	RXYQ50U	RXYQ52U	RXYQ54U
Space heating (Average climate)	TBivalent	COPd (declared COP)		2.4	2.3	2.4		2.3	2.2	2.1
		Pdh (declared heating cap)	kW	62.4	64.8	67.0	69.6	74.3	79.0	83.7
		Tbiv (bivalent temperature)	°C	-10						
	TOL	COPd (declared COP)		2.4	2.3	2.4		2.3	2.2	2.1
		Pdh (declared heating cap)	kW	62.4	64.8	67.0	69.6	74.3	79.0	83.7
		Tol (temperature operating limit)	°C	-10						
	A Condition (-7°C)	COPd (declared COP)		2.7					2.6	
		Pdh (declared heating cap)	kW	55.2	57.3	59.3	61.6	65.7	69.9	74.0
	B Condition (2°C)	COPd (declared COP)		3.7		3.6		3.7	3.8	3.9
		Pdh (declared heating cap)	kW	33.6	34.9	36.1	37.5	40.0	42.5	45.1
	C Condition (7°C)	COPd (declared COP)		6.3		6.2	6.3	6.5	6.6	6.8
		Pdh (declared heating cap)	kW	21.6	22.4	23.2	24.1	25.7	27.4	29.0
	D Condition (12°C)	COPd (declared COP)		8.6		8.7	8.8	8.9	9.0	
		Pdh (declared heating cap)	kW	9.9	10.0	10.3	10.7	12.0	14.2	
Space heating (Average climate) recommended combination 2	A Condition (-7°C)	COPd (declared COP)		2.7					2.6	
		Pdh (declared heating cap)	kW	55.2	57.3	59.3	61.6	65.7	69.9	74.0
	B Condition (2°C)	COPd (declared COP)		3.7		3.6		3.7	3.8	3.9
		Pdh (declared heating cap)	kW	33.6	34.9	36.1	37.5	40.0	42.6	45.1
	C Condition (7°C)	COPd (declared COP)		6.4		6.3		6.5	6.7	6.8
		Pdh (declared heating cap)	kW	21.6	22.4	22.8	24.1	25.7	27.4	29.0
	D Condition (12°C)	COPd (declared COP)		8.7		8.8	8.9	9.0	9.1	
		Pdh (declared heating cap)	kW	10.0		10.3	10.7	12.2	14.4	
	TBivalent	COPd (declared COP)		2.4	2.3	2.4		2.3	2.2	2.1
Space heating (Average climate) recommended combination 2		Pdh (declared heating cap)	kW	62.4	64.8	67.0	69.6	74.3	79.0	83.7
		Tbiv (bivalent temperature)	°C	-10						
	TOL	COPd (declared COP)		2.4	2.3	2.4		2.3	2.2	2.1
		Pdh (declared heating cap)	kW	62.4	64.8	67.0	69.6	74.3	79.0	83.7
		Tol (temperature operating limit)	°C	-10						
Space heating (Average climate) recommended combination 3	A Condition (-7°C)	COPd (declared COP)		2.7	2.6	2.7		2.6		2.5
		Pdh (declared heating cap)	kW	55.2	57.3	59.3	61.6	65.7	69.9	74.0
	B Condition (2°C)	COPd (declared COP)		3.7		3.6			3.7	3.8
		Pdh (declared heating cap)	kW	33.6	34.9	36.1	37.5	40.0	42.5	45.1
	C Condition (7°C)	COPd (declared COP)		6.3	6.2		6.3	6.4		6.5
		Pdh (declared heating cap)	kW	21.6	22.4	23.2	24.1	25.7	27.3	29.0
	D Condition (12°C)	COPd (declared COP)		8.6		8.7	8.8		8.7	
		Pdh (declared heating cap)	kW	9.9	10.0	10.3	10.7	11.8	13.7	
	TBivalent	COPd (declared COP)		2.4	2.3	2.4		2.2		2.1
		Pdh (declared heating cap)	kW	62.4	64.8	67.0	69.6	74.3	79.0	83.7
		Tbiv (bivalent temperature)	°C	-10						
	TOL	COPd (declared COP)		2.4	2.3	2.4		2.2		2.1
		Pdh (declared heating cap)	kW	62.4	64.8	67.0	69.6	74.3	79.0	83.7
		Tol (temperature operating limit)	°C	-10						
Capacity range			HP	42	44	46	48	50	52	54
PED	Category			Category II						
Maximum number of connectable indoor units				64 (3)						
Indoor index connection	Min.			525.0	550.0	575.0	600.0	625.0	650.0	675.0
	Max.			1,365.0	1,430.0	1,495.0	1,560.0	1,625.0	1,690.0	1,755.0
Heat exchanger	Indoor side			Air						
	Outdoor side			Air						
	Air flow rate	Cooling Rated	m^3/h	41,700	42,300	44,580	46,800	46,260	45,720	45,180
		Heating Rated	m^3/h	41,700	42,300	44,580	46,800	46,260	45,720	45,180
Sound power level	Cooling	Nom.	dBA	89.1 (4)	89.8 (4)	89.3 (4)	90.4 (4)	89.8 (4)	89.3 (4)	88.6 (4)
	Heating	Prated,h	dBA	90.1 (4)	90.5 (4)	90.4 (4)	91.3 (4)	90.9 (4)	90.5 (4)	90.1 (4)
Sound pressure level	Cooling	Nom.	dBA	66.5 (5)	67.2 (5)	67.0 (5)	67.8 (5)	67.5 (5)	67.1 (5)	66.8 (5)
Refrigerant	Type			R-410A						
	GWP			2,087.5						
Refrigerant oil	Type			Synthetic (ether) oil FVC68D						
Piping connections	Liquid	Type		Braze connection						
		OD	mm	19.1						
	Gas	Type		Braze connection						

2 Specifications

2 - 1 Specifications

Technical specifications System					RXYQ42U	RXYQ44U	RXYQ46U	RXYQ48U	RXYQ50U	RXYQ52U	RXYQ54U
Piping connections	Gas	OD		mm	41.3						
	Total piping length	System	Actual	m	1,000 (6)						
Indication if the heater is equipped with a supplementary heater					no						
Supplementary heater	Back-up capacity	Heating	elbu	kW	0.0						
Power consumption in other than active mode	Crankcase heater mode	Cooling	PCK	kW	0.000						
		Heating	PCK	kW	0.206		0.231		0.243	0.255	0.267
	Off mode	Cooling	POFF	kW	0.190		0.223		0.224	0.225	0.226
		Heating	POFF	kW	0.206		0.231		0.243	0.255	0.267
	Standby mode	Cooling	PSB	kW	0.190		0.223		0.224	0.225	0.226
		Heating	PSB	kW	0.206		0.231		0.243	0.255	0.267
	Thermostat-off mode	Cooling	PTO	kW	0.024				0.029		
		Heating	PTO	kW	0.251		0.292		0.293	0.294	
Cooling	Cdc (Degradation cooling)				0.25						
Heating	Cdh (Degradation heating)				0.25						

Electrical specifications System					RXYQ22U	RXYQ24U	RXYQ26U	RXYQ28U	RXYQ30U	RXYQ32U	RXYQ34U	RXYQ36U	RXYQ38U	RXYQ40U
Power supply	Name				Y1									
	Phase				3N~									
	Frequency			Hz	50									
	Voltage			V	380-415									
Power supply intake					Both indoor and outdoor unit									
Voltage range	Min.			%	-10									
	Max.			%	10									
Current	Nominal running current (RLA)	Cooling		A	22.9 (7)	25.2 (7)	28.1 (7)	30.7 (7)	33.5 (7)	36.0 (7)	38.8 (7)	44.9 (7)	44.3 (7)	43.7 (7)
Current - 50Hz	Nominal running current (RLA)	Combination A	Cooling		-									
		Combination B	Cooling		-									
	Starting current (MSC) - remark				See note 8									
	Zmax	List			No requirements									
	Minimum Ssc value			kVa	11,573 (8)	11,597 (8)	12,831 (8)	13,585 (8)	14,843 (8)	15,094 (8)	16,352 (8)	17,359 (8)	19,397 (8)	20,378 (8)
	Minimum circuit amps (MCA)			A	46.0 (9)		51.0 (9)	55.0 (9)	59.0 (9)	62.0 (9)	66.0 (9)	70.0 (9)	76.0 (9)	81.0 (9)
	Maximum fuse amps (MFA)			A	63 (10)				80 (10)				100 (10)	
Power Performance	Power factor	Combination B	35°C ISO - Full load		-									
			46°C ISO - Full load		-									
Wiring connections - 50Hz	For power supply	Quantity			5G									
	For connection with indoor	Quantity			2									
		Remark			F1,F2									

Electrical specifications System					RXYQ42U	RXYQ44U	RXYQ46U	RXYQ48U	RXYQ50U	RXYQ52U	RXYQ54U
Power supply	Name				Y1						
	Phase				3N~						
	Frequency			Hz	50						
	Voltage			V	380-415						
Power supply intake					Both indoor and outdoor unit						
Voltage range	Min.			%	-10						
	Max.			%	10						
Current	Nominal running current (RLA)	Cooling		A	46.2 (7)	48.7 (7)	51.4 (7)	54.0 (7)	56.8 (7)	59.6 (7)	62.4 (7)
Current - 50Hz	Nominal running current (RLA)	Combination A	Cooling		-						
		Combination B	Cooling		-						
	Starting current (MSC) - remark				See note 8						
	Zmax	List			No requirements						
	Minimum Ssc value			kVa	20,629 (8)	21,132 (8)	21,887 (8)	22,641 (8)	23,899 (8)	25,157 (8)	26,415 (8)
	Minimum circuit amps (MCA)			A	84.0 (9)	86.0 (9)	89.0 (9)	93.0 (9)	97.0 (9)	101.0 (9)	105.0 (9)
	Maximum fuse amps (MFA)			A	100 (10)			125 (10)			

2 Specifications

2 - 1 Specifications

Electrical specifications System				RXYQ42U	RXYQ44U	RXYQ46U	RXYQ48U	RXYQ50U	RXYQ52U	RXYQ54U
Power Performance	Power factor	Combination B	35°C ISO - Full load	-						
			46°C ISO - Full load	-						
Wiring connections - 50Hz	For power supply	Quantity		5G						
	For connection with indoor	Quantity		2						
		Remark		F1,F2						

3 Options

3 - 1 Options

RXYQ-U
RYYQ-U
RYMQ-U
RXYQQ-U

No	Item		RXYQ8U RYYQ8U RXYQQ8U	RXYQ10-12U RYYQ10-12U RXYQQ10-12U	RXYQ14-18U RYYQ14-18U RXYQQ14-18U	RXYQ20U RYYQ20U RXYQQ20U	RYYQ22~54U RXYQ22~54U RXYQQ22~42U
I.	Refnet header		KHRQ22M29H				
			KHRQ22M64H				
			---	---	---	KHRQ22M75H	
II.	Refnet joint		KHRQ22M20T				
			KHRQ22M29T9				
			KHRQ22M64T				
			---	---	---	KHRQ22M75T	
III.	Outdoor multi-connection kit	See note ·2·.	---	---	---	---	BHFQ22P1007
IV.	Outdoor multi-connection kit	See note ·2·.	---	---	---	---	BHFQ22P1517

No	Item		8HP	10HP	12HP	14HP	16HP	18HP	20HP
1a	Cool/heat selector (switch)	See note ·3·.	KRC19-26A						
1b	Cool/heat selector (PCB)		BRP2A81						
1c	Cool/heat selector (fixing box)		KJB111A						
2	VRV configurator		EKPCCAB*						
3	Heater tape kit PCB		EKBPH012T7A			EKBPH020T7A			
4	Demand PCB	See	DTA104A61/62*						
5	Demand PCB mounting plate	See note ·4·.	---			KKSB26B1*			

Notes

1 All options are kits
2 Only for multi units
3 To mount option ·1a·, option ·1c· is required.
4 To install the demand PCB on the large casing type, the demand PCB mounting plate is required.

Medium casing type ·VRV4· heat pump: modules ·8~12·HP
Large casing type ·VRV4· heat pump: modules ·14~20·HP

3D120006B

4 Combination table

4 - 1 Combination Table

REMQ5U
REYQ8-20U
RXYQQ8-20U
RXYTQ8-16UYF
RYYQ8-20U
RYMQ8-20U

Unit combination restrictions: VRV4 outdoor units (all models) + 15-class indoor units

Units in scope: FXZQ15A and FXAQ15A.

1. In case the system contains these indoor units and the total connection ratio (CR) ≤ 100%: no special restrictions. Follow the restrictions that apply to regular VRV DX indoor units.
2. In case the system contains these indoor units and the total connection ratio (CR) > 100%: special restrictions apply.
   A. When the connection ratio (CR1) of the sum of all FXZQ15A and/or FXAQ15A units in the system ≤ 70%, and ALL other VRV DX indoor units have an individual capacity class > 50: no special restrictions.
   B. When the connection ratio (CR1) of the sum of all FXZQ15A and/or FXAQ15A units in the system ≤ 70%, and NOT ALL other VRV DX indoor units have an individual capacity class > 50: the restrictions below apply.
      - 100% < CR ≤ 105% → CR1 of the sum of all FXZQ15A and/or FXAQ15A indoor units in the system must be ≤ 70%.
      - 105% < CR ≤ 110% → CR1 of the sum of all FXZQ15A and/or FXAQ15A indoor units in the system must be ≤ 60%.
      - 110% < CR ≤ 115% → CR1 of the sum of all FXZQ15A and/or FXAQ15A indoor units in the system must be ≤ 40%.
      - 115% < CR ≤ 120% → CR1 of the sum of all FXZQ15A and/or FXAQ15A indoor units in the system must be ≤ 25%.
      - 120% < CR ≤ 125% → CR1 of the sum of all FXZQ15A and/or FXAQ15A indoor units in the system must be ≤ 10%.
      - 125% < CR ≤ 130% → FXZQ15A andFXAQ15A cannot be used

REMARK

Only the 15-class indoor units explicitly mentioned on this page are in scope. Other indoor units follow the rules that apply to regular VRV DX indoor units.

3D104665

RXYQQ-U
RXYQ-U
RYYQ-U
RYMQ-U

Heat pump VRV4

Multi-unit standard combinations table

		8HP	10HP	12HP	14HP	16HP	18HP	20HP
Heat pump	RXYQ8* / RYYQ8* / RXYQQ8*	1						
	RXYQ10* / RYYQ10* / RXYQQ10*		1					
	RXYQ12* / RYYQ12* / RXYQQ12*			1				
	RXYQ14* / RYYQ14* / RXYQQ14*				1			
	RXYQ16* / RYYQ16* / RXYQQ16*					1		
	RXYQ18* / RYYQ18* / RXYQQ18*						1	
	RXYQ20* / RYYQ20* / RXYQQ20*							1
Multi-combination with 2 outdoor units	RXYQ22* / RYYQ22* / RXYQQ22*		1	1				
	RXYQ24* / RYYQ24* / RXYQQ24*	1				1		
	RXYQ26* / RYYQ26* / RXYQQ26*			1	1			
	RXYQ28* / RYYQ28* / RXYQQ28*			1		1		
	RXYQ30* / RYYQ30* / RXYQQ30*			1			1	
	RXYQ32* / RYYQ32* / RXYQQ32*					2		
	RXYQ34* / RYYQ34* / RXYQQ34*					1	1	
	RXYQ36* / RYYQ36* / RXYQQ36*					1		1
Multi-combination with 3 outdoor units	RXYQ38* / RYYQ38* / RXYQQ38*	1	1					1
	RXYQ40* / RYYQ40* / RXYQQ40*		1	1			1	
	RXYQ42* / RYYQ42* / RXYQQ42*		1			2		
	RXYQ44* / RYYQ44*			1		2		
	RXYQ46* / RYYQ46*				1	2		
	RXYQ48* / RYYQ48*					3		
	RXYQ50* / RYYQ50*					2	1	
	RXYQ52* / RYYQ52*					1	2	
	RXYQ54* / RYYQ54*						3	

Remark
RYYQ8~20 = Single continuous heating
RYYQ22~54 Multi continuous heating
RXYQ8~20 = Single non-continuous heating
RXYQ22~54 Multi non-continuous heating
RXYQQ8~20 Single non-continuous heating replacement (VRV4-Q)
RXYQQ22~4 Multi non-continuous heating replacement (VRV4-Q)

1) For single unit installation RYYQ* units (continuous heating) and RXYQ* units (non-continuous heating)
2) "Non-continuous heating" multi-outdoor-unit combinations consist of RXYQ8~20 units (e.g. RXYQ36*=RXYQ16*+RXYQ20*).
3) "Continuous heating" multi-outdoor-unit combinations consist of RYMQ8~20 units (e.g. RYYQ36*=RYMQ16*+RYMQ20*).
→ RYMQ* units can only be used in multi-outdoor-unit combinations and cannot be used as standalone units.
4) RYYQ8~20* units cannot be used in multi-outdoor-unit combinations.
5) RYYQ8~20 "Continuous heating" multi-outdoor-unit combinations cannot contain RXYQ* units.
6) RXYQ8~20 "Non-continuous heating" multi-outdoor-unit combinations cannot contain RYMQ* units.
7) Multi "non-continuous heating" replacement models only consist of RXYQQ8-20 modules (e.g. RXYQQ36*=RXYQQ16*+RXYQQ20*).
8) Replacement units cannot be combined with other units.
9) T-series outdoor units and U-series outdoor units cannot share the same refrigerant circuit. When combining these units, make sure they are part of separate refrigerant circuits.

3D120060

4 Combination table

4 - 1 Combination Table

RXYQ-U
RYYQ-U
RYMQ-U

VRV4
Heat pump
Indoor unit combination restrictions
(1/2)

Indoor unit combination pattern	·VRV* DX· indoor unit	·RA DX· indoor unit	Hydrobox unit	Air handling unit (AHU) (3)
·VRV* DX· indoor unit	O	O	O	O
·RA DX· indoor unit	O	O	X	X
Hydrobox unit	O	X	O_1	X
Air handling unit (3)	O	X	X	O_2

O: Allowed
X: Not allowed

Notes

1. ·VRV* DX· indoor unit
- When combining ·VRV DX· indoor units with other types of indoor units, respect the following combination patterns:
  Example
  Allowed : *(·VRV DX· indoor unit + ·Hydrobox· unit)* ***or*** *(·VRV DX· indoor unit + ·RA DX· indoor unit)* ***or*** *(·VRV DX· indoor unit + ·AHU·)*
  Not allowed : *[·VRV DX· indoor unit + (·RA DX· indoor unit & (·Hydrobox· unit or ·AHU·))]* ***or*** *[·VRV DX· indoor unit + (·Hydrobox· unit & (·RA DX· indoor unit or ·AHU·))]*

2. O_1
- Only connect ·Hydrobox· units to a ·VRV IV· Heat Pump in combination with a ·VRV DX· indoor unit.
  → Refer to the connection ratio restrictions (·3D079540 & 3D117169·).
  → Connection with only Hydrobox units: refer to the Daikin Altherma solutions.
- Only connect ·Hydrobox· units of the ·HXY*· series.
  → ·HXHD*· series ·Hydrobox· units are not allowed.

3. O_2
- *Combination of ·AHU· only + control box ·EKEQFA· (the combination with ·VRV DX· indoor units is not allowed; maximum ·54·HP for ·400 + 2x500· class ·EKEXV· kit)*
  → ·X·-control is possible (up to ·3x· [·EKEXV+EKEQFA*· boxes] can be connected to one outdoor unit (system)). No Variable Refrigerant Temperature control possible.
  → ·Y·-control is possible (up to ·3x· [·EKEXV+EKEQFA*· boxes] can be connected to one outdoor unit (system)). No Variable Refrigerant Temperature control possible.
  → ·W·-control is possible (up to ·3x· [·EKEXV+EKEQFA*· boxes] can be connected to one outdoor unit (system)). No Variable Refrigerant Temperature control possible.

- *Combination of ·AHU· only + control box ·EKEQMA· (not combined with ·VRV DX· indoor units)*
  → Z-control is possible (the allowed number of [·EKEXV + EKEQMA· boxes] is determined by the connection ratio (·90-110%·) and the capacity of the outdoor unit.

4. Combination of ·AHU· and ·VRV DX· indoor units
→ Z-control is possible (·EKEQMA*· boxes are allowed, but with a limited connection ratio).

5. The combination of ·AHU· with ·Hydrobox· units or ·RA DX· indoor units is not allowed.

6. (3) The following units are considered AHUs:
→ ·EKEXV + EKEQ(MA/FA) + AHU· coil
→ ·Biddle· air curtain
→ ·FXMQ_MF· units

Information
- ·VKM· units are considered to be regular ·VRV DX· indoor units.

3D079543F

RXYQ-U
RYYQ-U
RYMQ-U

VRV4
Heat pump
Indoor unit combination restrictions
(2/2)

Combination table	RYYQ* Single continuous heating	RYYQ* Multi continuous heating	RXYQ* RXMLQ* RXYLQ* Single non-continuous heating	RXYQ* RXMLQ* RXYLQ* Multi non-continuous heating
·VRV* DX· indoor unit	O	O	O	O
·RA DX· indoor unit	O	X	O	X
Hydrobox unit	O	O_1	O	O_1
Air handling unit (AHU) (2)	O	O	O	O

O: Allowed
X: Not allowed

Notes

1. O_1
- Available upon request through the ·SPN· procedure.

2. (2) The following units are considered AHUs:
→ ·EKEXV + EKEQ(MA/FA) + AHU· coil
→ ·Biddle· air curtain
→ ·FXMQ_MF· units

3D079543F

4 Combination table

4 - 1 Combination Table

RXYQ-U
RYYQ-U
RYMQ-U

Compatibility list: ·VRV4· heat pump - ·RA DX· indoor unit

Wall mounted type	*Emura*	FTXJ20A FTXJ25A FTXJ35A FTXJ42A FTXJ50A
	Stylish	FTXA20 FTXA25 FTXA35 FTXA42 FTXA50
	FTXM	FTXM20R FTXM25R FTXM35R FTXM42R FTXM50R FTXM60R FTXM71R
Ceiling/wall mounted	*Flex*	FLXS25B FLXS35B FLXS50B FLXS60B
Floor standing type	*FVXM*	FVXM25F FVXM35F FVXM50F FVXM25A FVXM35A FVXM50A CVXM20A
	Nexura	FVXG25K FVXG35K FVXG50K

Remark

The limitations on the use of ·RA DX· indoor units with the ·VRV4· Heat Pump are subject to the rules set out in drawings ·3D079543· and ·3D079540·.

If you want to connect ·RA·/·SA· ·DX· cassette, ceiling-mounted, or duct indoor units, use their ·VRV DX· indoor unit equivalents instead.

3D082373H

5 Capacity tables

5 - 1 Capacity Table Legend

In order to fulfill more your requirements on quick access of data in the format you require, we have developed a tool to consult capacity tables.

Below you can find the link to the capacity table database and an overview of all the tools we have to help you select the correct product:

- **Capacity table database:** lets you find back and export quickly the capacity information you are looking for based upon unit model, refrigerant temperature and connection ratio.
- You can access the capacity table viewer here:
  https://my.daikin.eu/content/denv/en_US/home/applications/software-finder/capacity-table-viewer.html

- An overview of **all software tools** that we offer can be found here:
  https://my.daikin.eu/denv/en_US/home/applications/software-finder.html

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ-U
RXYQ-U
RYYQ-U
RYMQ-U

VRV4
Heat pump
Integrated heating capacity coefficient

The heating capacity tables do not take into account the capacity reduction in case of frost accumulation or defrost operation.
The capacity values that take these factors into account, or in other words, the integrated heating capacity values, can be calculated as follows:

Formula

A = Integrated heating capacity
B = Capacity characteristics value (see table)
C = Integrated correction factor for frost accumulation (see table)
A = B * C

Inlet air temperature of heat exchanger

[°CDB/°CWB]	-7/-7,6 or less	-5/-5,6	-3/-3,7	0/-0,7	3/2,2	5/4,1	7/6
Integrated correction factor for frost accumulation C							
8HP	0,95	0,93	0,88	0,84	0,85	0,90	1,00
10HP	0,95	0,93	0,87	0,79	0,80	0,88	1,00
12HP	0,95	0,92	0,87	0,75	0,76	0,85	1,00
14HP	0,95	0,92	0,86	0,72	0,73	0,84	1,00
16HP	0,95	0,92	0,86	0,72	0,72	0,83	1,00
18HP	0,95	0,93	0,88	0,84	0,85	0,90	1,00
20HP	0,95	0,93	0,88	0,84	0,85	0,90	1,00
22HP	0,95	0,92	0,87	0,77	0,78	0,86	1,00
24HP	0,95	0,92	0,87	0,75	0,76	0,85	1,00
26HP	0,95	0,92	0,86	0,73	0,74	0,84	1,00
28HP	0,95	0,92	0,86	0,73	0,74	0,84	1,00
30HP	0,95	0,93	0,87	0,80	0,81	0,88	1,00
32HP	0,95	0,92	0,86	0,71	0,72	0,83	1,00
34HP	0,95	0,92	0,87	0,78	0,79	0,87	1,00
36HP	0,95	0,92	0,87	0,78	0,79	0,87	1,00
38HP	0,95	0,93	0,88	0,83	0,84	0,89	1,00
40HP	0,95	0,93	0,87	0,80	0,81	0,88	1,00
42HP	0,95	0,92	0,86	0,73	0,74	0,84	1,00
44HP	0,95	0,92	0,86	0,72	0,73	0,84	1,00
46HP	0,95	0,92	0,86	0,72	0,72	0,83	1,00
48HP	0,95	0,92	0,86	0,71	0,72	0,83	1,00
50HP	0,95	0,92	0,87	0,76	0,77	0,86	1,00
52HP	0,95	0,93	0,87	0,80	0,81	0,88	1,00
54HP	0,95	0,93	0,88	0,84	0,85	0,90	1,00

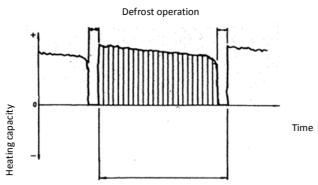

1 cycle

Notes

The figure shows the integrated heating capacity for a single cycle (from one defrost operation to the next).

When there is an accumulation of snow against the outdoor unit heat exchanger, there will always be a temporary reduction in capacity depending on the outdoor temperature (°C DB), relative humidity (RH) and the amount of frosting which occurs.

The multi-combination data 22~54HP corresponds with the standard multi-combination of drawing 3D079534.

3D079898A

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ8U
RXYQ8U
RYYQ8U
RYMQ8U

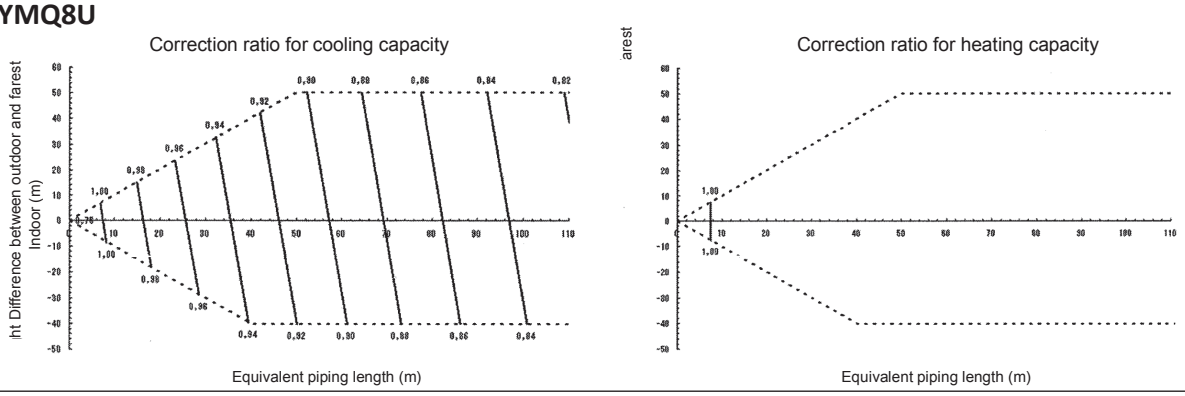

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.

2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.

3. Method of calculating the capacity of the outdoor units
The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
For new diameters, see below.

Model	Gas	Liquid
8HP	22.2	12.7

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
*Refer to the installation manual for allowed system setups and rules for deicated indoor connection types.

Diameter of main pipes (standard size)

Model	Gas	Liquid
8HP	19.1	9.5

6. Equivalent length used in the above figures is based upon the following equivalent length

Equivalent piping length	=	
Equivalent length of main pipe	x	Correction factor
+		
Equivalent length of branch pipes		

Choose the correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	0.5
Heating (liquid pipe)	1.0	0.5

Example

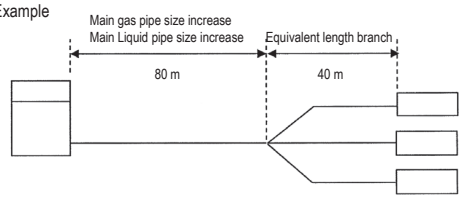

In the above case (Cooling) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
(Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
The rete of change in cooling capacity when height difference = 0 is thus approximately 0.86
heating capacity when height difference = 0 is thus approximately 1.0

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ10U
RXYQ10U
RYYQ10U
RYMQ10U

Correction ratio for cooling capacity

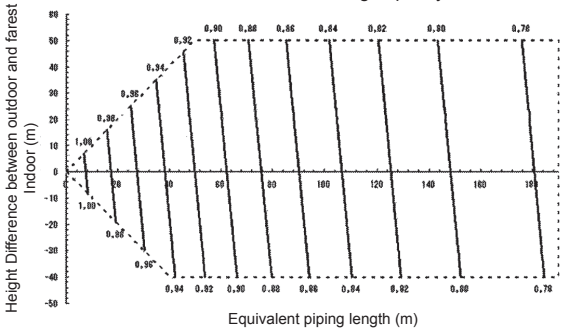

Correction ratio for heating capacity

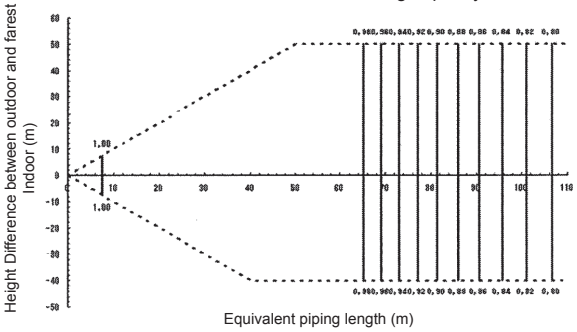

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.

2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.

3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased. For new diameters, see below.

Model	Gas	Liquid
RXYQ10P	25.4*	12.7

   *If not available on site, do not increase. If not increased correction factor should be applied to the equivalent length (see note 6).

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
10 HP	22.2	9.5

6. Equivalent length used in the above figures is based upon the following equivalent length

Equivalent piping length	=	
Equivalent length of main pipe	x	Correction factor
+		
Equivalent length of branch pipes		

   Choose the correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	0.5
Heating (liquid pipe)	1.0	0.5

   Example

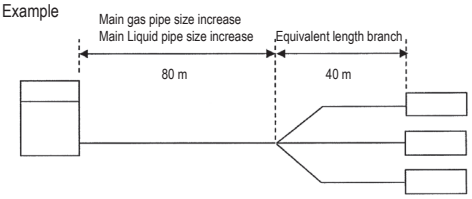

   In the above case (Cooling) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   (Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   The rete of change in cooling capacity when height difference = 0 is thus approximately 0.87
   heating capacity when height difference = 0 is thus approximately 0.90

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ12,14,16,24,36U
RXYQ12,14,24,36U
RYYQ12,14,24,36U
RYMQ12,14U

Correction ratio for cooling capacity

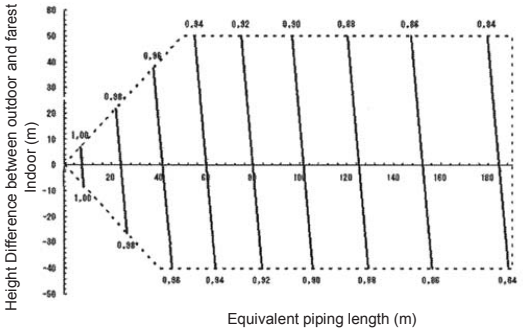

Correction ratio for heating capacity

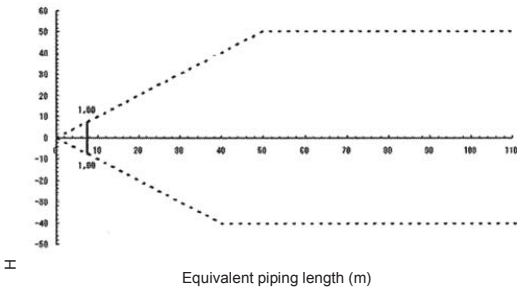

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased. For new diameters, see below.

Model	Gas	Liquid
12 HP	28.6	15.9
14 HP	28.6	15.9
24 HP	34.9	19.1
36 HP	41.3	22.2

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.

   Diameter of main pipes (standard size)

Model	Gas	Liquid
12 HP	28.6	12.7
14 HP	28.6	12.7
24 HP	34.9	15.9
36 HP	41.3	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length = Equivalent length of main pipe x Correction factor + Equivalent length of branch pipes

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1,0	
Heating (liquid pipe)	1,0	0,5

Example

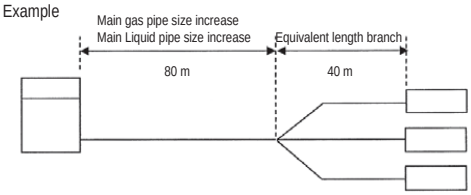

In the above case (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 120 m
(Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m

The rate of change in cooling capacity when height difference = 0 is thus approximately 0.89
heating capacity when height difference = 0 is thus approximately 1.0

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ16U
RXYQ16U
RYYQ16U
RYMQ16U

Correction ratio for cooling capacity

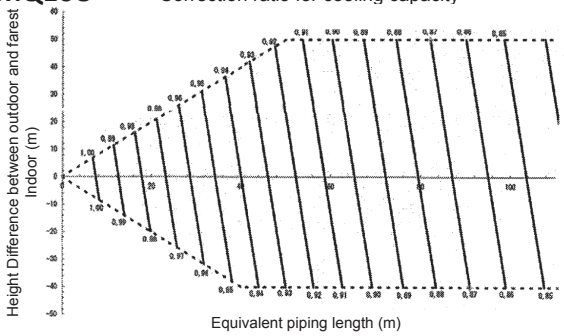

Correction ratio for heating capacity

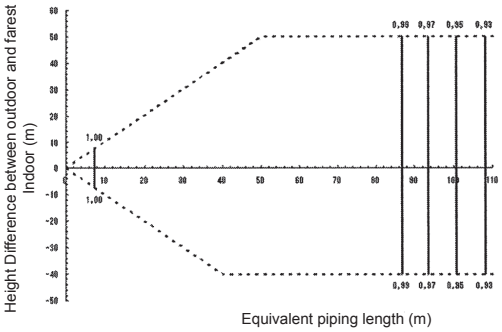

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased. For new diameters, see below.

Model	Gas	Liquid
16 HP	31.8*	15.9

   *If not available on site, do not increase. If not increased correction factor should be applied to the equivalent length (see note 6).
5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.

   Diameter of main pipes (standard size)

Model	Gas	Liquid
16 HP	28.6	12.7

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length =
   Equivalent length of main pipe x Correction factor
   +
   Equivalent length of branch pipes

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	0.5
Heating (liquid pipe)	1.0	0.5

   Example

   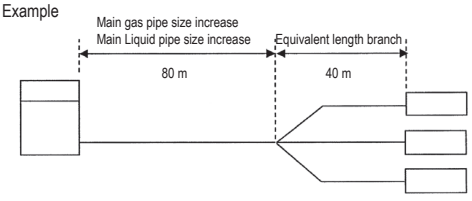

   In the above case (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 80 m
   (Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   The rate of change in cooling capacity when height difference = 0 is thus approximately 0.88
   heating capacity when height difference = 0 is thus approximately 0.99

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ18,26,28,30,38,40,42,44U
RXYQ18,26,28,30,38,40,42,44U
RYYQ18,26,28,30,38,40,42,44U
RYMQ18U

Correction ratio for cooling capacity

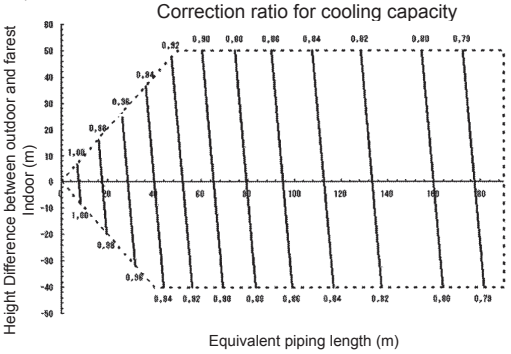

Correction ratio for heating capacity

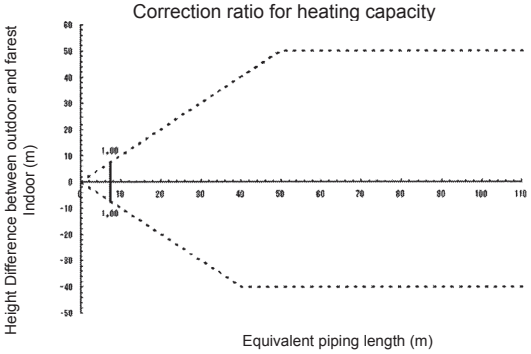

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
18 HP	31.8*	19.1
26~30 HP	38.1*	22.2
38~44 HP	41.3	22.2

   *If not available on site, do not increase. If not increased correction factor should be applied to the equivalent length (see note 6).
5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
18 HP	28.6	15.9
26~30 HP	34.9	19.1
38~44 HP	41.3	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length = Equivalent length of main pipe x Correction factor + Equivalent length of branch pipes

   Choose the correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	0.5
Heating (liquid pipe)	1.0	0.5

   Example

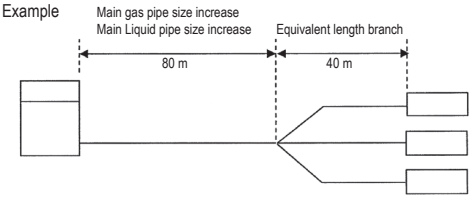

   In the above case (for RXYQ38-44) (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 120 m
   (Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   The rate of change in cooling capacity when height difference = 0 is thus approximately 0.83
   heating capacity when height difference = 0 is thus approximately 1.0

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ20,32,34U
RXYQ20,32,34U
RYYQ20,32,34U
RYMQ20,32,34U

Correction ratio for cooling capacity

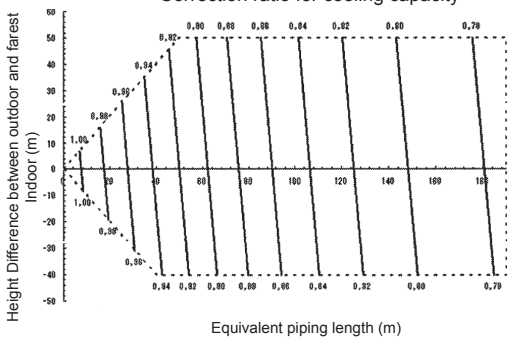

Correction ratio for heating capacity

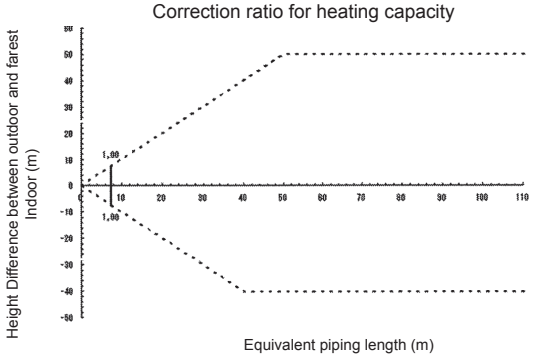

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

   Maximum capacity of outdoor units = Capacity of outdoor units from capacity table at the 100% connection ratio
   x Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

   Maximum capacity of outdoor units = Capacity of outdoor units from capacity table at installed connection ratio
   x Correction ratio of piping to furthest indoor
4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
20 HP	31.8*	19.1
32/34 HP	38.1*	22.2

   *If not available on site, do not increase. If not increased correction factor should be applied to the equivalent length (see note 6).
5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
20 HP	28.6	15.9
32/34 HP	34.9	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length =
   Equivalent length of main pipe x Correction factor
   +
   Equivalent length of branch pipes

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	0.5
Heating (liquid pipe)	1.0	0.5

   Example

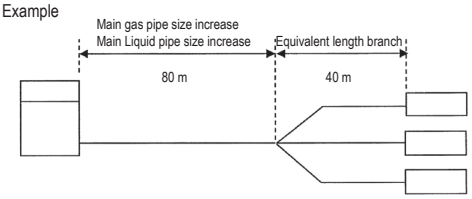

   In the above case (Cooling) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   (Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   The rate of change in cooling capacity when height difference = 0 is thus approximately 0.88
   heating capacity when height difference = 0 is thus approximately 1.0

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RXYQQ22U
RXYQ22U
RYYQ22U
RYMQ22U

Correction ratio for cooling capacity

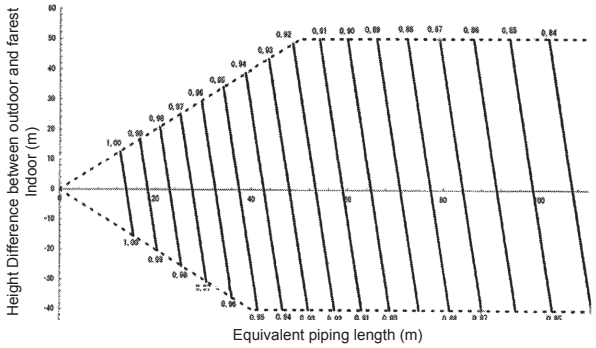

Correction ratio for heating capacity

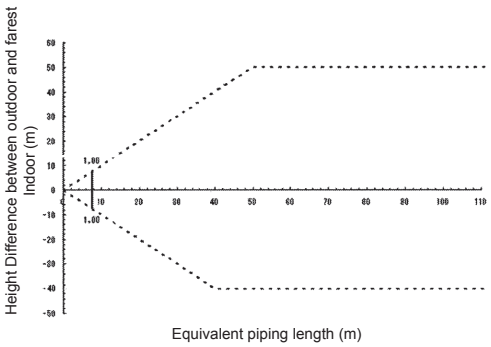

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
22 HP	31.8*	19.1

   * If not available on site, do not increase, if not increased, no correction factor should be applied to the equivalent length (see note 6).

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
22 HP	28.6	15.9

6. Equivalent length used in the above figures is based upon the following equivalent length

Overal equivalent length	=	
Equivalent length of main pipe	x	Correction factor
+		
Equivalent length of branch pipes		

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	0.5
Heating (liquid pipe)	1.0	0.5

   Example

   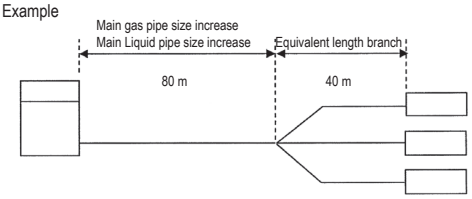

   In the above case (Cooling) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   (Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
   The rate of change in cooling capacity when height difference = 0 is thus approximately 0.88
   heating capacity when height difference = 0 is thus approximately 1.0

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RYYQ46U
RXYQ46U

Correction ratio for cooling capacity

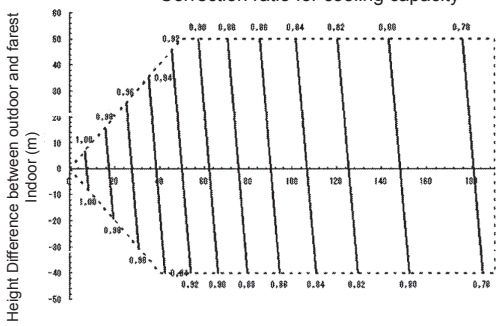

Correction ratio for heating capacity

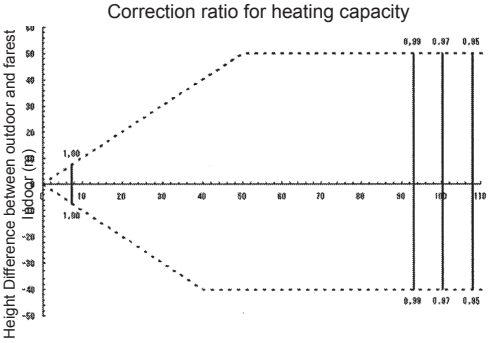

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
46 HP	41.3	22.2

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
46 HP	41.3	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length =
   Equivalent length of main pipe x Correction factor
   +
   Equivalent length of branch pipes

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	
Heating (liquid pipe)	1.0	0.5

Example

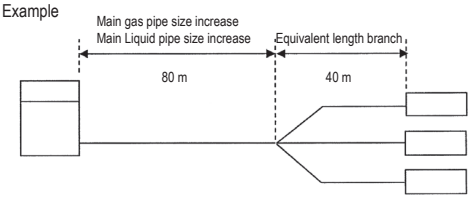

In the above case (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 120 m
(Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
The rate of change in cooling capacity when height difference = 0 is thus approximately 0.83
heating capacity when height difference = 0 is thus approximately 1.0

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RYYQ48U
RXYQQ48U
RXYQ48U

Correction ratio for cooling capacity

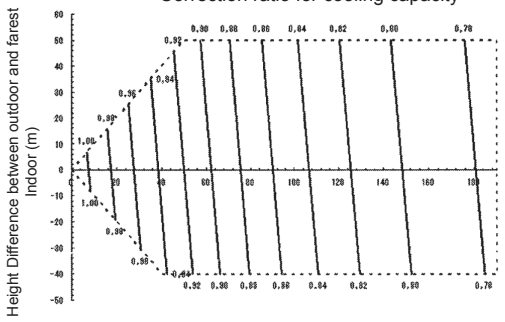

Correction ratio for heating capacity

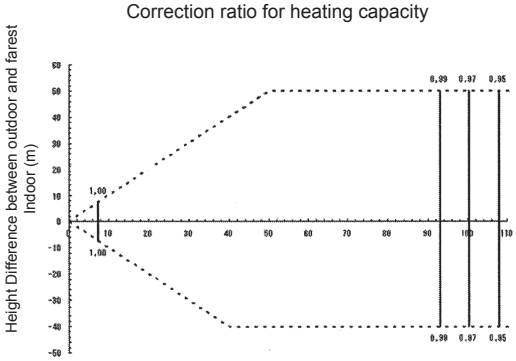

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
48 HP	41.3	22.2

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
48 HP	41.3	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length =

   Equivalent length of main pipe x Correction factor
   +
   Equivalent length of branch pipes

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	
Heating (liquid pipe)	1.0	0.5

Example

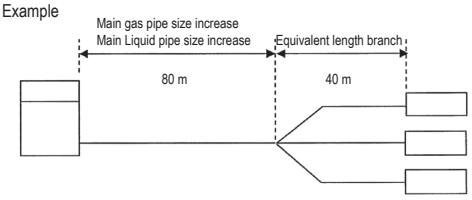

In the above case (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 120 m
(Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m
The rate of change in cooling capacity when height difference = 0 is thus approximately 0.83
heating capacity when height difference = 0 is thus approximately 0.97

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RYYQ50U
RXYQQ50U
RXYQ50U

Correction ratio for cooling capacity

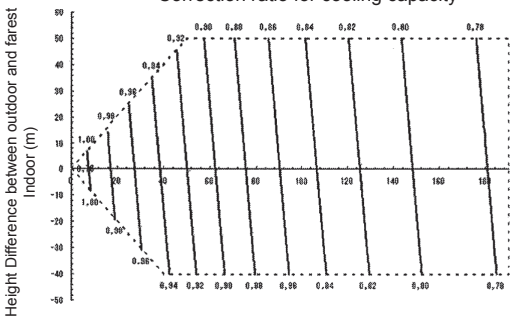

Correction ratio for heating capacity

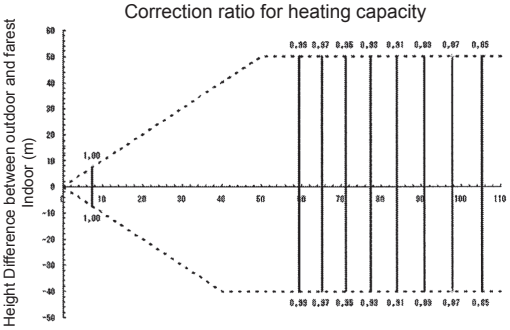

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
50 HP	41.3	22.2

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
50 HP	41.3	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length =

   Equivalent length of main pipe x Correction factor
   +
   Equivalent length of branch pipes

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	
Heating (liquid pipe)	1.0	0.5

Example

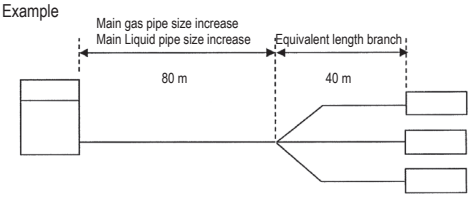

In the above case (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 120 m
(Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m

The rate of change in cooling capacity when height difference = 0 is thus approximately 0.83
heating capacity when height difference = 0 is thus approximately 0.92

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RYYQ52U
RXYQQ52U
RXYQ52U

Correction ratio for cooling capacity

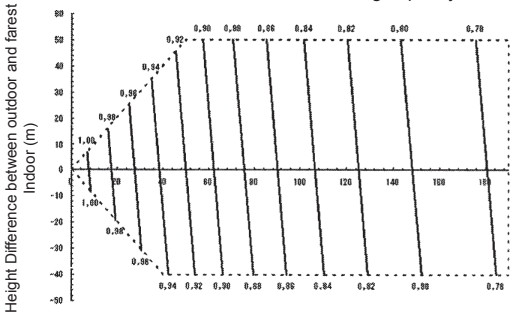

Correction ratio for heating capacity

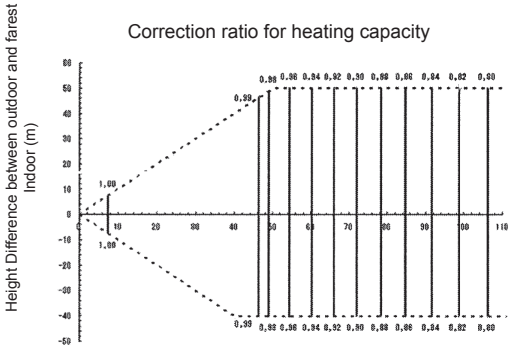

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
52 HP	41.3	22.2

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.
   Diameter of main pipes (standard size)

Model	Gas	Liquid
52 HP	41.3	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

   Equivalent piping length =

   Equivalent length of main pipe x Correction factor
   +
   Equivalent length of branch pipes

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	
Heating (liquid pipe)	1.0	0.5

Example

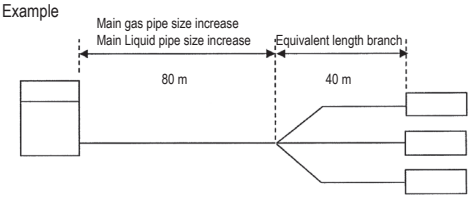

In the above case (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 120 m
(Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m

The rate of change in cooling capacity when height difference = 0 is thus approximately 0.83
heating capacity when height difference = 0 is thus approximately 0.88

3D079897A

5 Capacity tables

5 - 2 Capacity Correction Factor

RYYQ54U
RXYQQ54U
RXYQ54U

Correction ratio for cooling capacity

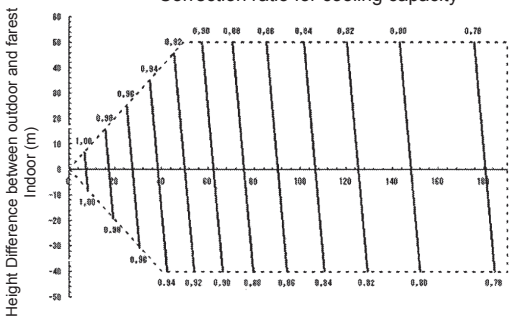

Correction ratio for heating capacity

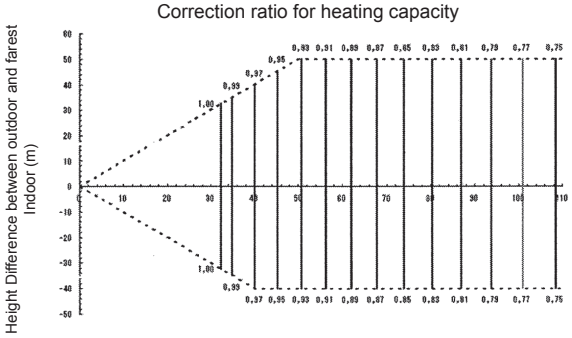

NOTES

1. These figures illustrate the correction ratio for piping length in capacity for a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions, there is only a minor deviation for the capacity correction ratio, shown it the above figures.
2. With this outdoor unit, constant evaporating pressure control when cooling and constant condensing pressure control when heating is carried out.
3. Method of calculating the capacity of the outdoor units
   The maximum capacity of the system will be either the total capacity of the indoor units or the maximum capacity of the outdoor units as mentioned below, whichever is smaller.

   Condition: Indoor connection ratio does not exceed 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at the 100% connection ratio
	x	Correction ratio of piping to furthest indoor

   Condition: Indoor connection ratio exceeds 100%.

Maximum capacity of outdoor units	=	Capacity of outdoor units from capacity table at installed connection ratio
	x	Correction ratio of piping to furthest indoor

4. When level difference is 50 m or more (see installation manual and 3D079540 / 3D079543) and equivalent pipe length is 90 m or more, the diameter of the main gas and liquid pipes (outdoor unit - branch sections) must be increased.
   For new diameters, see below.

Model	Gas	Liquid
54 HP	41.3	22.2

5. When the pipe length after the first refrigerant branch kit is more than 40 m, pipe size between first and final branch kit must be increased (only for VRV DX indoor units; details see installation manual).
   *Refer to the installation manual for allowed system setups and rules for dedicated indoor connection types.

   Diameter of main pipes (standard size)

Model	Gas	Liquid
54 HP	41.3	19.1

6. Equivalent length used in the above figures is based upon the following equivalent length

Equivalent piping length	=	
Equivalent length of main pipe	x	Correction factor
+		
Equivalent length of branch pipes		

   Choose a correction factor from the following table. When cooling capacity is calculated: gas pipe size When heating capacity is calculated: liquid pipe size

	Correction factor	
	Standard size	Size increase
Cooling (gas pipe)	1.0	
Heating (liquid pipe)	1.0	0.5

   Example

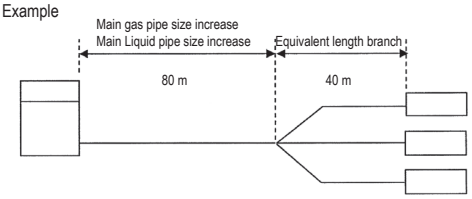

   In the above case (Cooling) Overall equivalent length = 80 m x 1.0 + 40 m = 120 m
   (Heating) Overall equivalent length = 80 m x 0.5 + 40 m = 80 m

   The rate of change in cooling capacity when height difference = 0 is thus approximately 0.83
   heating capacity when height difference = 0 is thus approximately 0.83

3D079897A

6 Dimensional drawings

6 - 1 Dimensional Drawings

RXYQ8-12U, RYYQ8-12, RYMQ8-12U

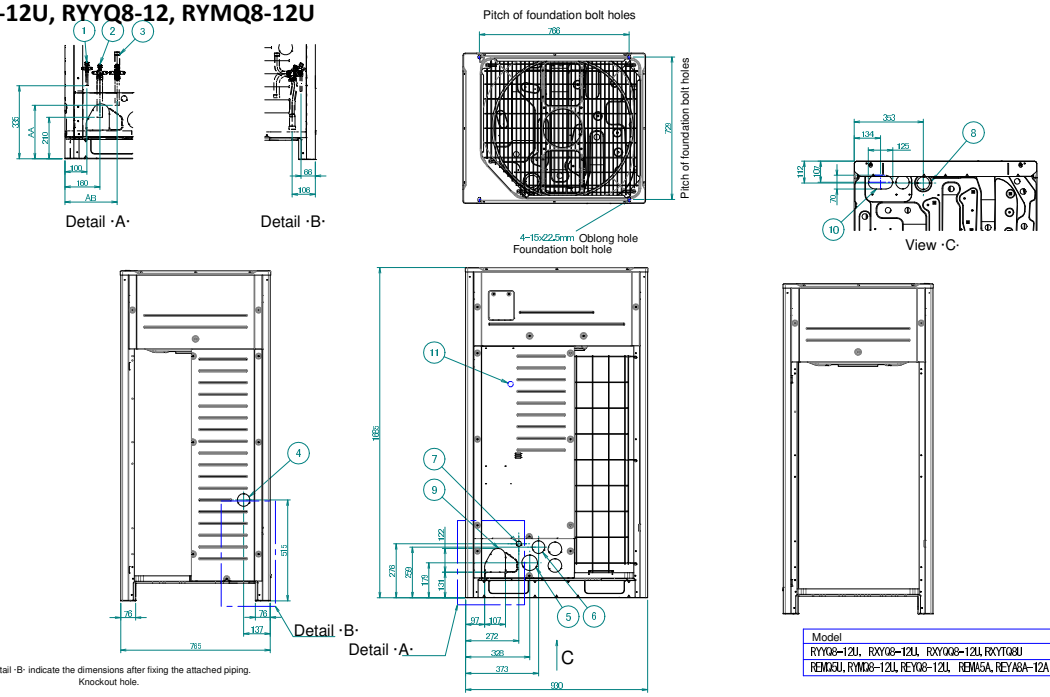

Notes
1. Detail ·A· and detail ·B· indicate the dimensions after fixing the attached piping.
2. Items ·4 - 10·: Knockout hole.
3. **Gas pipe**

RYYQ8U, RYMQ8U, RXYQ8U, RXYQQ8U, RXYTQ8U	: Ø ·19.1· brazing connection
RYYQ10U, RYMQ10U, RXYQ10U, RXYQQ10U	: Ø ·22.2· brazing connection
REMQ5U, REMA5A, REYQ8-12U, REYA8-12A	: Ø ·25.4· brazing connection
RYYQ12U, RYMQ12U, RXYQ12U, RXYQQ12U	: Ø ·28.6· brazing connection
Liquid pipe	
RYYQ8-10U, RYMQ8-10U, RXYQ8-10U, RXYQQ8-10U, REMQ5U, REMA5A, REYQ8-12U, REYA8-12A, RXYTQ8U	: Ø ·9.5· brazing connection
RYYQ12U, RYMQ12U, RXYQ12U, RXYQQ12U	: Ø ·12.7· brazing connection
Equalising pipe	
RYMQ8-10U	: Ø ·19.1· brazing connection
RYMQ12U	: Ø ·22.2· brazing connection
High pressure/low pressure gas pipe	
REMQ5U, REMA5A, REYQ8-12U, REYA8-12A	: Ø ·19.1· brazing connection

Model	AA	AB
RYYQ8-12U, RXYQ8-12U, RXYQQ8-12U, RXYTQ8U	–	–
REMQ5U, RYMQ8-12U, REYQ8-12U, REMA5A, REYA8A-12A	240	240

No.	Part name	Remark
1	Liquid pipe connection port	See note ·3·.
2	Gas pipe connection port	See note ·3·.
3	Equalising pipe connection port High pressure/low pressure gas pipe	See note ·3·.
4	Power cord routing hole (side)	Ø65
5	Power cord routing hole (front)	Ø80
6	Power cord routing hole (front)	Ø65
7	Power cord routing hole (front)	Ø27
8	Power cord routing hole (bottom)	Ø65
9	Pipe routing hole (front)	
10	Pipe routing hole (bottom)	
11	Grounding terminal	Inside of the switch box (-M8-)

2D119001A

RXYQ14-20, RYYQ14-20U, RYMQ14-20U

Model	AA	AB
RXYQ14-20U, RYYQ14-20U, RXYQQ14-20U, RXYTQ10-16U	-	-
RYMQ14-16U, REYQ14-20U, REYA14-20A	240	240
RYMQ18-20U	240	192

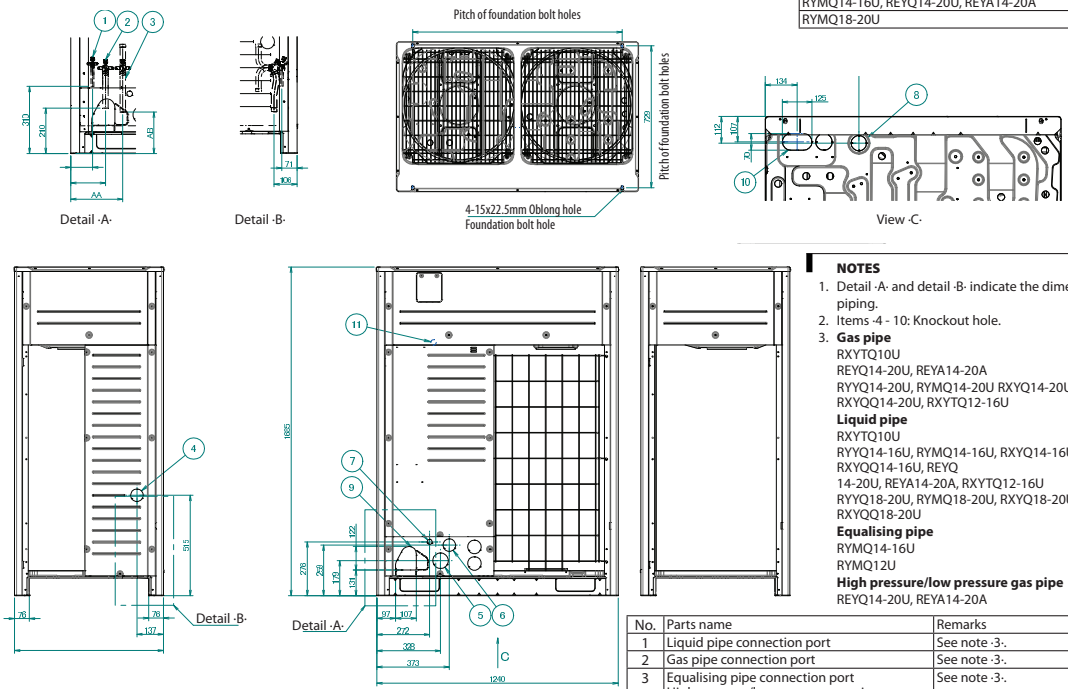

NOTES
1. Detail ·A· and detail ·B· indicate the dimensions after fixing the attached piping.
2. Items ·4 - 10: Knockout hole.
3. **Gas pipe**

RXYTQ10U	: Ø ·22.2· brazing connection
REYQ14-20U, REYA14-20A	: Ø ·25.4· brazing connection
RYYQ14-20U, RYMQ14-20U RXYQ14-20U, RXYQQ14-20U, RXYTQ12-16U	: Ø ·28.6· brazing connection
Liquid pipe	
RXYTQ10U	: Ø ·9.5· brazing connection
RYYQ14-16U, RYMQ14-16U, RXYQ14-16U, RXYQQ14-16U, REYQ	
14-20U, REYA14-20A, RXYTQ12-16U	: Ø ·12.7· brazing connection
RYYQ18-20U, RYMQ18-20U, RXYQ18-20U, RXYQQ18-20U	: Ø ·15.9· brazing connection
Equalising pipe	
RYMQ14-16U	: Ø ·22.2· brazing connection
RYMQ12U	: Ø ·28.6· brazing connection
High pressure/low pressure gas pipe	
REYQ14-20U, REYA14-20A	: Ø ·19.1· brazing connection

No.	Parts name	Remarks
1	Liquid pipe connection port	See note ·3·.
2	Gas pipe connection port	See note ·3·.
3	Equalising pipe connection port High pressure/low pressure gas pipe	See note ·3·.
4	Power cord routing hole (side)	Ø65
5	Power cord routing hole (front)	Ø80
6	Power cord routing hole (front)	Ø65
7	Power cord routing hole (front)	Ø27
8	Power cord routing hole (bottom)	Ø65
9	Pipe routing hole (front)	
10	Pipe routing hole (bottom)	
11	Grounding terminal	Inside of the switch box (-M8-)

2D119091A

7 Centre of gravity

7 - 1 Centre of Gravity

RXYQ8-12U
RYYQ8-12U
RYMQ8-12U

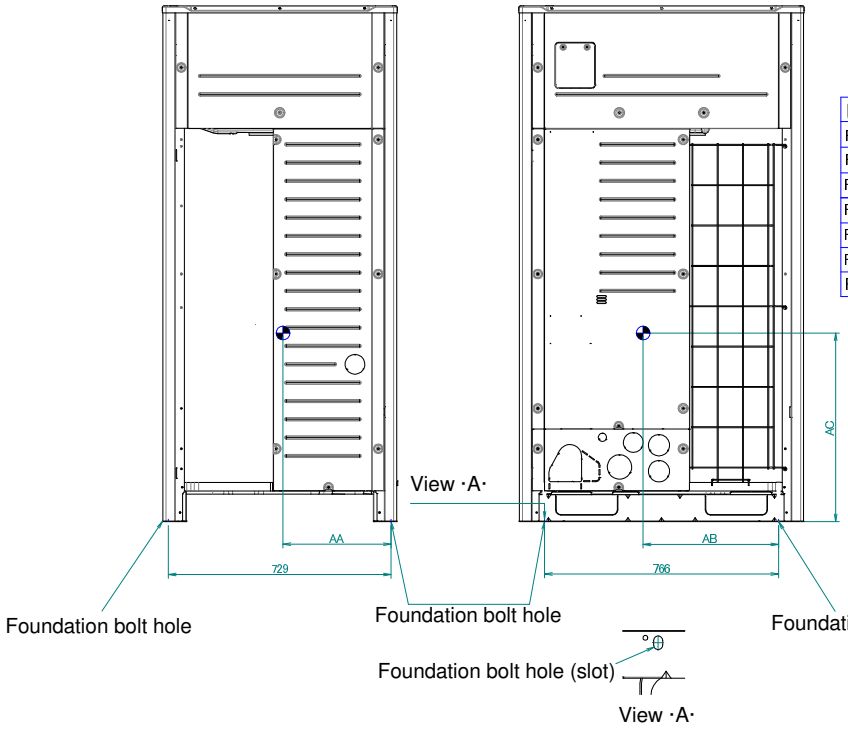

Unit	AA	AB	AC
RYYQ8-12U	328	366	565
REMQ5U / REYQ8-12U			
RYMQ8-12U	354	443	565
RXYQ8-12U	339	448	565
RXYQQ8-12U			
RXYTQ8U			
REMA5A / REYA8-12A	353	426	690

3D119703A

7 Centre of gravity

7 - 1 Centre of Gravity

RXYQ14-20U
RYYQ14-20U
RYMQ14-20U

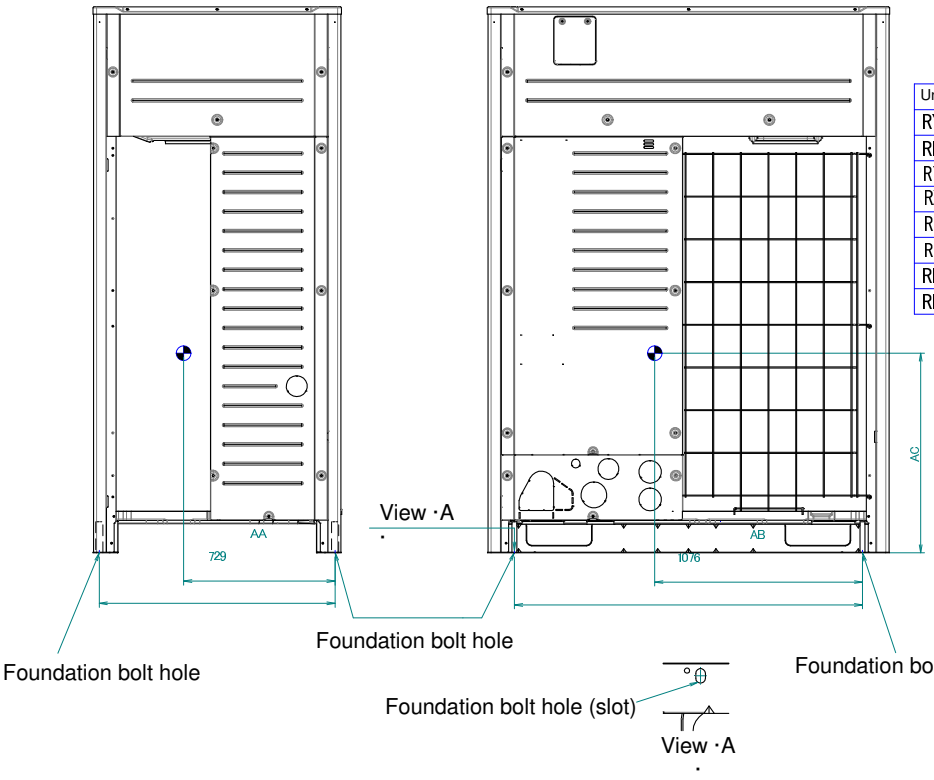

Unit	AA	AB	AC
RYYQ14-20U	334	470	610
REYQ14-20U	334	470	610
RYMQ14-20U	360	569	610
RXYQ(Q)14-20U	345	575	610
RXYTQ10-12U	350	610	810
RXYTQ14-16U	351	565	610
REYA14-16A	339	596	758
REYA18-20A	350	587	752

3D119704A

8 Piping diagrams

8 - 1 Piping Diagrams

RXYQ8-12U
RXYTQ8UYF

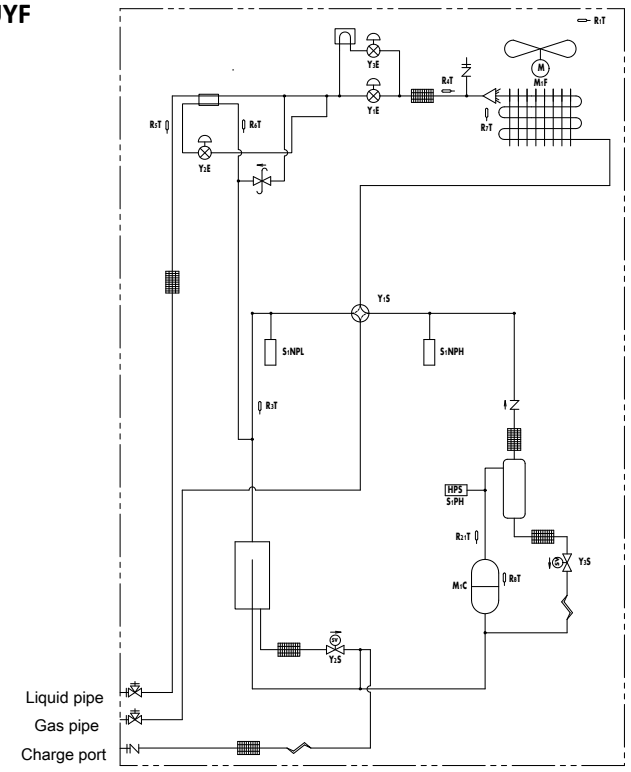

- Charge port / Service port
- Stop valve
- Filter
- Check valve
- Pressure relief valve
- Thermistor
- Heat sink (PCB)
- Capillary tube
- Expansion valve
- 4-way valve
- Propeller fan
- High pressure switch
- Low pressure sensor
- High pressure sensor
- Accumulator
- Heat exchanger
- Compressor
- Oil separator
- Double tube heat exchanger
- Distributor
- Solenoid valve

3D118179

RXYQ14-20U
RXYQ14-16UYF

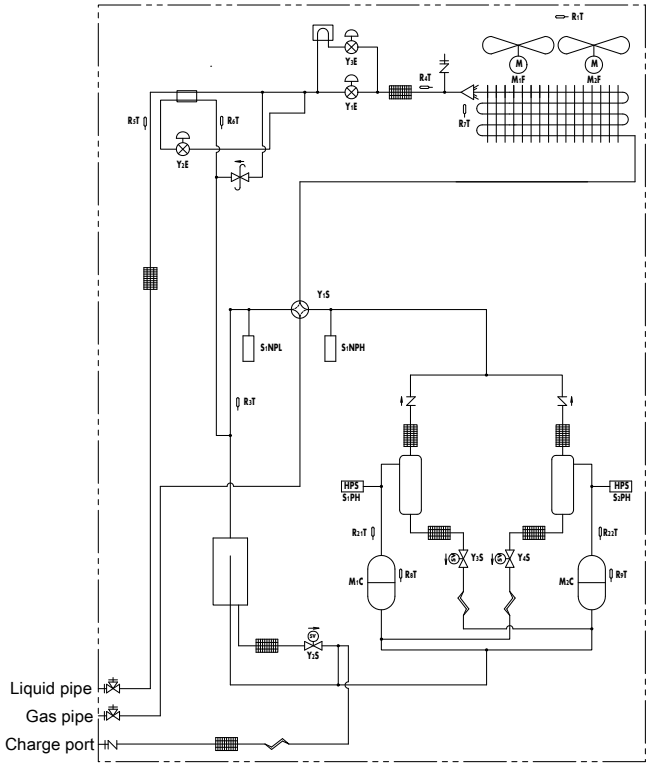

- Charge port / Service port
- Stop valve
- Filter
- Check valve
- Pressure relief valve
- Thermistor
- Heat sink (PCB)
- Capillary tube
- Expansion valve
- 4-way valve
- Propeller fan
- High pressure switch
- Low pressure sensor
- High pressure sensor
- Accumulator
- Heat exchanger
- Compressor
- Oil separator
- Double tube heat exchanger
- Distributor
- Solenoid valve

3D118180

9 Wiring diagrams

9 - 1 Wiring Diagrams - Three Phase

RXYQ8-12U
RXYTQ8UYF
RYYQ8-12U
RYMQ8-12U

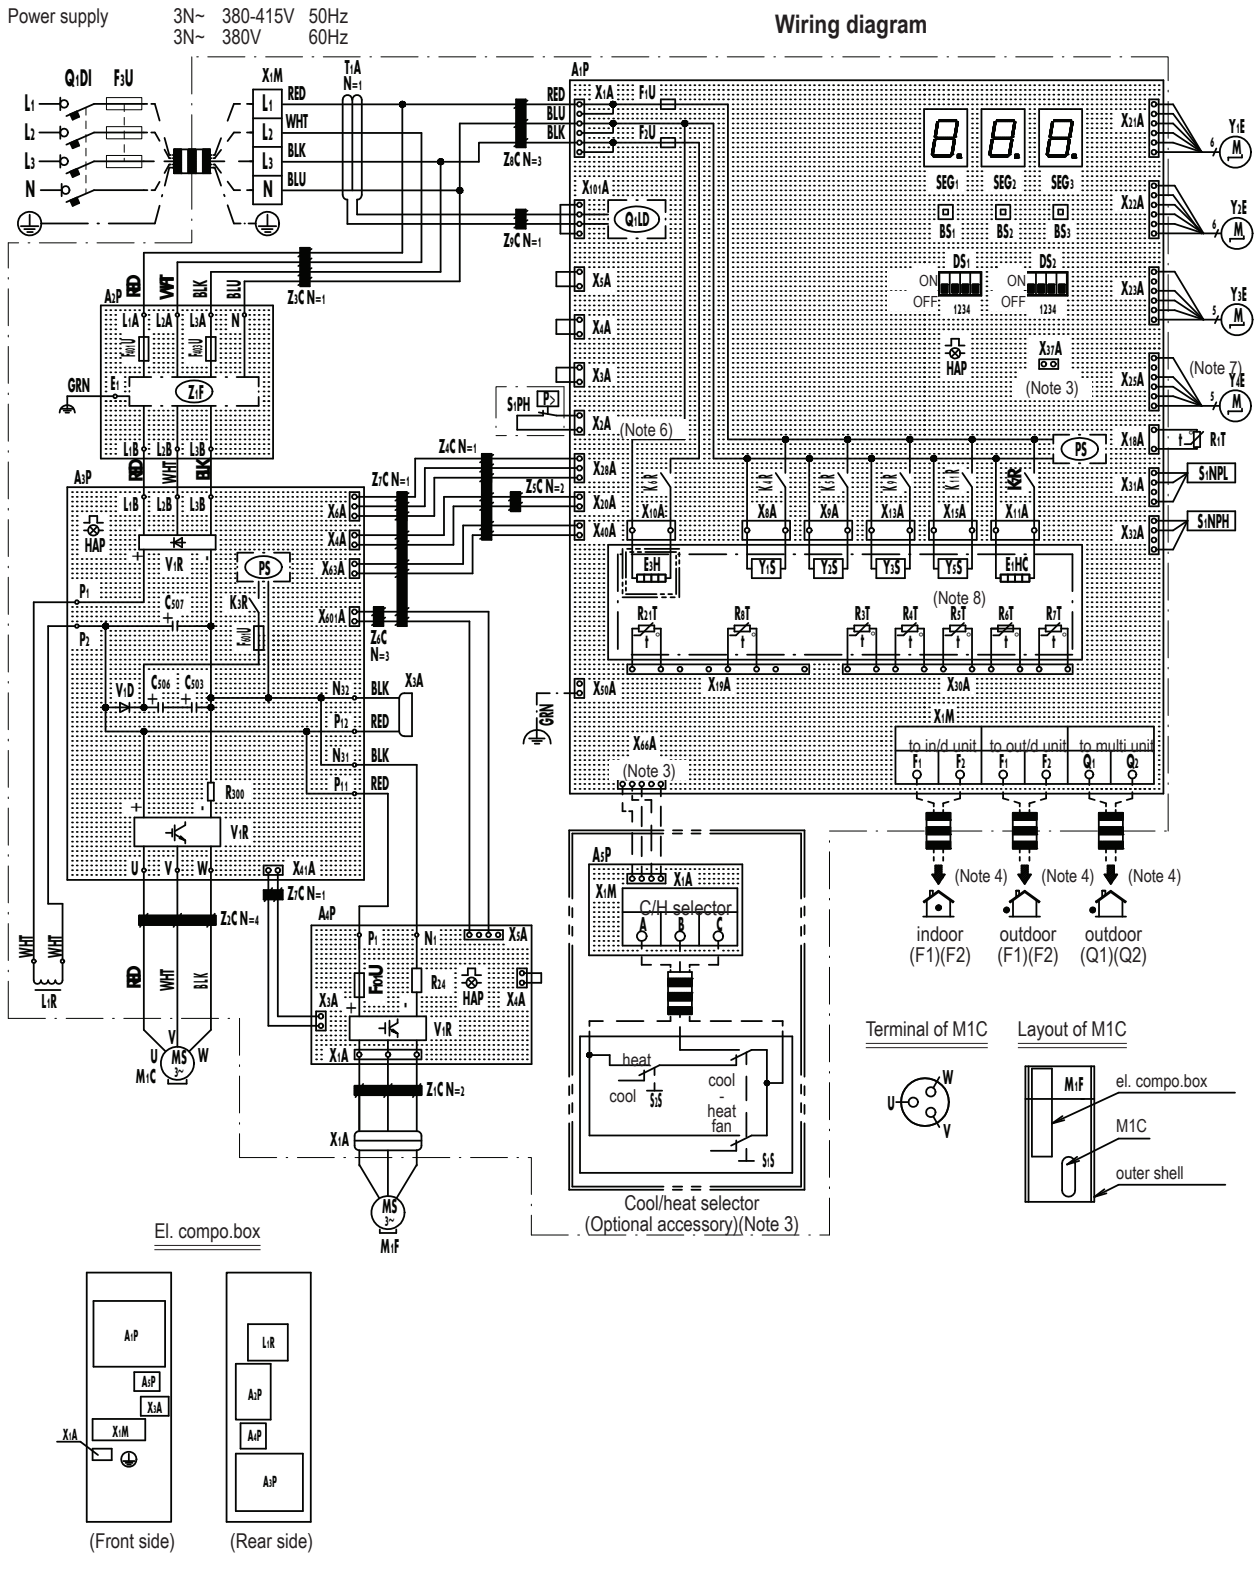

2D117534

9 Wiring diagrams

9 - 1 Wiring Diagrams - Three Phase

RXYQ8-12U
RXYTQ8UYF
RYYQ8-12U
RYMQ8-12U

A1P	Printed Circuit Board (Main)	R3T	Thermistor (Accumulator)
A2P	Printed Circuit Board (Noise Filter)	R4T	Thermistor (Heat Exc,Liq,Pipe)
A3P	Printed Circuit Board (Inv)	R5T	Thermistor (Subcool,Liq,Pipe)
A4P	Printed Circuit Board (Fan)	R6T	Thermistor (Heat Exc,Gas Pipe)
A5P	Printed Circuit Board (ABC I/P)(Option)	R7T	Thermistor (Heat Exc,Deicer)
BS1~3 (A1P)	Push Button Switch (Mode,Set,Return)	R8T	Thermistor (M1C body)
C503,C506,C507 (A3P)	Capacitor	R21T	Thermistor (M1C discharge)
DS1,DS2 (A1P)	DIP Switch	S1NPH	Pressure Sensor (High)
E1HC	Crankcase Heater	S1NPL	Pressure Sensor (Low)
E3H	Drainpan Heater (Option)	S1PH	Pressure Switch (Disch)
F1U,F2U (A1P)	Fuse (T,3,15A,250V)	SEG1~SEG3 (A1P)	7-Segment Display
F3U	Field Fuse	T1A	Current Sensor
F101U (A4P)	Fuse	V1D (A3P)	Diode
F401U,F403U (A2P)	Fuse	V1R (A3P,A4P)	Power Module
F601U (A3P)	Fuse	X*A	Connector
HAP (A1P,A3P, A4P)	Pilotlamp (Service Monitor-Green)	X1M (A1P)	Terminal Block (Control)
K3R (A3P)	Magnetic Relay	X1M (A5P)	Terminal Block (Power Supply)(Option)
K4R (A1P)	Magnetic Relay (Y1S)	Y1E	Electronic Expansion Valve(Main)
K5R (A1P)	Magnetic Relay (Y2S)	Y2E	Electronic Expansion Valve (Injection)
K6R (A1P)	Magnetic Relay (E3H)	Y3E	Electronic Expansion Valve (Refrigerant Jacket)
K7R (A1P)	Magnetic Relay (E1HC)	Y4E	Electronic Expansion Valve (Storage Vessel)
K9R (A1P)	Magnetic Relay (Y3S)	Y1S	Solenoid Valve (Main)
K11R (A1P)	Magnetic Relay (Y5S)	Y2S	Solenoid Valve (Accumulator Oil Return)
L1R	Reactor	Y3S	Solenoid Valve (Oil1)
M1C	Motor (Compressor)	Y5S	Solenoid Valve (Sub)
M1F	Motor (Fan)	Z*C	Noise Filter (Ferrite Core)
PS (A1P,A3P)	Switching Power Supply	Z*F (A2P)	Noise Filter (With Surge Absorber)
Q1DI	Field Earth Leakage Breaker	Connector For Optional Accessories	
Q1LD (A1P)	Field Earth Current Detector	X10A	Connector (Drainpan Heater)
R24 (A4P)	Resistor (Current Sensor)	X37A	Connector (Power Adapter)
R300 (A3P)	Resistor (Current Sensor)	X66A	Connector (Remote Switching Cool/Heat Selector)
R1T	Thermistor (Air)		

NOTES

1. This wiring diagram applies only to the outdoor unit.
2. :field wiring, : terminal block, : connector, : terminal, : protective earth (screw), : functional earth, : earth wiring, : field supply, : PCB, : switch box, : option
3. When using the optional adapter, refer to the installation manual of the optional adapter.
4. For connection wiring to indoor-outdoor transmission F1-F2, outdoor-outdoor transmission F1-F2, outdoor-multi transmission Q1-Q2, refer to the installation manual.
5. How to use BS1~3 switch. Refer to “service precaution” label on el. compo. box cover.
6. When operating, don’t shortcircuit the protection devices (S1PH).
7. Only for RYYQ model.
8. Only for RYYQ/RYMQ model.
9. Colors: BLK: Black, RED: Red, BLU: Blue, WHT: White, GRN: Green.

2D117534

9 Wiring diagrams

9 - 1 Wiring Diagrams - Three Phase

RXYQ14-20U
RYYQ14-20U
RYMQ14-20U

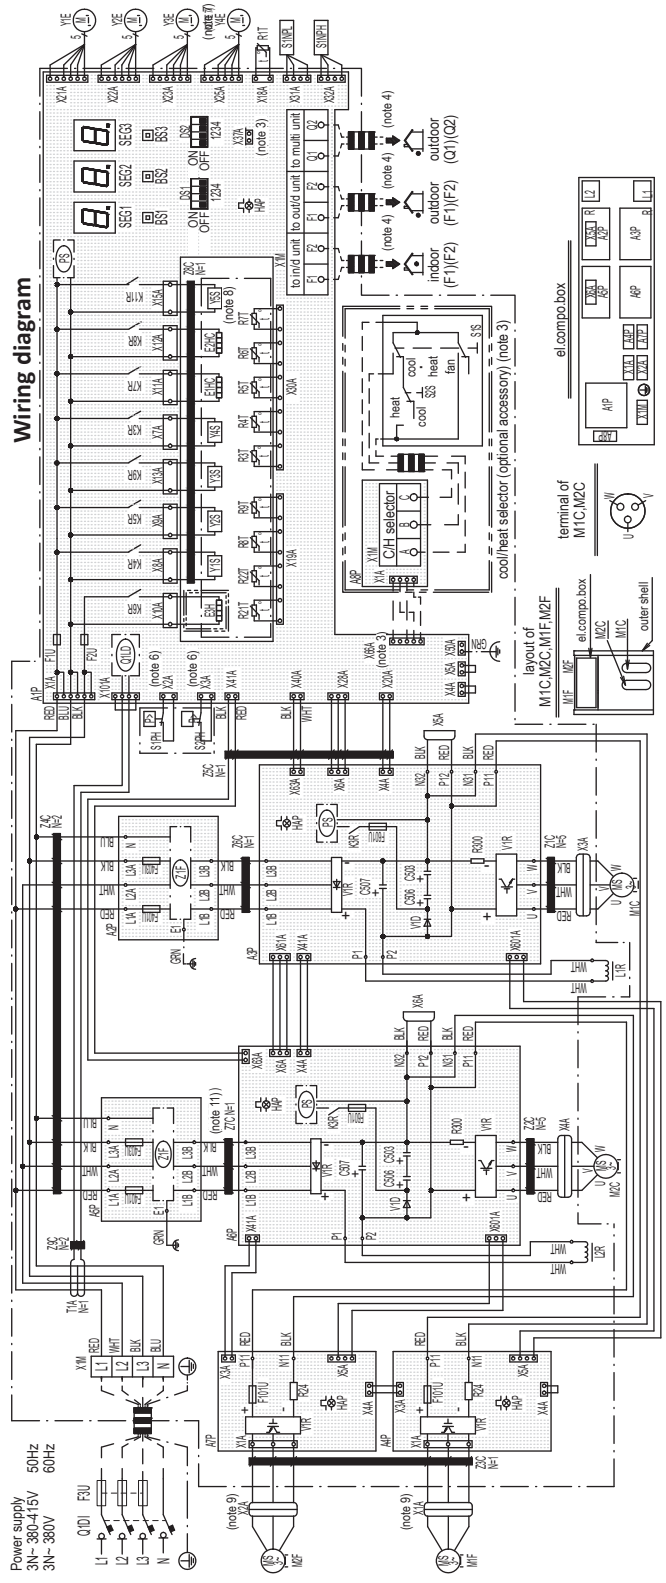

A1P	Printed circuit board (main)
A2P, A5P	Printed circuit board (noise filter)
A3P, A6P	Printed circuit board (inv)
A4P, A7P	Printed circuit board (fan)
A8P	Printed circuit board (ABC I/P)
BS1~3 (A1P)	Push button switch (mode, set, return)
C503, C506, C507 (A3P, A6P)	Capacitor
DS1, DS2 (A1P)	Dip switch S1PH,
E1HC, E2HC	Crankcase heater
E3H	Drainpan heater (option)
F1U, F2U (A1P)	Fuse (T, 3, 15A, 250V)
F3U	Field fuse
F101U (A4P, A7P)	Fuse
F401U, F403U (A2P, A5P)	Fuse
F601U (A3P, A6P)	Fuse
HAP (A1P, A3P, A4P, A6P, A7P)	Pilotlamp (service monitor-green)
K3R (A3P, A6P)	Magnetic relay
K3R (A1P)	Magnetic relay (Y4S)
K4R (A1P)	Magnetic relay (Y1S)
K5R (A1P)	Magnetic relay (Y2S)
K6R (A1P)	Magnetic relay (E3H)
K7R (A1P)	Magnetic relay (E1HC)
K8R (A1P)	Magnetic relay (E2HC)
K9R (A1P)	Magnetic relay (Y3S)
K11R (A1P)	Magnetic relay (Y5S)
L1R, L2R	Reactor
M1C, M2C	Motor (compressor)
M1F, M2F	Motor (fan)
PS (A1P, A3P, A6P)	Switching power supply
Q1DI	Field earth leakage breaker
Q1LD (A1P)	Field earth current detector
R24 (A4P, A7P)	Resistor (current sensor)
R300 (A3P, A6P)	Resistor (current sensor)
R1T	Thermistor (air)
R3T	Thermistor (accumulator)
R4T	Thermistor (heat exc, liq, pipe)
R5T	Thermistor (subcool, liq, pipe)
R6T	Thermistor (heat exc, gas pipe)
R7T	Thermistor (heat exc, deicer)
R8T, R9T	Thermistor (M1C, M2C body)
R21T, R22T	Thermistor (M1C, M2C discharge)
S1NPH	Pressure sensor (high)
S1NPL	Pressure sensor (low)
S1PH, S2PH	Pressure switch (disch)
SEG1~SEG3 (A1P)	7-segment display
T1A	Current sensor
V1D (A3P, A6P)	Diode
V1R (A3P, A4P, A6P, A7P)	Power module
X*A	Connector
X1M (A1P)	Terminal block (control)
X1M (A8P)	Terminal block (power supply)
Y1E	Electronic expansion valve (main)
Y2E	Electronic expansion valve (injection)
Y3E	Electronic expansion valve (refrigerant jacket)
Y4E	Electronic expansion valve (storage vessel (note 7)
Y1S	Solenoid valve (main)
Y2S	Solenoid valve (accumulator oil return)
Y3S	Solenoid valve (oil1)
Y4S	Solenoid valve (oil2)
Y5S	Solenoid valve (sub) (note 8)
Z*C	Noise filter (ferrite core)
Z*F (A2P, A5P)	Noise filter (with surge absorber)
Connector for optional accessories	
X10A	Connector (drainpan heater)
X37A	Connector (power adapter)
X66A	Connector (remote switching
	Cool/heat selector)

NOTES

1. This wiring diagram applies only to the outdoor unit.
2. ::▮▮▮::: Field wiring, ▭▭▭: terminal block, ▭: connector, -○- :terminal, ⏚: protective earth (screw), ⏚: functional earth, ——: earth wiring, — — —: field supply, ▭: pcb, ▭: switch box, ▭: option
3. When using the optional adapter, refer to the installation manual of the optional adapter.
4. For connection wiring to indoor-outdoor transmission F1-F2, outdoor-outdoor transmission F1-F2, outdoor-multi transmission Q1-Q2, refer to the installation manual.
5. How to use BS1~3 switch. Refer to "service precaution" label on el. Compo. Box cover.
6. When operating, don't shortcircuit the protection devices (S1PH,S2PH)
7. Only for RYYQ model.
8. Only for RYYQ/RYMQ model.
9. Connector X1A (M1F) is red, connector X2A (M2F) is white.
10. Colors: BLK:black, RED:red, BLU:blue, WHT:white, GRN:green.
11. Only for 14,16 class

2D117536C

10 External connection diagrams

10 - 1 External Connection Diagrams

RXYQQ8-20U
RXYQ8-20U
RXYTQ8-16UYF
RYYQ8-20U
RYMQ8-20U

Notes

1. All wiring, components and materials to be procured on-site must comply with the applicable legislation.
2. Use copper conductors only
3. For details, refer to the wiring diagram attached to the outdoor unit.
4. Install a circuit breaker for safety.
5. All field wiring and components must be provided by an authorised electrician.
6. Unit has to be grounded in compliance with the applicable legislation.
7. The wiring shown is a general points-of-connection guide and is not intended to include all details for a specific installation.
8. Make sure to install the switch and the fuse to the power line of each equipement.
9. Install a main switch to control the multiple power sources that the various components of the system make use of.
10. The capacity of UNIT1 must be larger than that of UNIT2 when the power source is connected in series between the units.
    The capacity of UNIT 2 must be larger than that of UNIT3 when the power source is connected in series between the units.
11. If there exists the possibility of reversed phase, loose phase or momentary blackout, or if the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
    Running the product in reversed phase may break the compressor and other parts.
12. Install an earth leakage circuit breaker.

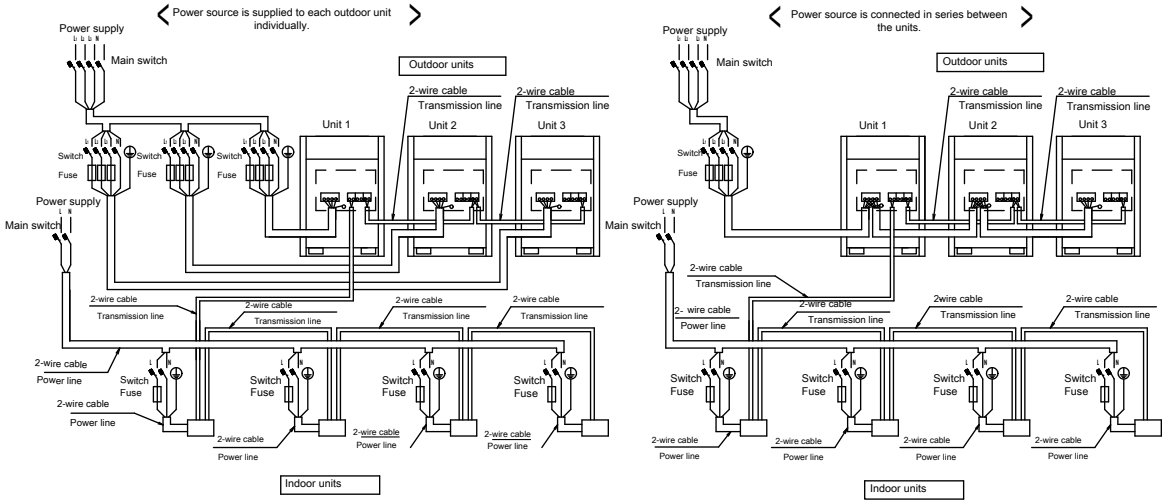

3D119200

RXYQQ8-20U
RXYQ8-20U
RXYTQ8-16U
RYYQ8-20U
RYMQ8-26U

Notes

1. All wiring, components and materials to be procured on-site must comply with the applicable legislation.
2. Use copper conductors only
3. For details, refer to the wiring diagram attached to the outdoor unit.
4. Install a circuit breaker for safety.
5. All field wiring and components must be provided by an authorised electrician.
6. Unit has to be grounded in compliance with the applicable legislation.
7. The wiring shown is a general points-of-connection guide and is not intended to include all details for a specific installation.
8. Make sure to install the switch and the fuse to the power line of each equipement.
9. Install a main switch to control the multiple power sources that the various components of the system make use of.
10. The capacity of UNIT1 must be larger than that of UNIT2 when the power source is connected in series between the units.
11. If there exists the possibility of reversed phase, loose phase or momentary blackout, or if the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
    Running the product in reversed phase may break the compressor and other parts.
12. Install an earth leakage circuit breaker.

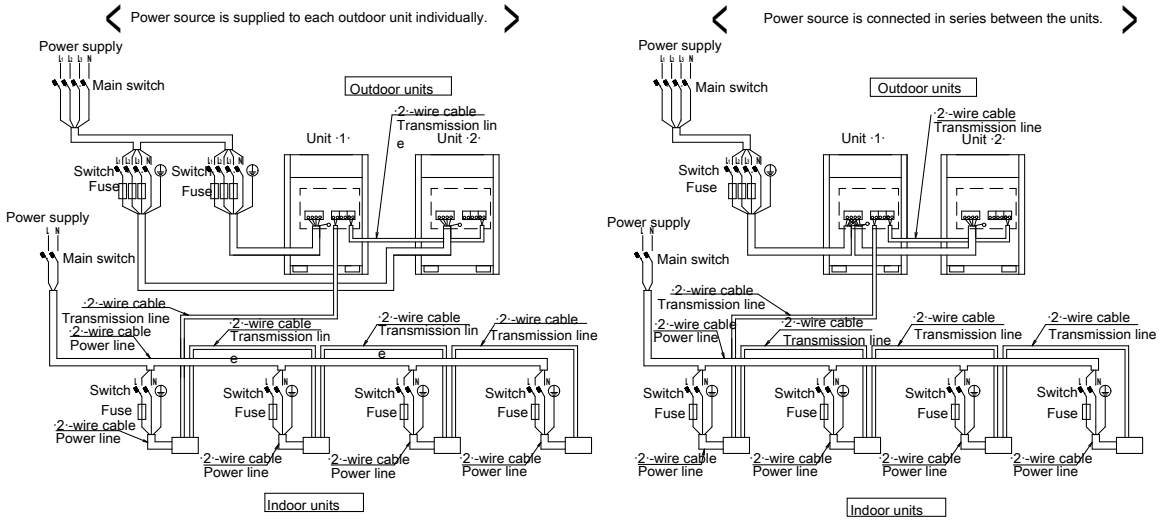

3D119316

10 External connection diagrams

10 - 1 External Connection Diagrams

RXYQQ8-20U
RXYQ8-20U
RYYQ8-20U
RYMQ8-20U
RXYTQ8-16UYF

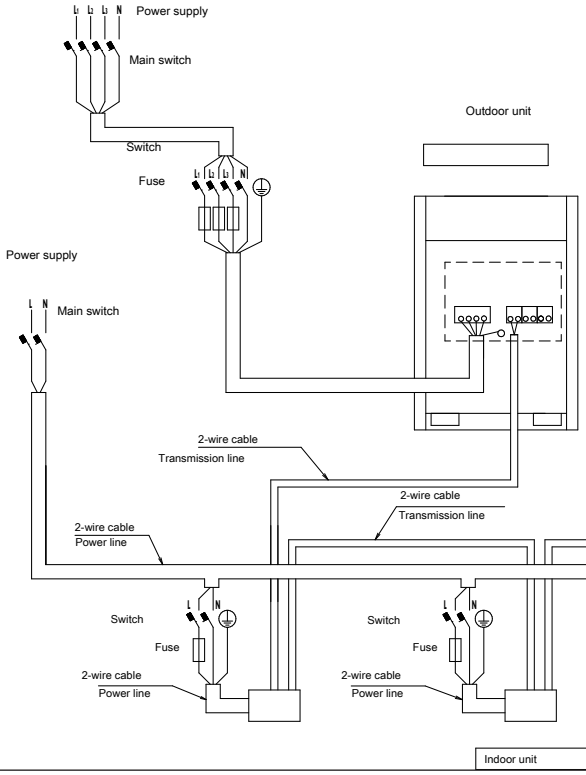

Notes

1. All wiring, components and materials to be procured on-site must comply with the applicable le gislation.
2. Use copper conductors only
3. For details, refer to the wiring diagram attached to the outdoor unit.
4. Install a circuit breaker for safety.
5. All field wiring and components must be provided by an authorised electrician.
6. Unit has to be grounded in compliance with the applicable legislation.
7. The wiring shown is a general points-of-connection guide and is not intended to include all details for a specific installation.
8. Make sure to install the switch and the fuse to the power line of each equipement.
9. Install a main switch to control the multiple power sources that the various components of t he system make use of.
10. If there exists the possibility of reversed phase, loose phase or momentary blackout, or if the power g oes on and off while the product is operating, attach a reversed phase protection circuit locally.

    Running the product in reversed phase may break the compressor and other parts.
11. Install an earth leakage circuit breaker.

3D119317

11 Sound data

11 - 1 Sound Power Spectrum

REMQ5U
REYQ8U
RXYQQ8U
RXYQ8U
RXYTQ8UYF
RYYQ8U
RYMQ8U

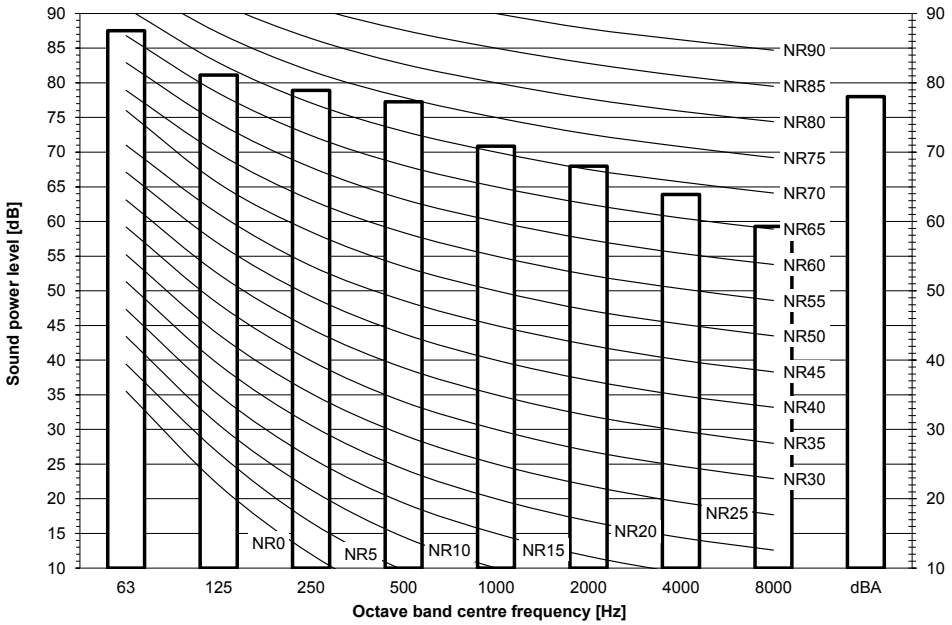

Notes
dBA = A-weighted sound power level (A scale according to IEC).
Reference acoustic intensity 0dB = 10E-6µW/m²
Measured according to ISO 3744

3D119528

REYQ10U
RXYQQ10U
RXYQ10U
RYYQ10U
RYMQ10U

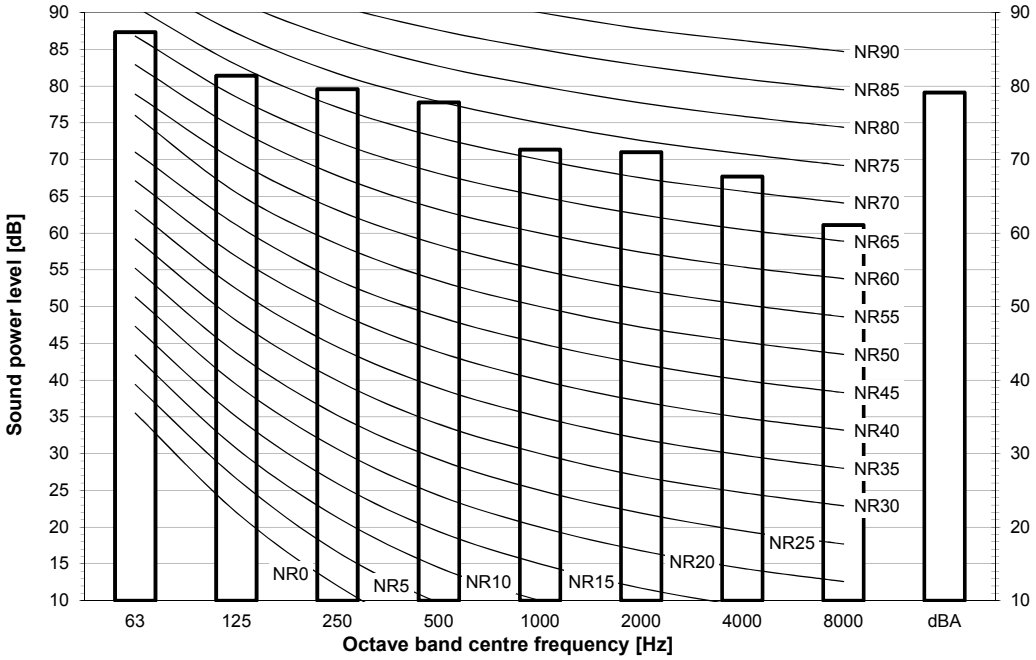

Notes
dBA = A-weighted sound power level (A scale according to IEC).
Reference acoustic intensity 0dB = 10E-6µW/m²
Measured according to ISO 3744

3D119529

11 Sound data

11 - 1 Sound Power Spectrum

REYQ12U
RXYQQ12U
RXYQ12U
RYYQ12U
RYMQ12U

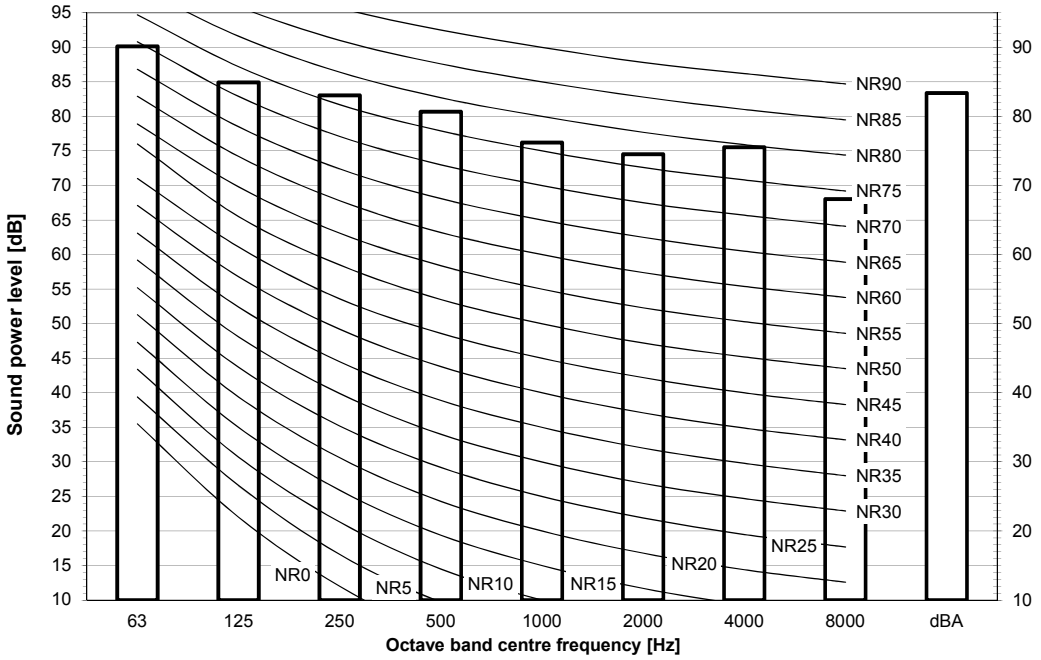

Notes
dBA = A-weighted sound power level (A scale according to IEC).
Reference acoustic intensity 0dB = 10E-6µW/m²
Measured according to ISO 3744

3D119530

REYQ14U
RXYQQ14U
RXYQ14U
RYYQ14U
RYMQ14U

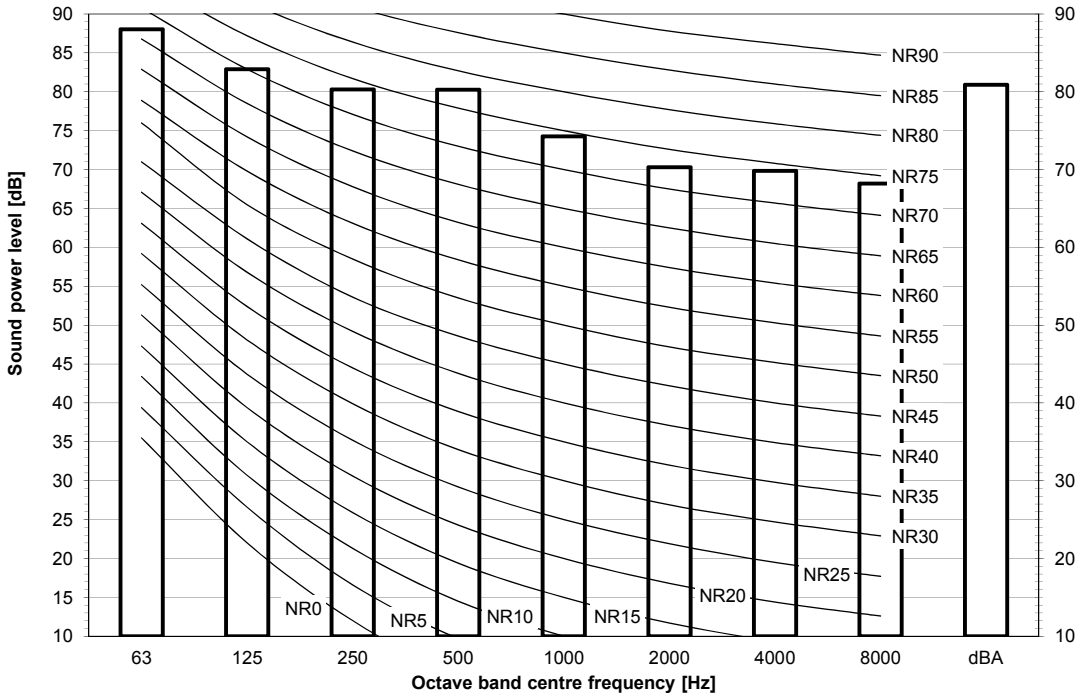

Notes
dBA = A-weighted sound power level (A scale according to IEC).
Reference acoustic intensity 0dB = 10E-6µW/m²
Measured according to ISO 3744

3D119531

11 Sound data

11 - 1 Sound Power Spectrum

REYQ16U
RXYQQ16U
RXYQ16U
RYYQ16U
RYMQ16U

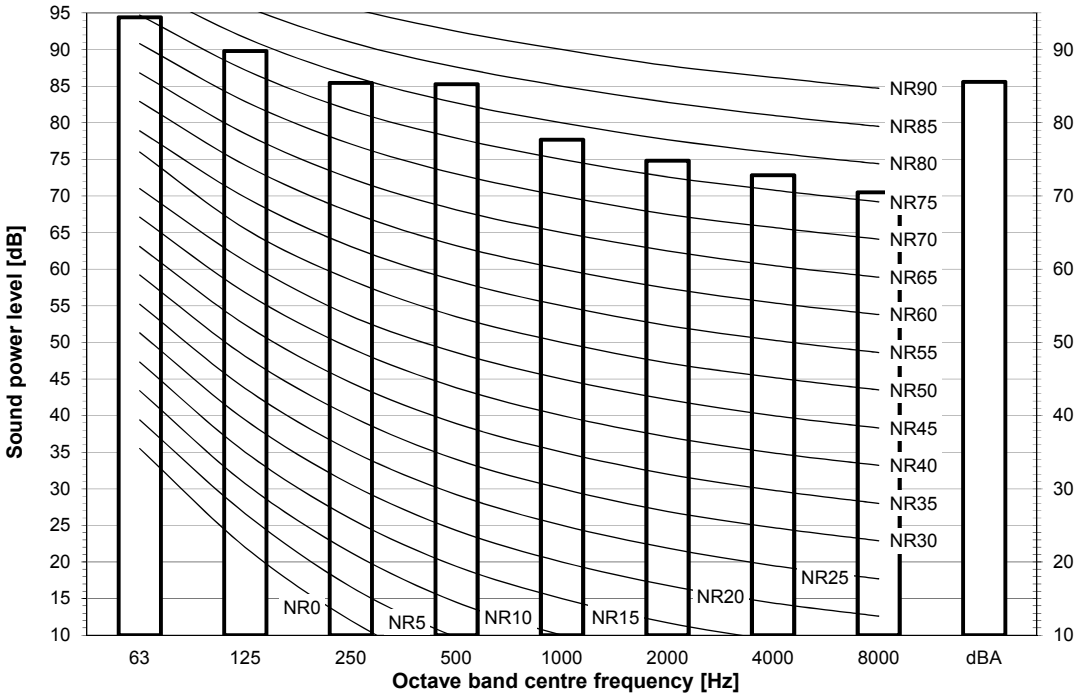

Notes
dBA = A-weighted sound power level (A scale according to IEC).
Reference acoustic intensity 0dB = 10E-6µW/m²
Measured according to ISO 3744

3D119532

REYQ18U
RXYQQ18U
RXYQ18U
RYYQ18U
RYMQ18U

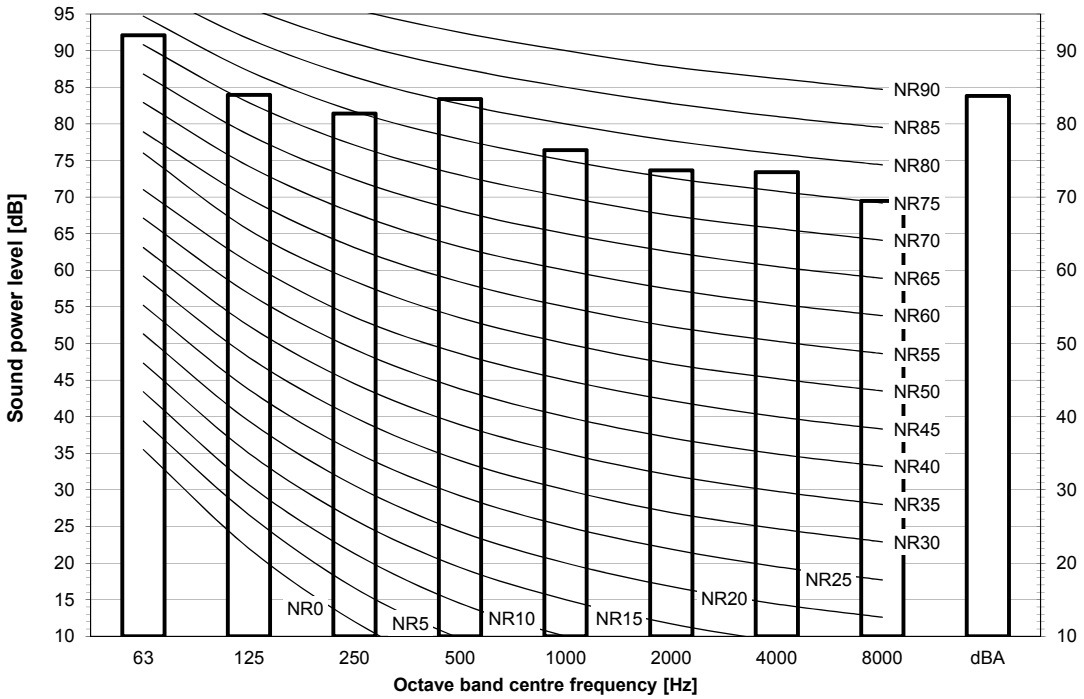

Notes
dBA = A-weighted sound power level (A scale according to IEC).
Reference acoustic intensity 0dB = 10E-6µW/m²
Measured according to ISO 3744

3D119533

11 Sound data

11 - 1 Sound Power Spectrum

REYQ20U
RXYQQ20U
RXYQ20U
RYYQ20U
RYMQ20U

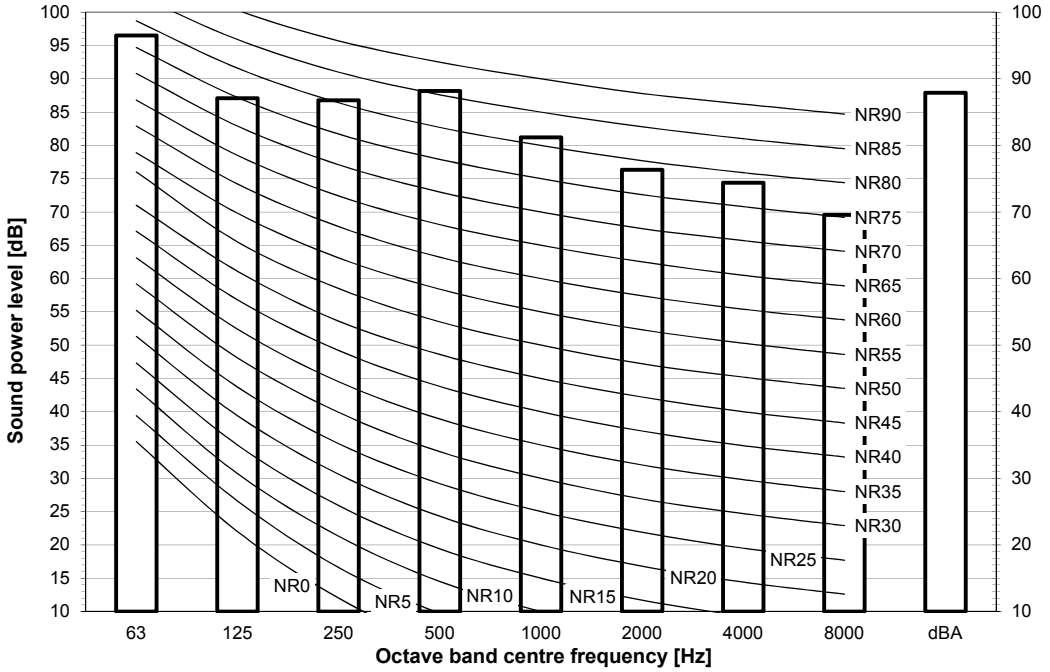

Notes
dBA = A-weighted sound power level (A scale according to IEC).
Reference acoustic intensity 0dB = 10E-6µW/m²
Measured according to ISO 3744

3D119534

11 Sound data

11 - 2 Sound Pressure Spectrum

REMQ5U
REYQ8U
RXYQQ8U
RXYQ8U
RXYTQ8UYF
RYYQ8U
RYMQ8U

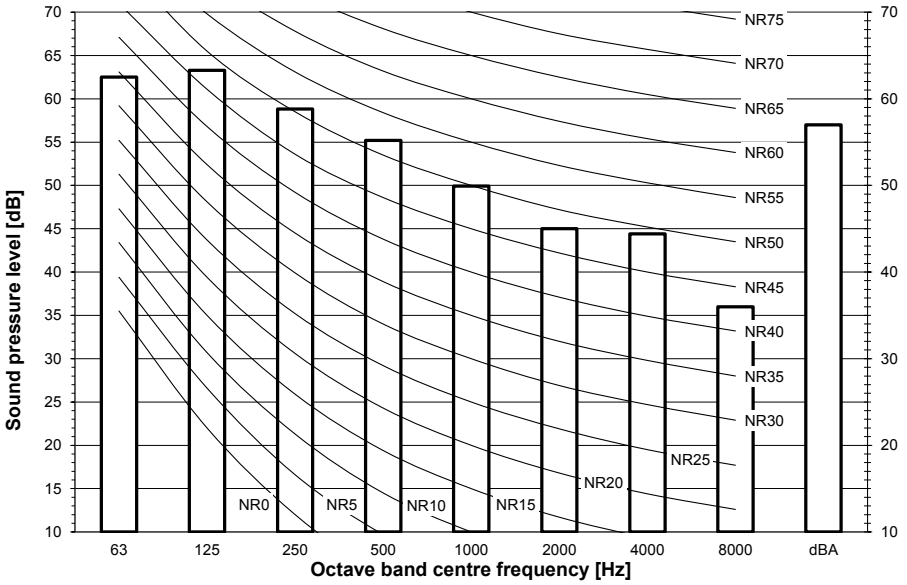

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa

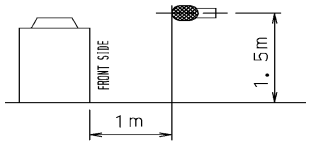

3D119521

REYQ10U
RXYQQ10U
RXYQ10U
RYYQ10U
RYMQ10U

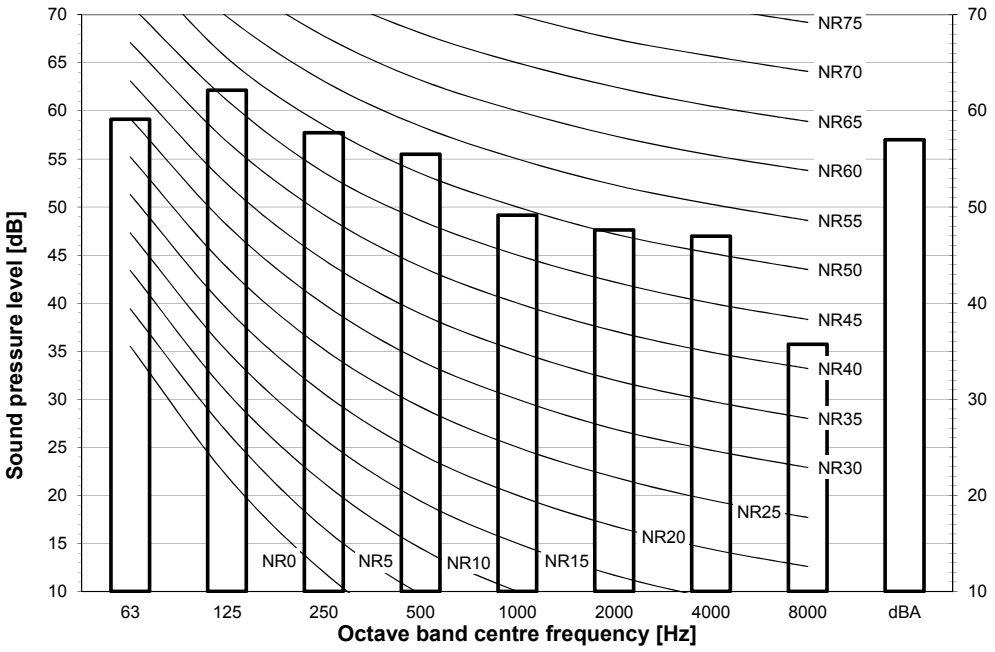

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa

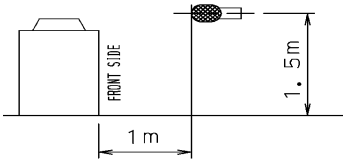

3D119522

11 Sound data

11 - 2 Sound Pressure Spectrum

REYQ12U
RXYQQ12U
RXYQ12U
RYYQ12U
RYMQ12U

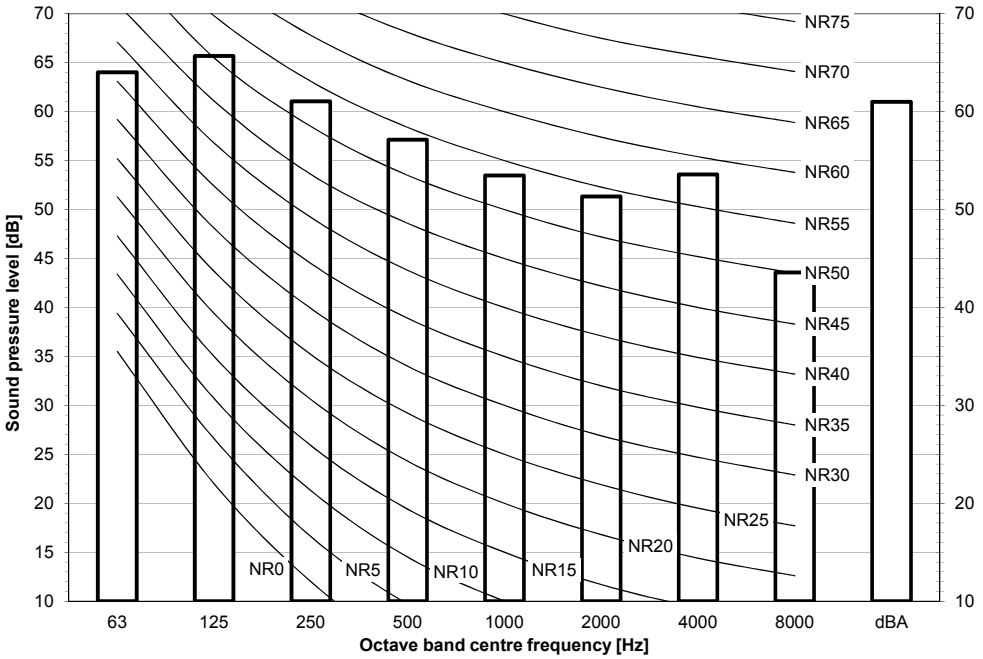

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa

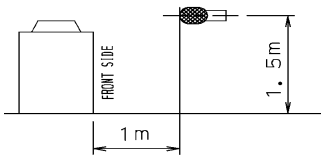

3D119523

REYQ14U
RXYQQ14U
RXYQ14U
RYYQ14U
RYMQ14U

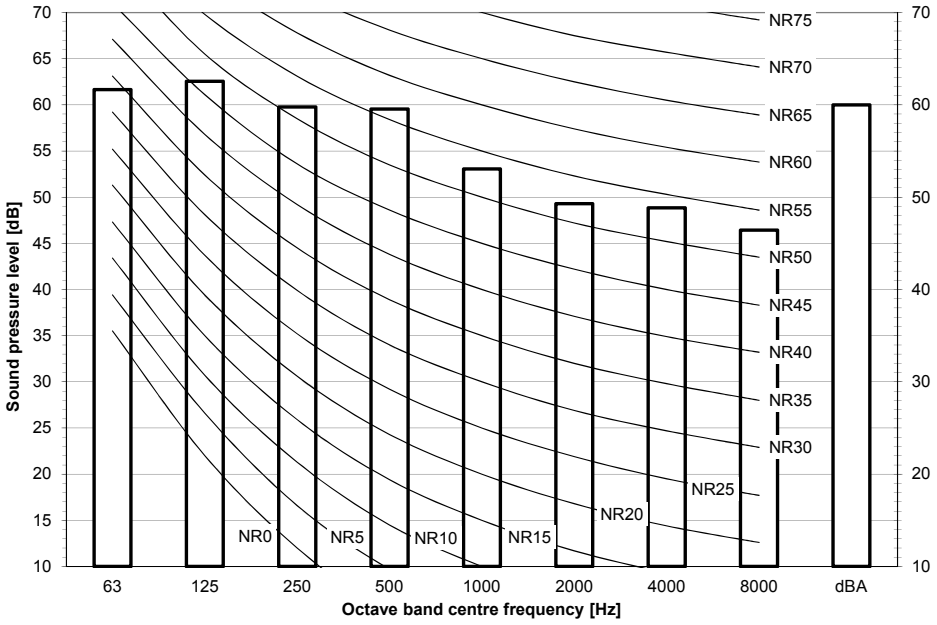

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa

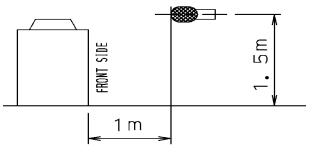

3D119524

11 Sound data

11 - 2 Sound Pressure Spectrum

REYQ16U
RXYQQ16U
RXYQ16U
RYYQ16U
RYMQ16U

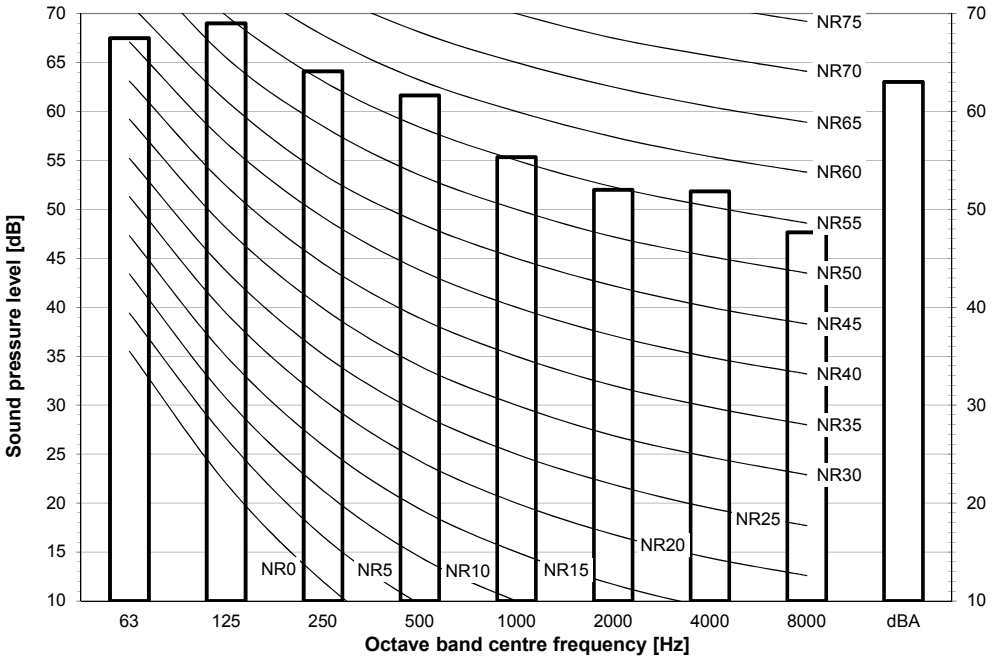

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa

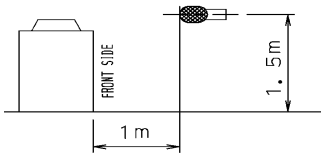

3D119525

REYQ18U
RXYQQ18U
RXYQ18U
RYYQ18U
RYMQ18U

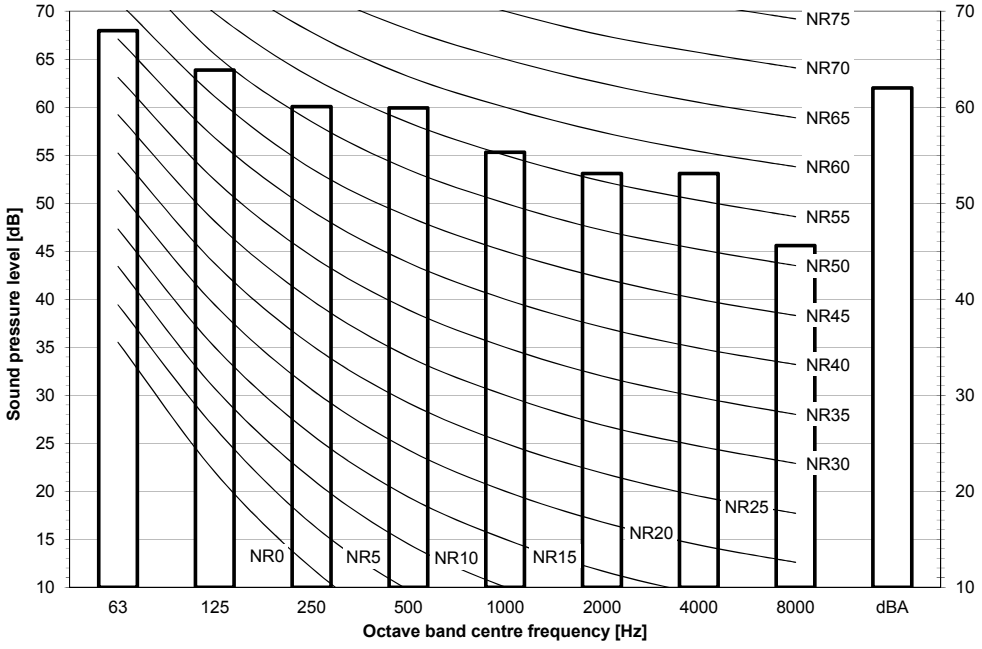

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa

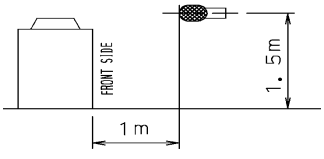

3D119526

11 Sound data

11 - 2 Sound Pressure Spectrum

REYQ20U
RXYQQ20U
RXYQ20U
RYYQ20U
RYMQ20U

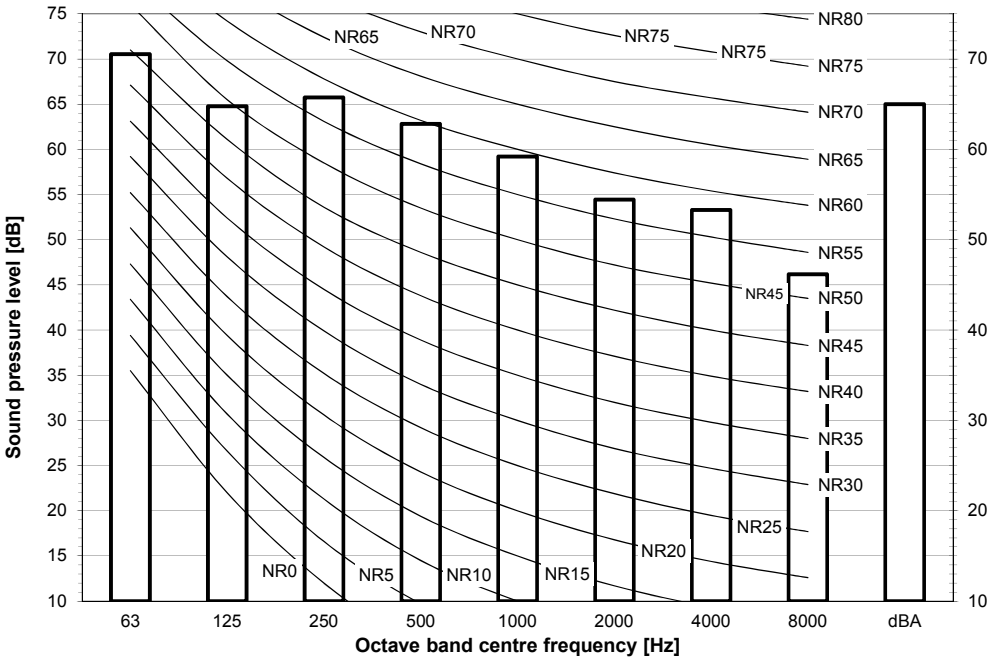

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa

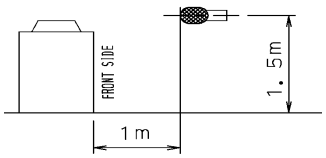

3D119527

11 Sound data

11 - 3 Sound Pressure Spectrum Quiet Mode Level 1

REMQ5U
REYQ8-12U
RXYQQ8-12U
RXYQ8-12U
RXYTQ8UYF
RYY8-12U
RYMQ8-12U

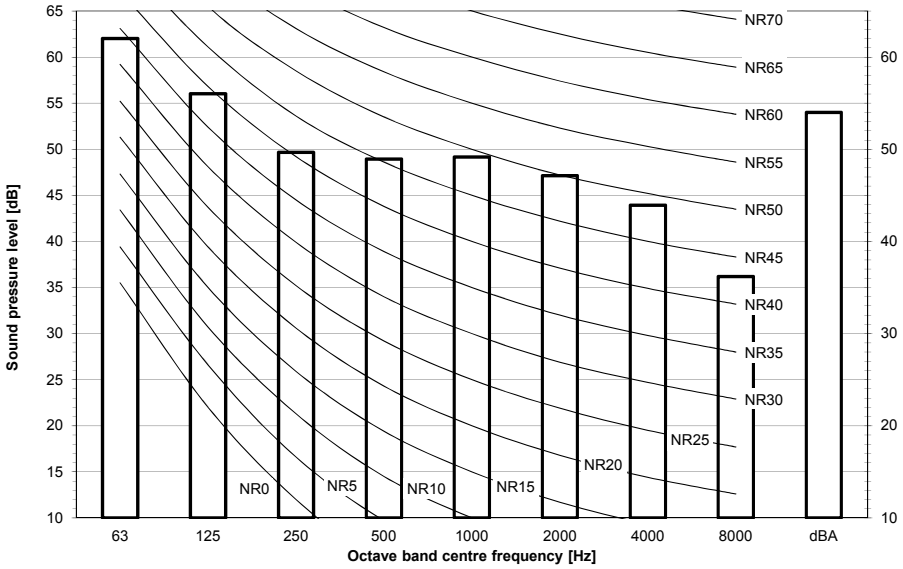

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

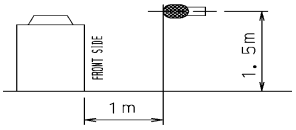

3D119535

REYQ14-16U
RXYQQ14-16U
RXYQ14-16U
RXYTQ14-16UYF
RYYQ14-16U
RYMQ14-16U

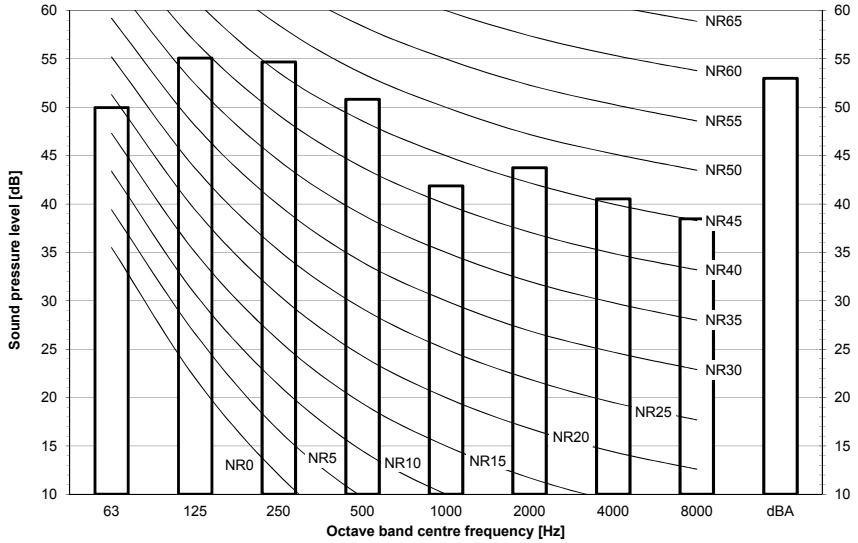

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

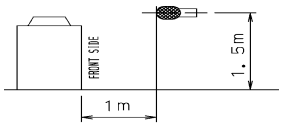

3D119538

11 Sound data

11 - 3 Sound Pressure Spectrum Quiet Mode Level 1

REYQ18-20U
RXYQQ18-20U
RXYQ18-20U
RYYQ18-20U
RYMQ18-20U

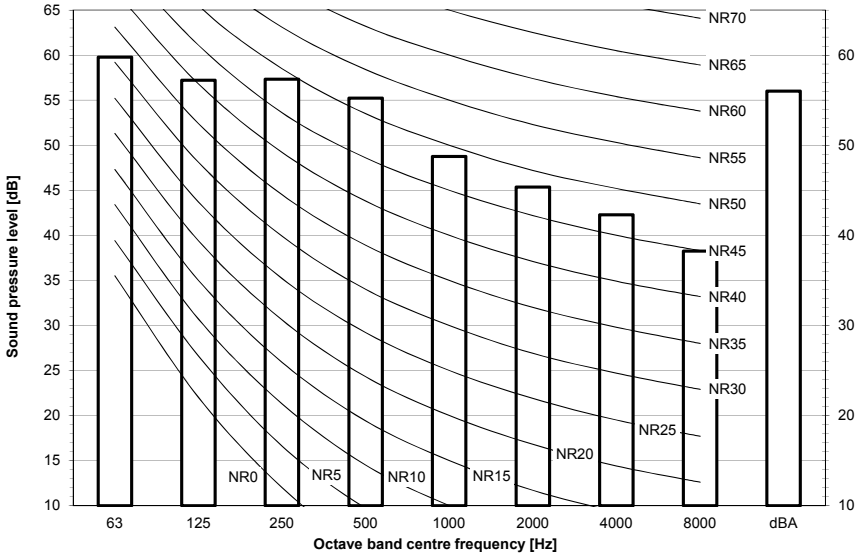

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

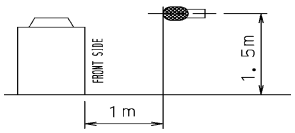

3D119541

11 Sound data

11 - 4 Sound Pressure Spectrum Quiet Mode Level 2

REMQ5U
REYQ8-12U
RXYQQ8-12U
RXYQ8-12U
RXYTQ8UYF
RYYQ8-12U
RYMQ8-12U

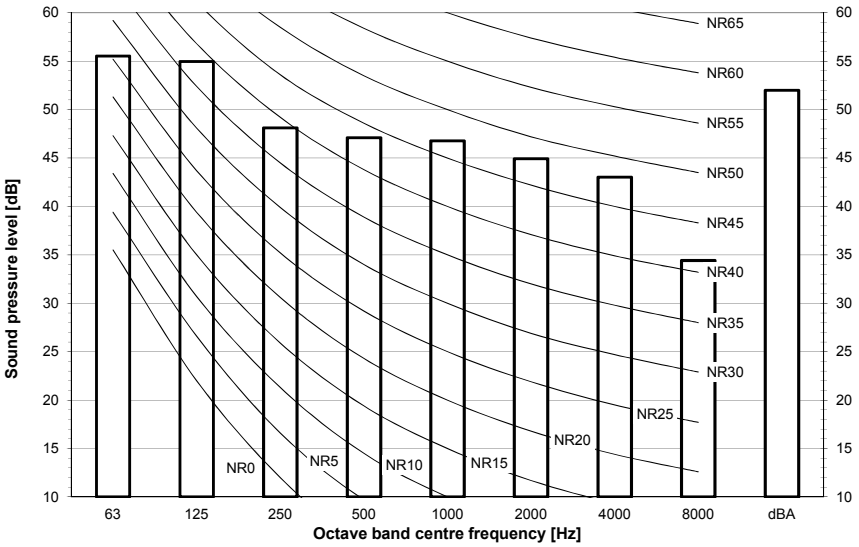

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

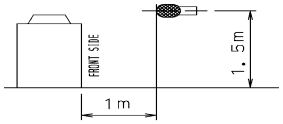

3D119536

REYQ14-16U
RXYQQ14-16U
RXYQ14-16U
RXYTQ14-16UYF
RYYQ14-16U
RYMQ14-16U

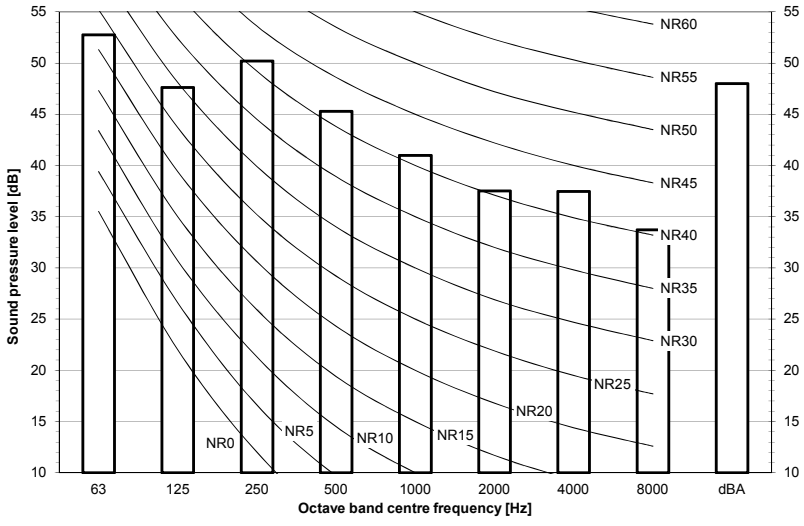

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

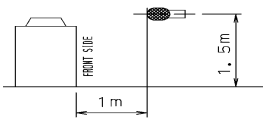

3D119539

11 Sound data

11 - 4 Sound Pressure Spectrum Quiet Mode Level 2

REYQ18-20U
RXYQQ18-20U
RXYQ18-20U
RYYQ18-20U
RYMQ18-20U

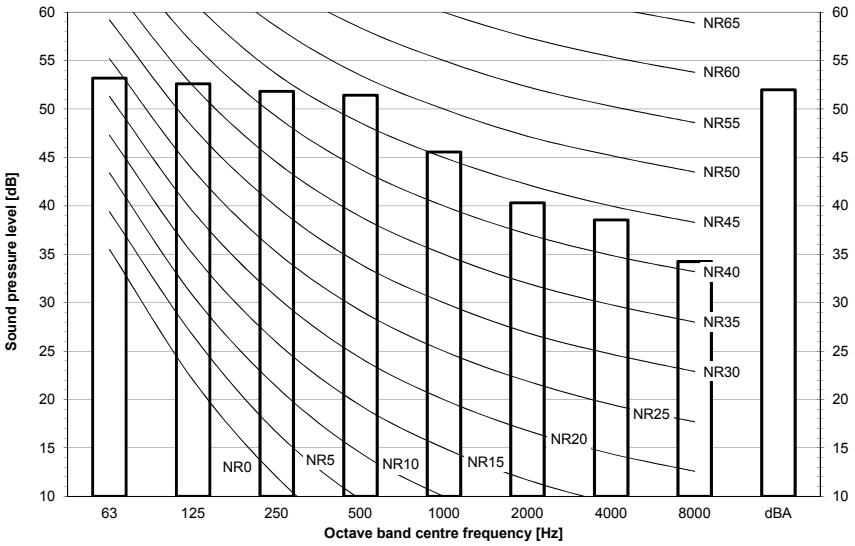

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

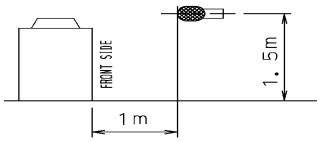

3D119542

11 Sound data

11 - 5 Sound Pressure Spectrum Quiet Mode Level 3

REMQ5U
REYQ8-12U
RXYQQ8-12U
RXYQ8-12U
RXYTQ8UYF
RYYQ8-12U
RYMQ8-12U

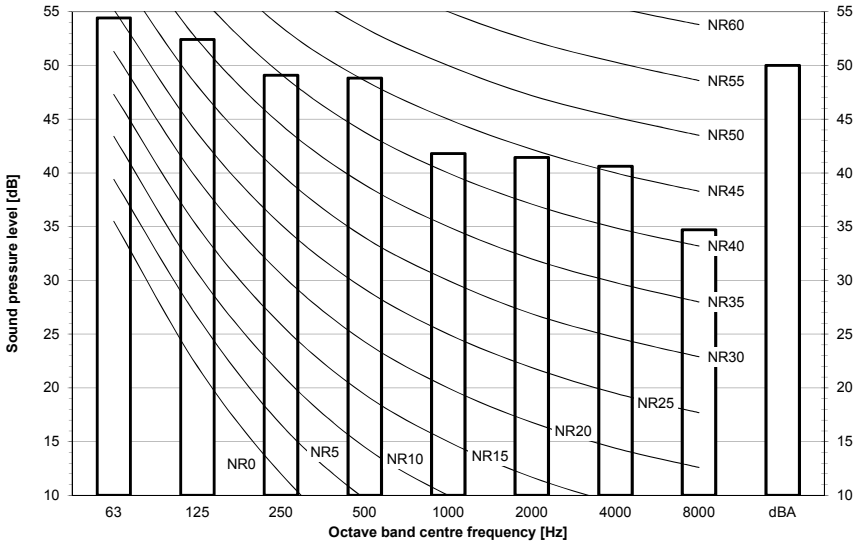

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

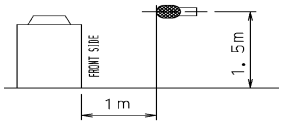

3D119537

REYQ14-16U
RXYQQ14-16U
RXYQ14U-16U
RXYTQ14-16UYF
RYYQ14-16U
RYMQ14-16U

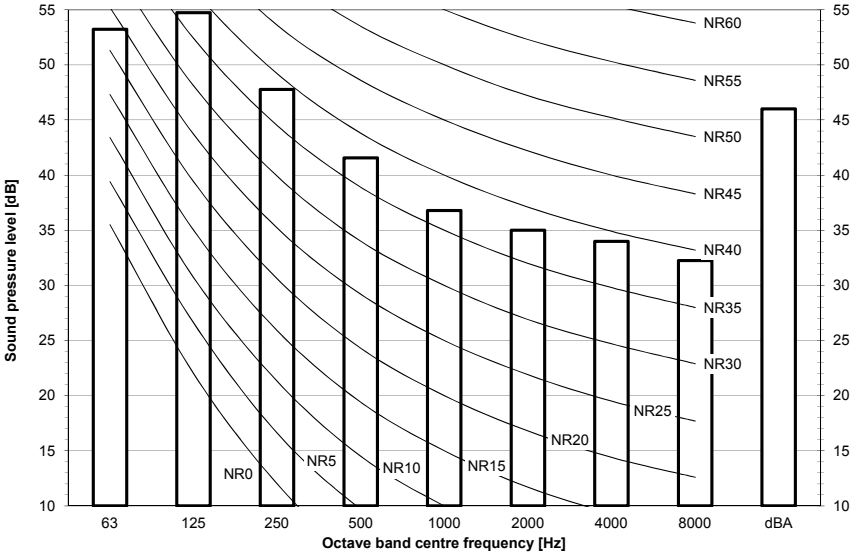

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

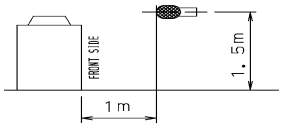

3D119540

11 Sound data

11 - 5 Sound Pressure Spectrum Quiet Mode Level 3

REYQ18-20U
RXYQQ18-20U
RXYQ18-20U
RYYQ18-20U
RYMQ18-20U

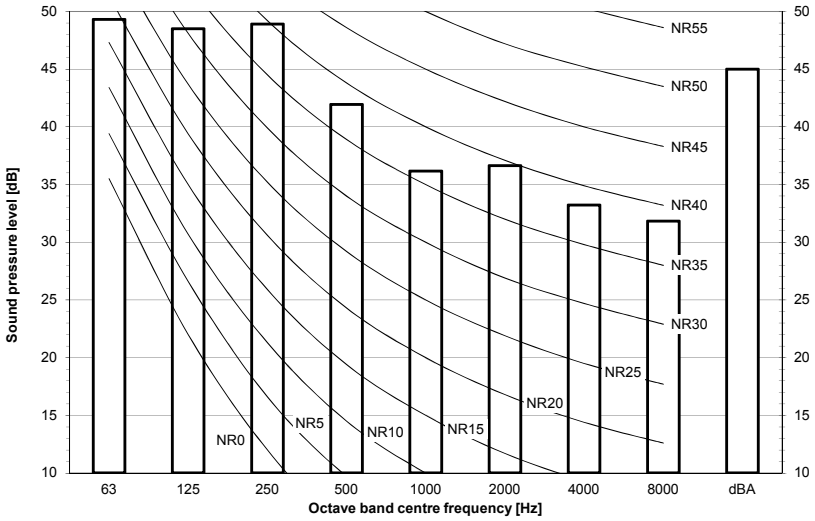

Notes
Data is valid at free field condition.
Data is valid at nominal operation condition.
dBA = A-weighted sound pressure level (A scale according to IEC).
Reference acoustic pressure 0 dB = 20 µPa
Data is valid under the following conditions
Cooling operation
Outdoor Ta: 35°C
Full load (maximum fan rps and maximum compressor rps for the dedicated low noise mode)

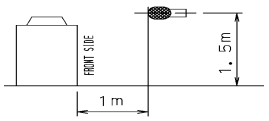

3D119543

12 Installation

12 - 1 Installation Method

RXYQ-U
RYYQ-U
RYMQ-U

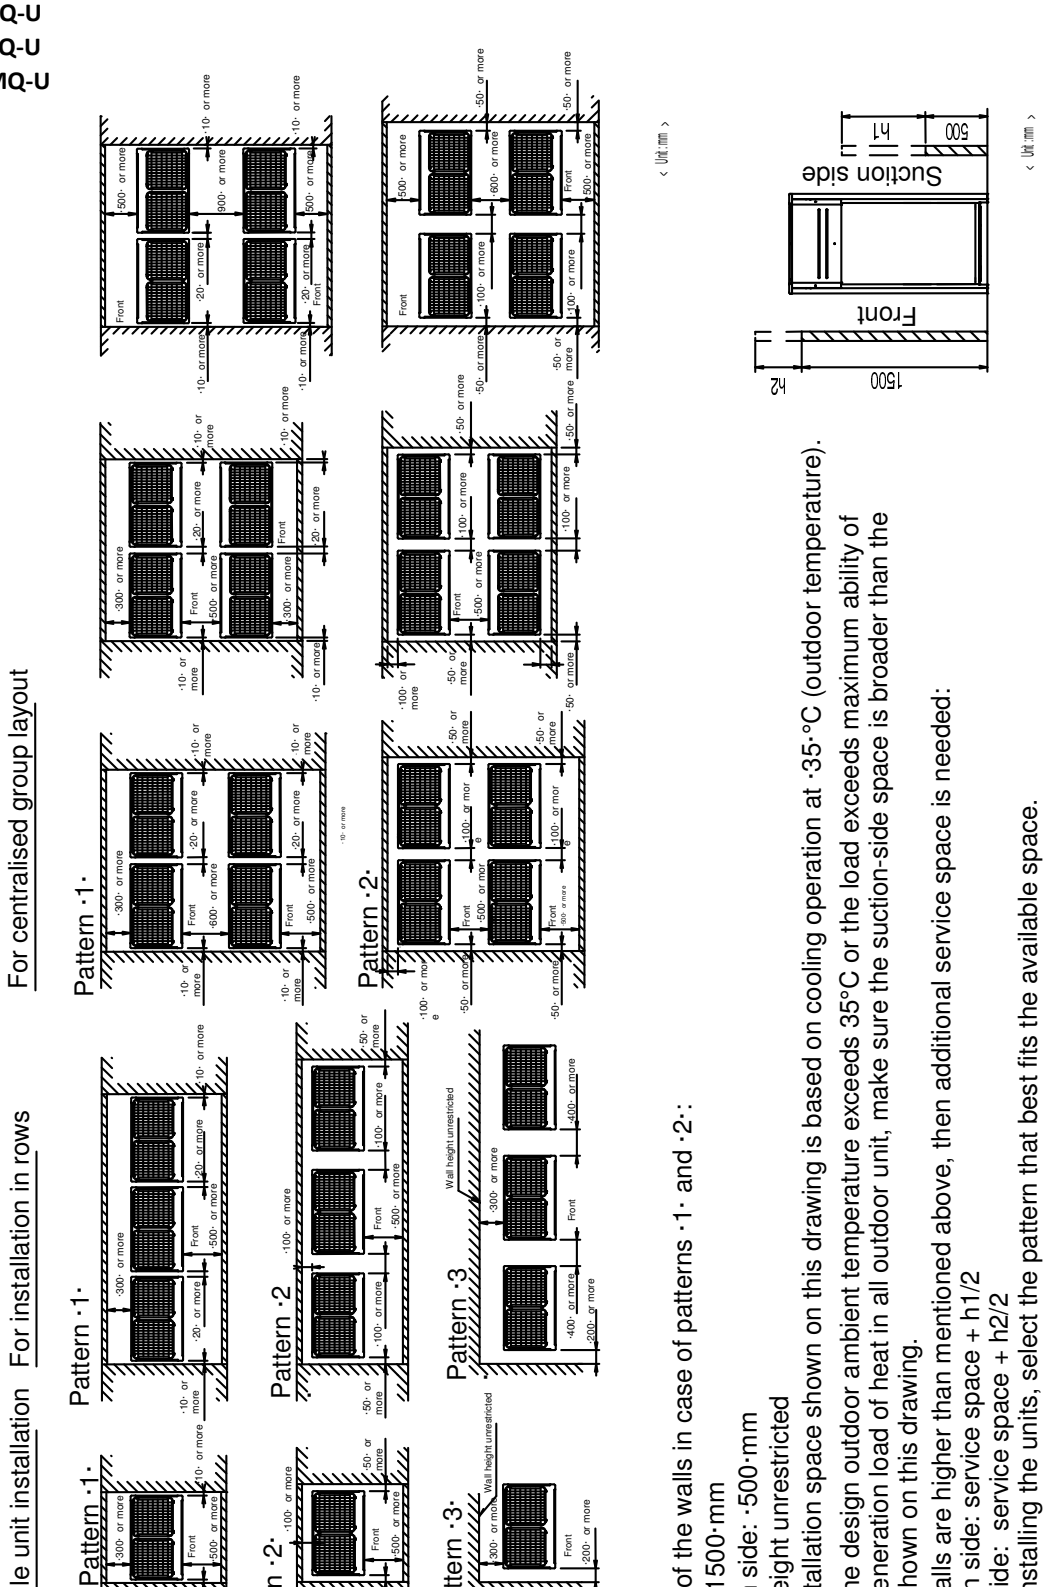

Notes

1. Height of the walls in case of patterns ·1· and ·2·:
   Front: ·1500·mm
   Suction side: ·500·mm
   Side: height unrestricted
   The installation space shown on this drawing is based on cooling operation at ·35·°C (outdoor temperature).
   When the design outdoor ambient temperature exceeds 35°C or the load exceeds maximum ability of much generation load of heat in all outdoor unit, make sure the suction-side space is broader than the space shown on this drawing.
2. If the walls are higher than mentioned above, then additional service space is needed:
   - suction side: service space + h1/2
   - front side: service space + h2/2
3. When installing the units, select the pattern that best fits the available space.
   Always keep in mind to leave sufficient space for a person to pass between unit and wall and for the air to circulate freely.
   Provide sufficient space at the front to connect refrigerant piping (comfortably).
4. If more units are to be installed than are catered for in the above patterns, your layout should take into account of the possibilit y of short circuits.

3D118467A

12 Installation

12 - 2 Fixation and Foundation of Units

RXYQ-U
RYYQ-U
RYMQ-U

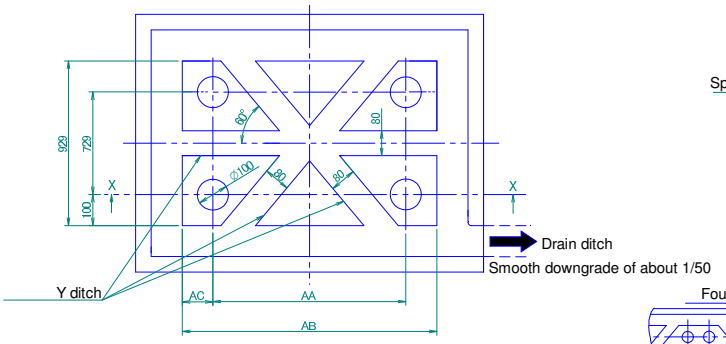

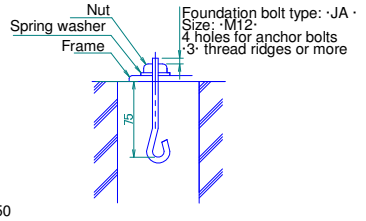

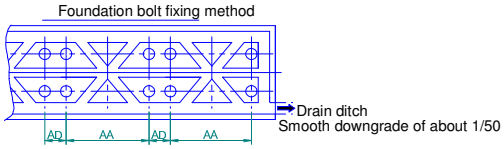

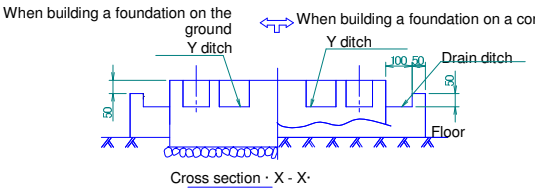

For multi-unit installation

Model	AA	AB	AC	AD
RYYQ8-12U RYMQ8-12U RXYQ8-12U RXYQQ8-12U REMQ5T/REYQ8-12U RXYTQ8U REMA5A/REYA8-12A	766	992	113	185
RYYQ14-20U RYMQ14-20U RXYQ14-20U RXYQQ14-20U REYQ14-20U RXYTQ10-16U REYA14-20A	1076	1076		

Notes

1. Provide a drain ditch around the foundation to drain water from the installation area.
2. The surface has to be finished with mortar. The corner edges have to be chamfered.
3. Build the foundation on a concrete floor or, if not possible, make sure the foundation surface has a rough finish.
4. Use a cement/sand/gravel ratio of 1/2/4 for the concrete, and a diameter of 10 mm for the reinforcement bars (approximately, 300mm intervals).
5. When installing the equipment on a roof, make sure to check the strength of the floor and take adequate water proofing measures.

3D118459A

12 Installation

12 - 3 Refrigerant Pipe Selection

RXYQ-U
RYYQ-Y
RYMQ-U

VRV4
Heat pump
Piping restrictions 1/3

For the reference drawing, see page 2/3.

		Maximum piping length			Maximum height difference			Total piping length
		Longest pipe (A+[B,G,E,J]) Actual / (Equivalent)	After first branch (B,G,E,J) Actual	After first branch (for multi-outdoor) (D) Actual / (Equivalent)	Indoor-to-outdoor [3] (H1) Outdoor above indoor / (indoor above outdoor)	Indoor-to-indoor (H2)	Outdoor-to-outdoor (H3)	
Standard		165/(190)m	40m[1]	10/(13)m	50/(40)m[3]	30m	5m	1000m
VRV DX indoor units only								
Standard multi-combination								
All multi-outdoor-unit combinations except standard multi-outdoor-unit combinations		135/(160)m	40m[1]	10/(13)m	50/(40)m[3]	30m	5m	500m
Hydrobox connection		135/(160)m	40m	10/(13)m	50/(40)m	15m	5m	300-500m[5]
RA connection		100/(120)m	50m[2]	-	50/(40)m	15m	-	250m
AHU connection	Pair	50/(55)m[4]	-	-	40/(40)m	-	-	-
	Multi [6]	165/(190)m	40m	10/13m	40/(40)m	15m	5m	1000m
	Mix [7]	165/(190)m	40m	10/13m	40/(40)m	15m	5m	1000m

Remark

For standard multi-outdoor-unit combinations, see 3D079534.

(1) If all conditions below are met, the limitation can be extended up to 90 m

a. The piping length between all indoor units and the nearest branch kit is ≤ 40m.

b. It is necessary to increase the size of the gas and liquid piping if the pipe length between the first and the farthest indoor unit is >40m.

If the increased pipe size is larger than the pipe size of the main pipe, also increase the size of the main pipe.

c. When the piping size is increased, the piping length has to be counted as double.

The total piping length has to be within limitations.

d. The piping length difference between the nearest indoor unit from the first branch to the outdoor unit and the farthest indoor unit to the outdoor unit is ≤ 40m.

(2) If the piping length between the first branch and the BP box or VRV indoor unit is more than 20m, increase the length of the gas and liquid piping between the first branch and the BP box or VRV indoor unit.

(3) An extension to up to 90 m is possible without an additional option kit. Respect the following conditions:

-> If the outdoor units are positioned higher than the indoor units:

a. Size up the liquid piping

b. A dedicated setting on the outdoor unit is required.

-> If the outdoor units are positioned lower than the indoor units:

a. 40~60m Minimum connection ratio: 80%

60~65m Minimum connection ratio: 90%

65~80m Minimum connection ratio: 100%

80~90m Minimum connection ratio: 110%

b. Size up the liquid piping

A dedicated setting on the outdoor unit is required.

(4) The allowable minimum length is 5 m.

(5) In case of multi-outdoor-unit combinations.

(6) Multiple air handling units (AHU)(EKEXV + EKEQ kits).

(7) Mix of AHU units and VRV DX indoor

(8) If the equivalent piping length between is > 90m, size up the main liquid and gas piping.

3D079540E

12 Installation

12 - 3 Refrigerant Pipe Selection

RXYQ-U
RYYQ-U
RYMQ-U

VRV4
Heat pump
Piping restrictions 2/3

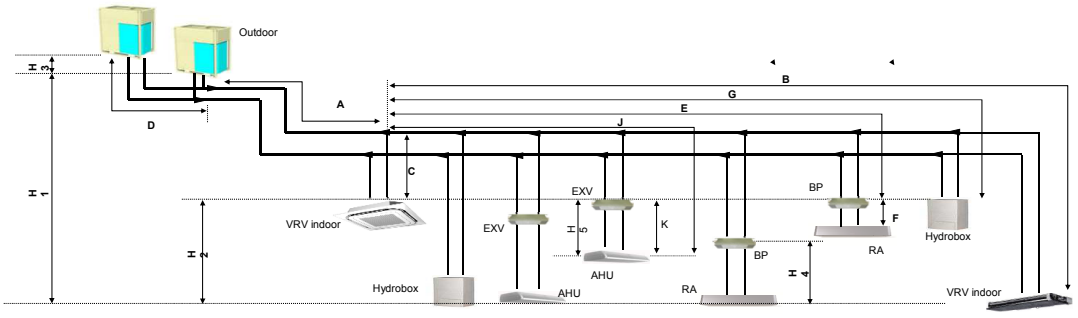

Remark

(1) Schematic indication
Illustrations may differ from the actual appearance of the unit.

(2) This is only to illustrate piping length limitations.
Combination of indoor unit types is not allowed.
Refer to combination table 3D079543 for details about the allowed combinations.

		Allowed piping length		Maximum height difference	
		BP to RA (F)	EXV to AHU (K)	BP to RA (H4)	EXV to AHU (H5)
RA connection		2~15m	-	5m	-
AHU connection	**Pair**	-	≦5m	-	5m
	Multi (1)	-	≦5m	-	5m
	Mix (2)	-	≦5m	-	5m

Remark

(1) Multiple air handling units (AHU)(EKEXV + EKEQ kits).
(2) Mix of AHU units and VRV DX indoor

3D079540E

12 Installation

12 - 3 Refrigerant Pipe Selection

RXYQ-U
RYYQ-U
RYMQ-U

VRV4
Heat pump
Piping restrictions 3/3

System pattern Allowed connection ratio (CR) Other combinations are not allowed.	Total		Allowed capacity			
	Capacity	Indoor unit quantity (VRV, RA, AHU, Hydrobox)	VRV DX indoor unit	RA DX indoor unit	Hydrobox unit	Air handling unit (AHU)
VRV DX indoor units only	50~130%	Max.64	50~130%	-	-	-
VRV DX indoor unit + RA DX	80~130%	Max.32(1)	0~130%	0~130%	-	-
RA DX indoor unit	80~130%	Max.32(1)	-	80~130%	-	-
VRV DX indoor unit + LT hydrobox	50~130%	Max.32	50~130%	-	0~80%	-
VRV DX indoor unit + AHU	50~110%(3)	Max.64(2)	50~110%	-	-	0~110%
AHU only Pair + multi (4)	90~110%(3)	Max.64(2)	-	-	-	90~110%

Remark

(1) There is no restriction on the number of connectable BP boxes.
(2) For connection with AHU
EKEXV kits are also considered indoor units.
(3) Restrictions regarding the air handling unit capacity
(4) Pair AHU = system with 1 air handling unit connected to one outdoor unit
Multi AHU = system with multiple air handling units connected to one outdoor unit

About ventilation applications

I. FXMQ_MF units are considered air handling units, following air handling unit limitations.
Maximum connection ratio when combined with VRV DX indoor units: <30%.
Maximum connection ratio when only air handling units are connected: <100%.
For information on the operation range, refer to the documentation of the FXMQ_MF unit.

II. Biddle air curtains are considered air handling units, following air handling unit limitations:
For information on the operation range, refer to the documentation of the Biddle unit.

III. [EKEXV + EKEQ] units combined with an air handling unit are considered air handling units, following air handling unit limitations.
For information on the operation range, refer to the documentation of the EKEXV-EKEQ unit.

IV. VKM units are considered to be regular VRV DX indoor units.
For information on the operation range, refer to the documentation of the VKM unit.

V. Because there is no refrigerant connection with the outdoor unit (only communication F1/F2), VAM units do not have connection limitations.
However, since there is communication via F1/F2, count them as regular indoor unit when calculating the maximum allowed number of connectable indoor units.

3D079540E

13 Operation range

13 - 1 Operation Range

RXYQQ-U
RXYQ-U
RYYQ-U
RYMQ-U

Cooling

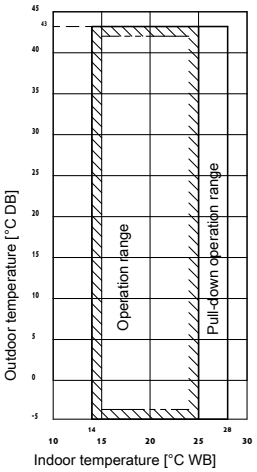

Heating

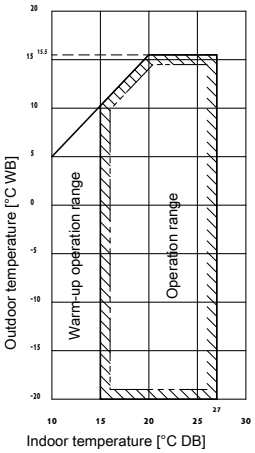

Notes

1. These figures assume the following operation conditions

Indoor and outdoor units
Equivalent piping length: 5m
Level difference: 0m

2. Depending on operation and installation conditions, the indoor unit can change over to freeze-up operation (indoor de-icing).

3. To reduce the freeze-up operation (indoor de-icing) frequency, it is recommended to install the outdoor unit in a location not exposed to wind.

4. Operation range is valid in case direct expansion indoor units are used.

3D118465

14 Appropriate Indoors

14 - 1 Appropriate Indoors

RXYQ-U
RYYQ-U
RYMQ-U

Recommended indoor units for ·RXYQ*U* / RYYQ*U* / RYMQ*U*· outdoor units

·· HP	8	10	12	14	16	18	20
	4xFXMQ50	4xFXMQ63	6xFXMQ50	1xFXMQ50 5XFXMQ63	4XFXMQ63 2xFXMQ80	3xFXMQ50 5XFXMQ63	2xFXMQ50 6xFXMQ63

For multi outdoor units ·>16HP·, the recommended amount of indoor units is the sum of the indoor units defined for a single outdoor unit.
For details about the allowed combinations, see the engineering databook.

Appropriate indoor units for ·RXYQ*U* / RYYQ*U* / RYMQ*U*· outdoor units

Covered by ·ENER LOT21·

FXFQ20-25-32-40-50-63-80-100-125
FXZQ15-20-25-32-40-50
FXCQ20-25-32-40-50-63-80-125
FXKQ25-32-40-63
FXDQ15-20-25-32-40-50-63
FXSQ15-20-25-32-40-50-63-80-100-125-140
FXMQ50-63-80-100-125-200-250
FXAQ15-20-25-32-40-50-63
FXHQ32-63-100
FXUQ71-100
FXNQ20-25-32-40-50-63
FXLQ20-25-32-40-50-63

Covered by ·ENER LOT10·

FTXJ25-35-50
FTXA20-25-35-42-50
FLXS25-35-50-60
FVXM25F-35F-50F
FVXG25-35-50
FTXM20R-25R-35R-42R-50R-60R-71R
CVXM20A
FVXM25A-35A-50A

Outside the scope of ·ENER LOT21·

EKEXV50-63-80-100-125-140-200-250-400-500 + EKEQM / EKEQF
HXY080-125
VKM50-80-100
CYVS100-150-200-250
CYVM100-150-200-250
CYVL100-150-200-250
EKVDX32-50-80-100 + VAMJ8

3D118461E

Daikin Europe N.V. Naamloze Vennootschap · Zandvoordestraat 300 · 8400 Oostende · Belgium · www.daikin.eu · BE 0412 120 336 · RPR Oostende (Responsible Editor)

EEDEN22B 09/2022

The present leaflet is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V.. Daikin Europe N.V. has compiled the content of this leaflet to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this leaflet. All content is copyrighted by Daikin Europe N.V.